



Sony Ericsson

# Repair Movies

## - mechanical -



**G705**



## CONTENTS

<b>1</b>	<b>Movies</b>	<b>3</b>
1.1	Disassembly	3
1.2	Reassembly	3
<b>2</b>	<b>Revision History</b>	<b>4</b>

*To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.*

*For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader. To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.*

*If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow.*

*In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.*

*For general information about repair movies, refer to  
1220-1333: Generic Repair Manual - mechanical*



# 1 Movies


## 1.1 Disassembly

- Battery Cover
- Battery
- Rear Cover
- Main PBA
- SIM Flex/Carrier Unit
- Co-branding
- Screw Sheets
- Front Cover
- Navigation Key Unit
- Display



## 1.2 Reassembly

- Display
- Navigation Key Unit
- Front Cover
- Screw Sheets
- Co-branding
- SIM Flex/Carrier Unit
- Main PBA
- Rear Cover
- Battery
- Battery Cover

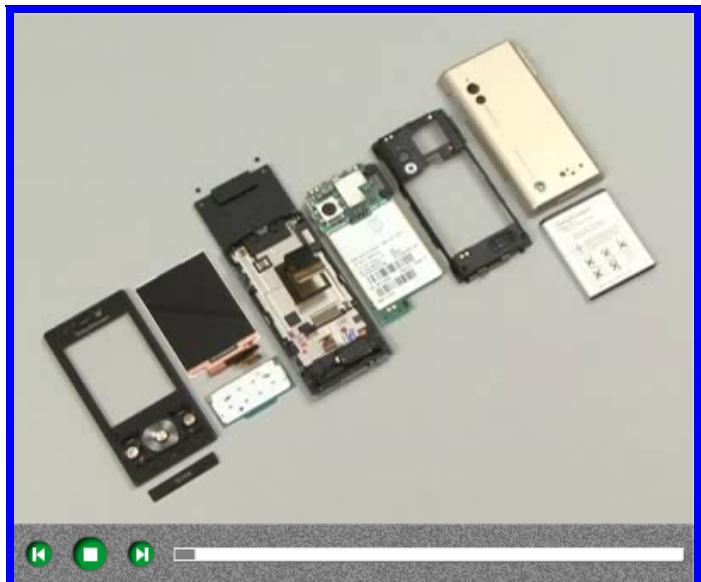



## 2 Revision History

Rev.	Date	Changes / Comments
1	2008-Nov-06	Initial release