



Part List, Electrical

Applicable for V800/ V802se

Contents

1	Part list Main Board	2
2	Revision History	3



1 Part list Main Board

Contains only components that are possible to replace on the main board.

P=Primary side, S=Secondary side.

Pos. number refers to the components position number on the board.

Some components are noted as MSL X. These components are moisture-sensitive and are rated at various levels (MSL):

Level 1: Unlimited floor life; does not require dry pack or re-baking.

Level 2: 1 year floor life; $</=30$ C; 60%rh; shipped in dry pack; must be re-baked after being opened if floor life is exceeded.

Level 2A: 4 week floor life; $</=30$ C; 60%rh; shipped in dry pack; must be re-baked after being opened if floor life is exceeded.

Level 3: 168 hours floor life; $</=30$ C; 60%rh; shipped in dry pack; must be re-baked after being opened if floor life is exceeded.

Level 4: 72 hours floor life; $</=30$ C; 60%rh; shipped in dry pack; must be re-baked after being opened if floor life is exceeded.

Parts available to order will be found in the Web Shop.

Component placing will be found in document 1078/FEA 209 544/88.

NOTE! RF Calibration with SERP can only be done by authorized repair centers.
Fence modification according to Working Instruction Electrical.

Side	Pos.	Description	Part Number	Comments
S	W1001	External Antenna Connector	RPT 799 42	
P	X2621 X2622	30 PIN BTB Female Connector	RNV 799 39	
P	X2620	50 PIN BTB Female Connector	RNV 799 41	
S	X2200	Battery Connector	RNV 799 43	
P	X2312	USB Connector	RNV 799 52	
S	X2302	MS Duo and SIM reader	RNK 860 121	
P	N2600	Hall element	RYN 901 912/1	MSL1
P	H2000	IrDa Module	RYT 909 6002/1	
P	W1002	Coax Connector	RPT 799 38	



2 Revision History

Rev.	Date	Changes / Comments
A	2004-11-30	First Release
B	2004-12-13	Due to system problem
C	2004-12-15	Due to system problem