

# Part List, Mechanical

Applicable for K810 and K818









## CONTENTS

<b>1</b>	<b>General .....</b>	<b>2</b>
<b>2</b>	<b>Parts Common to K810 and K818 .....</b>	<b>3</b>
<b>3</b>	<b>Parts Specific to K810.....</b>	<b>14</b>
<b>4</b>	<b>Parts Specific to K818.....</b>	<b>18</b>
<b>5</b>	<b>Revision History .....</b>	<b>19</b>


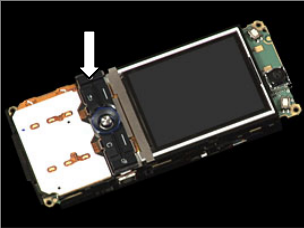 
# 1 General

This Part List includes all parts possible to replace by using the Mechanical Repair Process.  
Parts available to order will be found in the Web Shop.

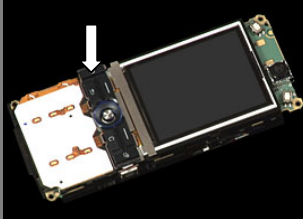 

## 2 Parts Common to K810 and K818

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Battery lid assembly	Battery lid assembly/Noble Blue Battery lid assembly/Golden Ivory Battery lid assembly/Pulse Red	SXK1097675 SXK1097675/2 SXK1097675/3	
		MS Cover	MS Cover/Noble Blue MS Cover/Golden Ivory MS Cover/Pulse Red	SXA1097683 SXA1097683/2 SXA1097683/3	
		Antenna cover assembly	Antenna cover assembly/Noble Blue Antenna cover assembly/Golden Ivory Antenna cover assembly/Golden Ivory	SXK1097674 SXK1097674/2 SXK1097674/3	
		Screw 1,7 x 6mm	Screw 1,7 x 6mm	SXA1097716	



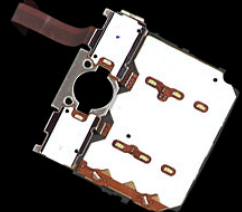 
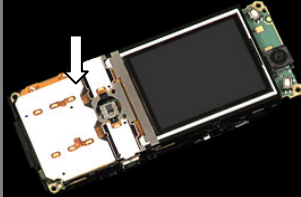 

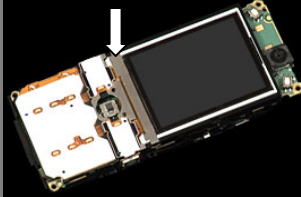 


## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Function keyboard Assy	Function keyboard Assy Nobel Blue Generic	SXK1097706/1	
			Function keyboard Assy Nobel Blue Orange	SXK1097706/2	
			Function keyboard Assy Nobel Blue Vodafone	SXK1097706/3	
			Function keyboard Assy Nobel Blue T-Mobile	SXK1097706/4	
			Function keyboard Assy Nobel Blue Hutch	SXK1097706/8	
			Function keyboard Assy Golden Ivory Generic	SXK1097706/21	
			Function keyboard Assy Golden Ivory Orange	SXK1097706/22	
			Function keyboard Assy Golden Ivory Vodafone	SXK1097706/23	
			Function keyboard Assy Golden Ivory T-mobile	SXK1097706/24	
			Function keyboard Assy Golden Ivory Hutch	SXK1097706/28	

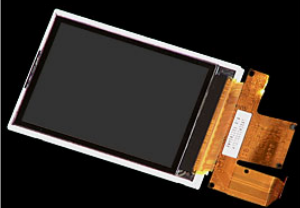 
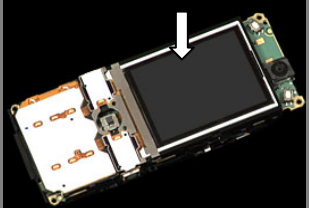 

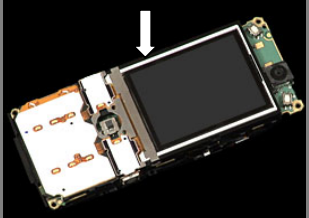 
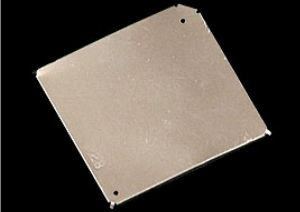 
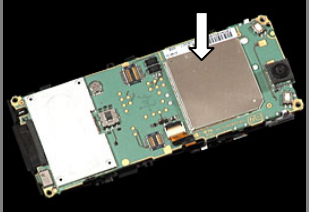 

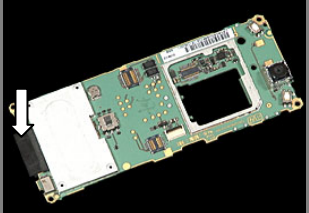 
## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
					
		Function keyboard Assy	Function keyboard Assy Pulse Red Generic Function keyboard Assy Pulse Red Orange Function keyboard Assy Pulse Red Vodafone Function keyboard Assy Pulse Red T-mobile Function keyboard Assy Pulse Red TIM Function keyboard Assy Pulse Red Hutch Function keyboard Assy Pulse Red CMCC	SXX1097706/41 SXX1097706/42 SXX1097706/43 SXX1097706/44 SXX1097706/45 SXX1097706/48 SXX1097706/53	

 
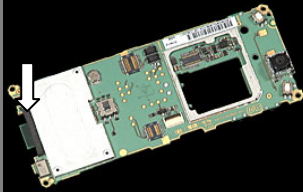 

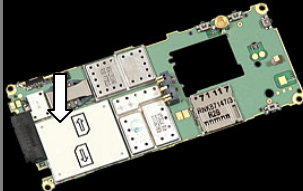 


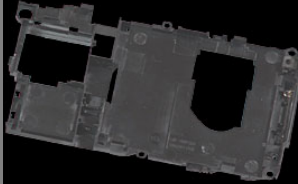 

## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Antenna/ Speakerbox assembly	Antenna/ Speakerbox assembly	SXK1097667	
		Keyfoil Complete	Keyfoil Complete	SXK1097719	
		ESD protection sheet LCD	ESD protection sheet LCD	SXA1097659	
		Screw 1,7 x 7mm	Screw 1,7 x 7mm	SXA1097717	

## Parts *continued*


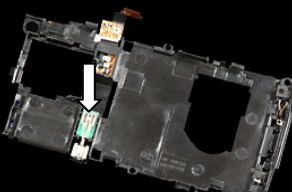 






Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		LCD	LCD	RNH942286	
		LCD holder assembly	LCD holder assembly	SXK1097669	
		Shield can lid, camera assy	Shield can lid, camera assy	SXK1097268	
		System connector	System connector	RNV79936	

## Parts *continued*




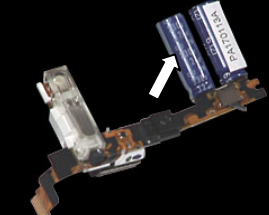 
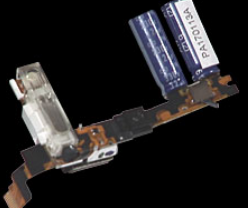 


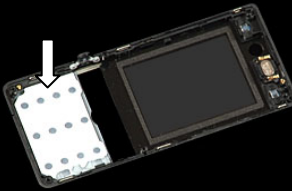 
Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Dust gasket, system connector	Dust gasket, system connector	SXA1096165	
		Insulation label	Insulation label	SXA1096161	
		Camera	Camera	KNC20125	
		Frame Assembly	Frame Assembly	SXK1097666	




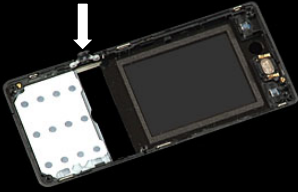 

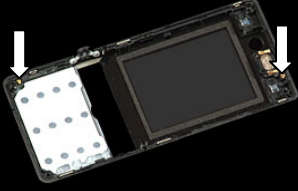 

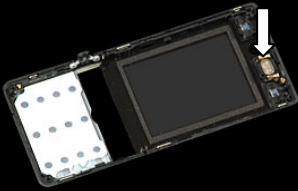 


## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Vibrator	Vibrator	BKE90324	
		Microphone gasket	Microphone gasket	SXA1096298	
		Screw M1,4x5	Screw M1,4x5	SXA1096306	
		Liquid indicator	Liquid indicator	SXA1094884	






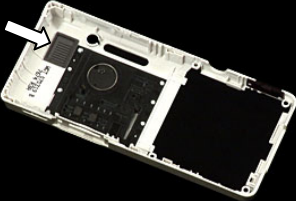 

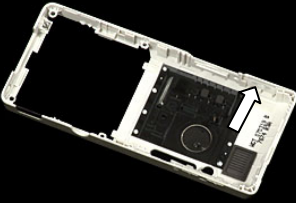 
## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Plug (external antenna)	Plug (external antenna)/Noble Blue Plug (external antenna)/Golden Ivory Plug (external antenna)/Pulse Red	SXA1097681 SXA1097681/2 SXA1097681/3	
		Tape (holder capacitor)	Tape (holder capacitor)	SXA1097100	
		Xenon flash	Xenon flash	RKZ433999	
		Numeric keyboard	Numeric keyboard/Noble Blue Numeric keyboard/Golden Ivory Numeric keyboard/Pulse Red	SXA1097690/1 SXA1097690/2 SXA1097690/3	


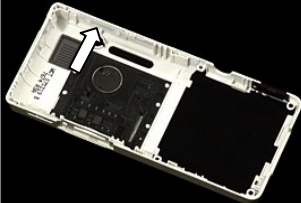 



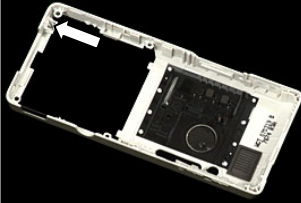 

## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Camera key	Camera key Camera key/Pulse Red	SXA1097663 SXA1097663/3	
		Ground Connector	Ground Connector	SXA1097718	
		Ear Speaker	Ear Speaker	RLE90824/2	
		Front Assy	Front Assy Nobel Blue Front Assy Golden Ivory Front Assy Pulse Red	SXK1097673 SXK1097673/2 SXK1097673/3	This part is Silver This part is Black This part is Black



## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Earspeaker gasket	Earspeaker gasket	SXA1097673	
		A/B key	A/B key Nobel Blue A/B key Golden Ivory A/B key Pulse Red	SXA1097661 SXA1097661/2 SXA1097661/3	
		Loudspeaker gasket	Loudspeaker gasket	SXA1097771	
		Music Player Key	Music Player Key/Noble Blue Music Player Key/Golden Ivory Music Player Key/Pulse Red	SXA1097665 SXA1097665/2 SXA1097665/3	



## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Volume key	Volume key/Noble Blue Volume key/Golden Ivory Volume key/Pulse Red	SXA1097662 SXA1097662/2 SXA1097662/3	
		On/Off Key	On/Off Key/Noble Blue On/Off Key/Golden ivory On/Off Key/Pulse Red	SXA1097664 SXA1097664/2 SXA1097664/3	
		Handstrap plate	Handstrap plate	SXA1097652	
		128Mb Memory Stick micro (M2)	128Mb Memory Stick micro (M2)	KDR 109171/128	



### 3 Parts Specific to K810

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Front complete	K810i/Front complete/Z/Noble Blue/Latin/Cybershot	SXK1097852/1	
			K810i/Front complete/Z/Noble Blue/Arabic/Cybershot	SXK1097852/2	
			K810i/Front complete/Z/Noble Blue/Stroke/Cybershot	SXK1097852/3	
			K810i/Front complete/Z/Noble Blue/Thai/Cybershot	SXK1097852/4	
			K810i/Front complete/Z/Noble Blue/Bopomofo/Cybershot	SXK1097852/5	
			K810i/Front complete/Z/Noble Blue/Cyrillic/Cybershot	SXK1097852/6	
			K810i/Front complete/Z/Noble Blue/Latin/Orange	SXK1097852/7	
			K810i/Front complete/Z/Noble Blue/Latin/T-Mobile	SXK1097852/8	
			K810i/Front complete/Z/Noble Blue/Latin/TIM	SXK1097852/9	
			K810i/Front complete/Z/Noble Blue/Latin/Telefonica	SXK1097852/10	
				SXK1097852/11	
				SXK1097852/12	

## Parts *continued*









Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Front complete	K810i/Front complete/Z/Golden Ivory/Latin/Cybershot	SXK 109 7852/22	
			K810i/Front complete/Z/Golden Ivory/Arabic/Cybershot	SXK 109 7852/23	
			K810i/Front complete/Z/Golden Ivory/Stroke/Cybershot	SXK 109 7852/24	
			K810i/Front complete/Z/Golden Ivory/Thai/Cybershot	SXK 109 7852/25	
			K810i/Front complete/Z/Golden Ivory/Bopomofo/Cybershot	SXK 109 7852/26	
			K810i/Front complete/Z/Golden Ivory/Cyrillic/Cybershot	SXK 109 7852/28	

## Parts *continued*





Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Front complete	K810i/Front complete/Z/Pulse Red/Latin/Cybershot	SXK 109 7852/43	
			K810i/Front complete/Z/ Pulse Red/Arabic/Cybershot	SXK 109 7852/44	
			K810i/Front complete/Z/Pulse Red/Stroke/Cybershot	SXK 109 7852/45	
			K810i/Front complete/Z/ Pulse Red /Thai/Cybershot	SXK 109 7852/46	
			K810i/Front complete/Z/ Pulse Red /Bopomofo/Cybershot	SXK 109 7852/47	
			K810i/Front complete/Z/ Pulse Red /Hebrew/Cybershot	SXK 109 7852/48	



## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		VGA camera	VGA camera	KNC20116	
		VGA Socket Gasket	VGA Socket Gasket	SXA1097865	
		VGA camera window	VGA camera window	SXA1097724	
		KRH Label	KRH Label	SVF9301478	

## 4 Parts Specific to K818

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Front Complete	K818c/Front complete/Z/Noble Blue/Stroke/Cybershot	SXK 109 7951/1	
			K818c/Front complete/Z/Golden Ivory/Stroke/Cybershot	SXK 109 7951/11	
		KRH Label	KRH Label	SVF9301433	

## 5 Revision History

Rev.	Date	Changes / Comments
A	2007-04-15	Initial release
B	2007-05-21	Inserted Tape (holder capacitor)
C	2007-05-24	Removed parts
D	2007-06-19	Added support for K818
E	2007-07-02	Added Memory Stick 128Mb
F	2007-09-20	Added Pulse Red
7	2008-01-11	Added comments to Front assembly
8	2008-02-18	Removed SXX1097852/49