



Sony Ericsson

# Repair Movies

- mechanical -



*Xperia™ arc S*  
*LT18i, LT18a*

## CONTENTS

<b>1</b>	<b>Movies .....</b>	<b>3</b>
1.1	Disassembly .....	3
1.2	Reassembly .....	3
<b>2</b>	<b>Revision History .....</b>	<b>4</b>

***To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.***

***For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader.  
To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.***

***If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow.  
In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.***

***For general information about repair movies, refer to  
1220-1333: Generic Repair Manual - mechanical***

# 1 Movies


## 1.1 Disassembly

- 1. Cover Battery
- 2. Battery
- 3. Cover Rear
- 4. Camera
- 5. RCV Flex PBA Assy
- 6. Key Flex PBA
- 7. Cable RF
- 8. Main PBA



## 1.2 Reassembly

- 1. Main PBA
- 2. Cable RF
- 3. Key Flex PBA
- 4. RCV Flex PBA Assy
- 5. Camera
- 6. Cover Rear
- 7. Battery
- 8. Cover Battery

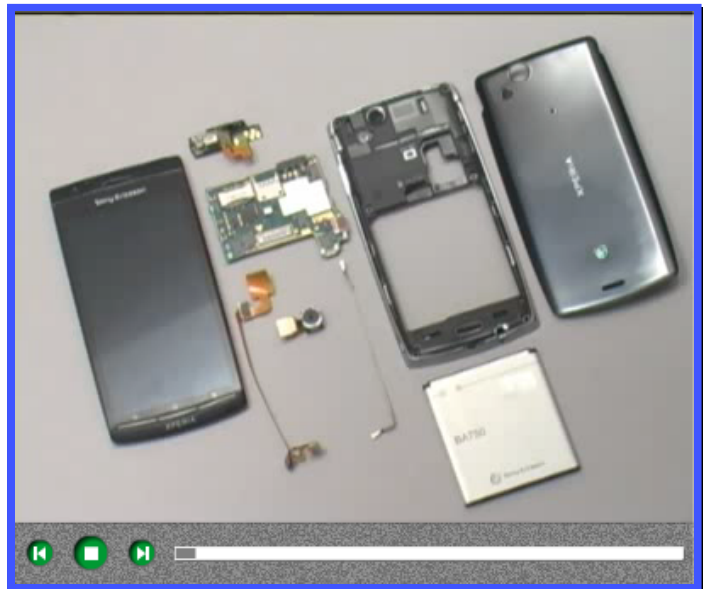



## 2 Revision History

Rev.	Date	Changes / Comments
1	2011-06-30	Initial release
2	2011-09-26	Page1: cover updates.