

Part List - mechanical -



Xperia TX
LT29i

CONTENTS

1 Part List 3


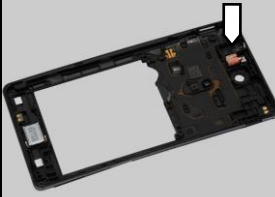 


 

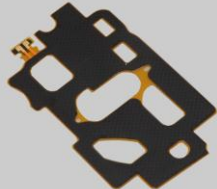 
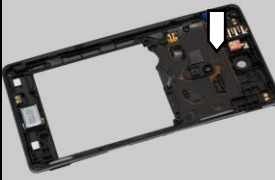 

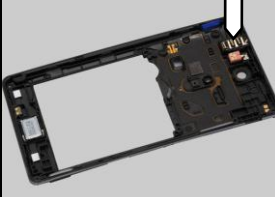 
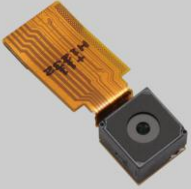 



2 Revision History 8





 
 
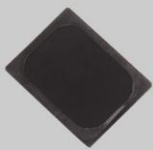 



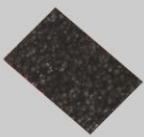 
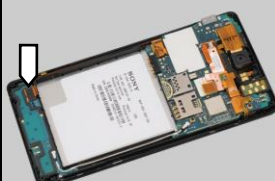 

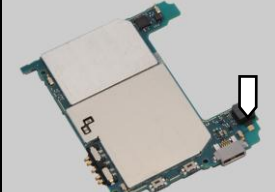 
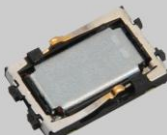 

1 Part List







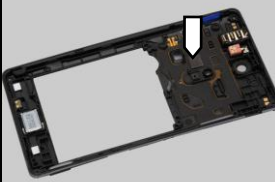 









The following parts are available for order in 'E-star'.

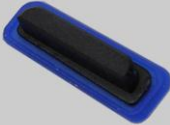








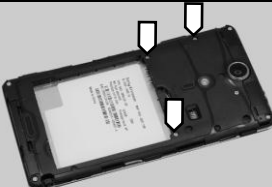 



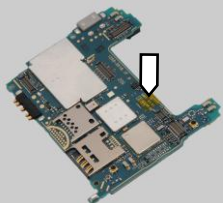 


The 'E-star' name of a part may often be complex and even confusing, so the name of certain parts mentioned in the Working Instructions, Repair Movies and Troubleshooting Guide are often referred to by a simple descriptive name for better understanding.




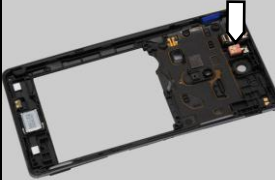 


Both names (designations) will in that case be included in this Part List, where the name being used in the documents mentioned above is underlined, e.g. Battery Cover.

Designation	Part No.	Part	Location
Adhesive Audio Jack	1257-4105		
Adhesive Earspeaker	1257-6217		
Adhesive Speaker	1257-4292		
Antenna NFC	1257-0864		
Audio Jack	1257-5965		
<u>Camera</u> Camera 13M AF	1256-0647		
Cap RF	1263-4763		

Designation	Part No.	Part	Location
<u>Cover Battery Assy</u> Cover Battery Assy Black Cover Battery Assy Pink Cover Battery Assy White	1262-2001 1257-7349 1262-2003		
<u>Cover Front Assy</u> Cover Front Assy Black Cover Front Assy Pink Cover Front Assy White	1264-5358 1264-5360 1264-5359		
Cushion	1263-3122		
Cushion Audio Jack	1257-6447		
Cushion Audio Jack 2	1262-1946		
Cushion Key Flex	1264-5252		
Cushion PBA Main	1263-4759		
Ear Speaker	1226-7255		

Designation	Part No.	Part	Location
<u>Frame Rear Assy</u> Frame Rear Assy Pink Frame Rear Assy White Frame Rear Assy Black	1257-7327 1257-7325 1257-4108		
<u>Key Camera</u> Key Camera Black Key Camera Pink Key Camera White	1257-4370 1257-7345 1257-7344		
Key Flex FPC	1255-3630		
<u>Key On/Off</u> Key On/Off Black Key On/Off Pink Key On/Off White	1257-4357 1257-7337 1257-7334		
<u>Key Volume</u> Key Volume Black Key Volume Pink Key Volume White	1257-4366 1257-7341 1257-7340		
Label Core Unit	1257-6453		
<u>Label NFC</u> Label NFC Black Label NFC White	1263-1518 1264-6322		
<u>Loudspeaker</u> Loudspeaker 11x15	1001-0324		

Designation	Part No.	Part	Location
Main Antenna Assy	1257-3743		
RCV Flex FPC	1255-3601		
RF Cable	1257-7339		
Screw 1.4X3.5	1262-1965		
Screw M1.4X3.0	1262-3150		
Screw Other Len:4.0 Diam:1.4	1227-2716		
Sheet PBA Main	1261-4181		
Sub Antenna Assy	1257-3759		

Designation	Part No.	Part	Location
Sub Board Assy	1264-5365		
Vibrator	1245-2711		
Water Indicator	1257-4189		

2 Revision History

Rev.	Date	Changes / Comments
1	2012-Aug-31	Initial release