

SONY

make.believe

Test Instructions

- mechanical -



Xperia™ neo L

MT25i

CONTENTS

1	Pre-Test Preparations	4
1.1	Hardware.....	4
1.1.1	Water indicator inspection.....	4
1.2	Software.....	5
1.2.1	Software update.....	5
2	Tests	6
2.1	Service Test Mode.....	6
2.2	Service Tests	7
2.2.1	Keyboard & Switch	7
2.2.2	Touch Screen.....	7
2.2.3	Display.....	7
2.2.4	LED/Illumination	8
2.2.5	Speaker.....	8
2.2.6	Stereo speaker	8
2.2.7	Earphone	9
2.2.8	Microphone	9
2.2.9	Secondary Microphone	9
2.2.10	Vibrator.....	10
2.2.11	Camera	10
2.2.12	Secondary Camera	10
2.2.13	Flash LED	11
2.2.14	Bluetooth.....	11
2.2.15	WLAN.....	12
2.2.16	GPS.....	12
2.2.17	Compass	13
2.2.18	Accelerometer.....	13
2.2.19	Ambient Light Sensor	14
2.2.20	Proximity switch	14
2.2.21	Pressure Sensor	14
2.2.22	Real time clock	15
2.2.23	Total call time.....	15
2.2.24	External Memory.....	15
2.2.25	Security	16
2.2.26	FM Radio	16
2.2.27	Battery test.....	16
2.2.28	Flip slider counter	17
2.2.29	Verify certificates.....	17
2.2.30	IrDA Test.....	17
2.2.31	HDMI Test.....	18
2.2.32	Connector Ground Test	18
2.2.33	Touch pad test	18
2.3	Manual Tests	19
2.3.1	SIM	19
2.3.2	On/Off key test	19
2.3.3	Home key test	19
2.3.4	Charging via USB (Charger or Computer).....	20



make.believe

Test Instructions (mech)

2.4 Network Test..... 21

2.4.1 On-the-air call to mobile (no UMTS network available)..... 21

2.4.2 On-the-air call to mobile (UMTS network available) 21

3 Revision History 22

For general information about test procedures, refer to
1220-1333: Generic Repair Manual - mechanical

1 Pre-Test Preparations

1.1 Hardware

1.1.1 Water indicator inspection

Before starting any tests the liquid intrusion indicator has to be checked.

The water indicator is located as shown in this picture after the Battery Cover is removed.

If affected (red color) - handle the phone according to the local directives.

If not affected by liquid, proceed to the 'Pre-Test Preparation' below.



Pre-Test Preparations

1.2 Software

1.2.1 Software update

1.2.1.1 Software version verification

Check the software version of the phone for fault verification. The latest improvements are found on the support pages under the support

news <http://www.sonyericsson.com/cws/marketingurlportal?pageid=key.SupportZone.Overview>

- Start up the phone
 - Note: Make sure the phone is in call setup.
- Press the following keypad combination: *##7378423##*
- Select 'Service info'
- Select 'Software info'
- Check the software file revisions and, if needed, update as described below:

For more information, refer to 1220-1333: Generic Repair Manual - mechanical

1.2.1.2 Software version update

Mandatory first repair action!

Use the USB cable to connect with the Micro USB connector of the phone for this purpose!

Ensure the phone is powered off and proceed as follows:

- Open the Emma application and log in.
- Press and hold the volume down key on the phone, connect the phone to the USB cable and then release the volume down key.
- Select the appropriate service and follow the on-screen instructions.

NOTE: For phones with eMMC flash memory (built in "SD card" memory), the only service which erase this eMMC memory is Service's "Refurbish" and "Customize". See also emma User Guide info. http://emma.extranet.sonyericsson.com/documents/emma_user_guide.pdf (see "Service Types" and "Aspects of large files")

In Swap flow, when change a phone from Customer A to Customer B, always use the service Customization script.

2 Tests

2.1 Service Test Mode



Note: Make sure the phone is in call setup when pressing these touching keypads to get into the Service menu!

Start up the phone and enter the service menus:

- Press the following keypad combination: ***##7378423#****

- Select 'Service tests'
- Select one of the tests and follow the test instructions as described below
- To stop the test and return to the 'Service tests' menu, press the Back key

For more information, refer to 1220-1333: Generic Repair Manual - mechanical

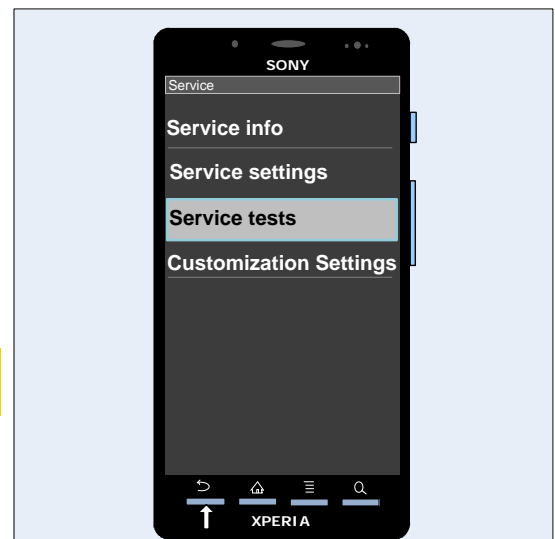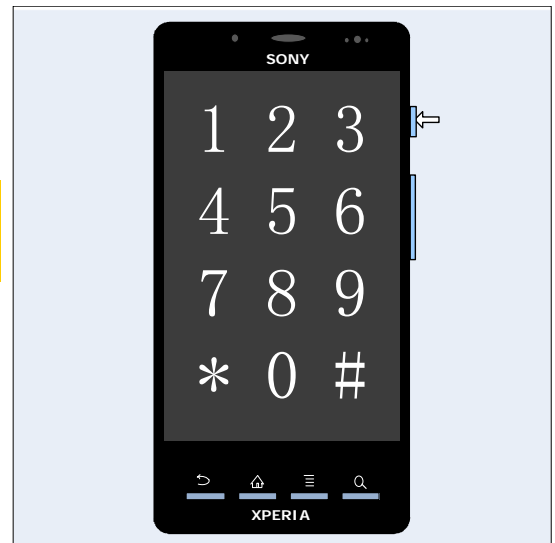

The following pictures will show a simplified basic phone for a general visualization of the service tests!

Tests

2.2 Service Tests


2.2.1 Keyboard & Switch

Text Note: The Home Key and On/Off key are not part of the keyboard test, which are in the Manual tests.

To return to the Service Test Menu, wait for 8 seconds.

Press all keys on the phone:


- Back key
- Menu key
- Search key
- Volume up key
- Volume down key

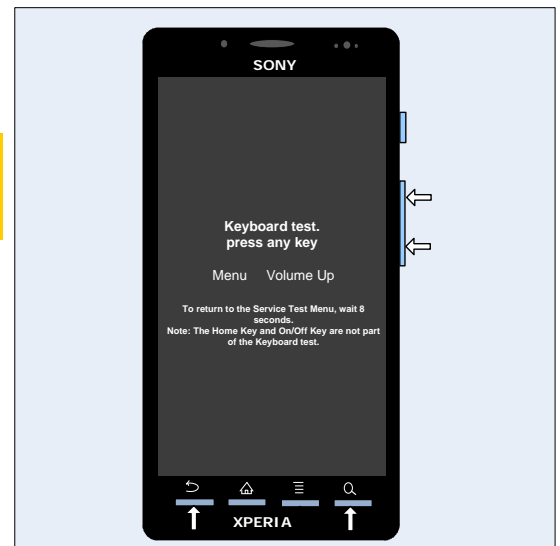

2.2.2 Touch Screen

Move a finger across the touch screen, a line will be drawn as it touches.

Press the Back key to return to the Service Test Menu.

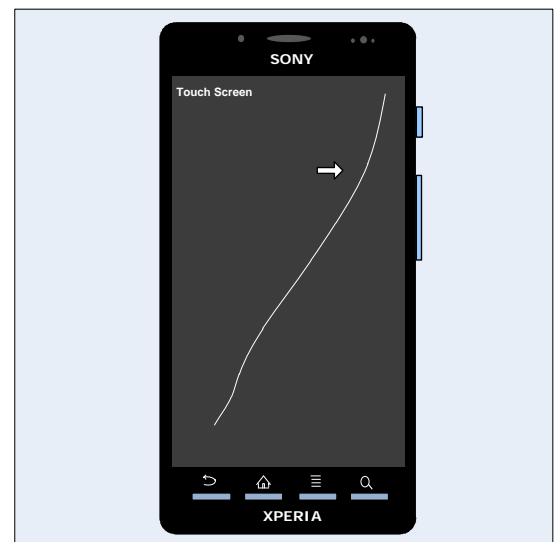

2.2.3 Display

Minor variations in the display's brightness and color may occur between phones.


There may be tiny bright dots on the display, called defective pixels and which occur when individual dots have malfunctioned and cannot be adjusted.

Two defective pixels are considered to be acceptable.

Touch display using finger, the display will show six test patterns of black, red, green, blue, White, Rainbow colors on full screen.

Make sure that there are no missing segments and that the colors and contrast are OK.

Press the Back key to return to the Service Test Menu.

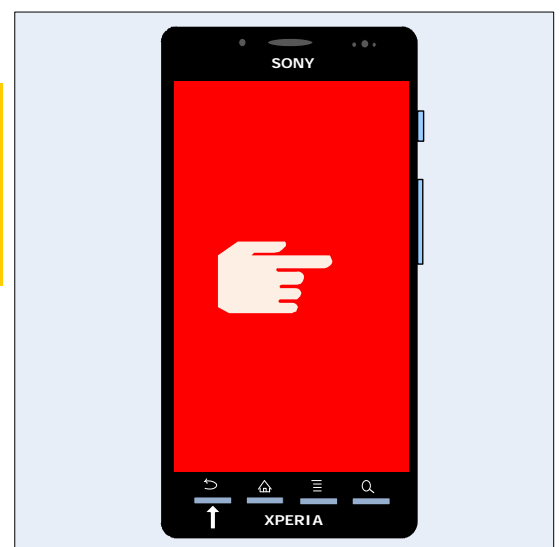

Tests: Service Tests

2.2.4 LED/Illumination

Check that the:

- Display Backlight illumination changes between on and off.
- Notification LED on the top right corner changes between red, green, blue, and off.

Press the Back key to return to the Service Test Menu.




2.2.5 Speaker

Do not hold the phone close to an ear during this test!

Make sure that the sound from the speaker port on the left top back side of the phone is emitted loud and clear and that the test includes maximum volume.

Press the volume up/volume down key to adjust the speaker volume.

Press the Back key to return to the Service Test Menu.

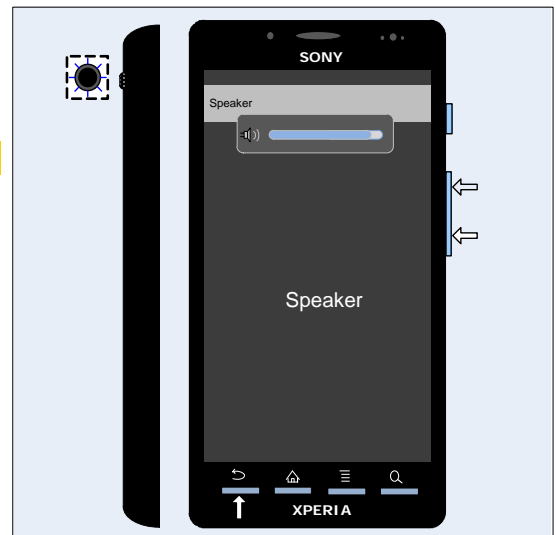

2.2.6 Stereo speaker

Not applicable, do not use.

Press the Back key to return to the Service Test Menu.




Tests: Service Tests

2.2.7 Earphone

Make sure that the sound from the Earphone port on the top of the phone is emitted loud and clear and that the test include maximum volume.

Press the volume up/volume down key to adjust the earphone volume.

Press the Back key to return to the Service Test Menu.

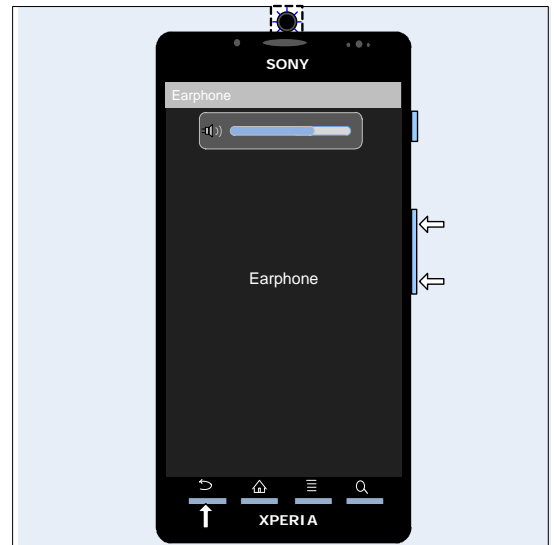

2.2.8 Microphone

The previous 'Speaker' test must have been successfully carried out before doing this test!

The phone will start to record and after approximately ten seconds the sound is played back through the Speaker. Speak into the microphone during the 'Microphone Recording' phase.

Check the quality by listening to the recording from the Speaker during the 'Playing recorded sound' phase at maximum volume.


Press the Back key to return to the Service Test Menu.



2.2.9 Secondary Microphone

Not applicable, do not use.

Press the Back key to return to the Service Test Menu.

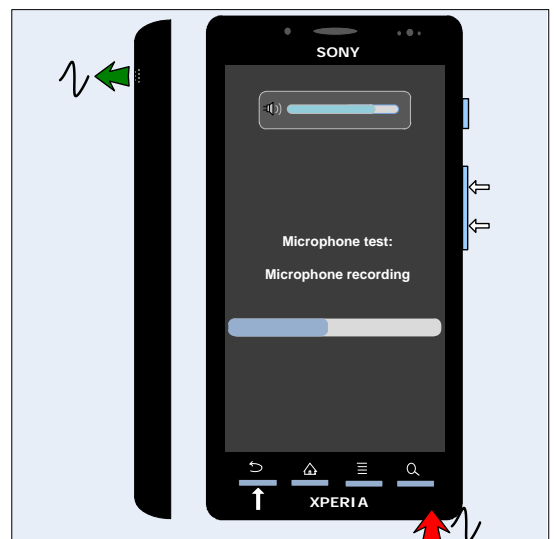

Tests: Service Tests

2.2.10 Vibrator

Press the menu key or side keys to start the vibrator test.
It is possible to modify the duration of this test.

Press the Back key to return to the Service Test Menu.



2.2.11 Camera


Minor variations in image appearance may occur between phones, but is not uncommon and should not be regarded as an indication of a defective camera module!

Aim the camera (located at the back of the phone) at an object and check the quality of the image shown in the display.

Press the screen to preview the photo's auto focus quality.

Photos are taken but not saved during this test!

Press the Back key to return to the Service Test Menu.

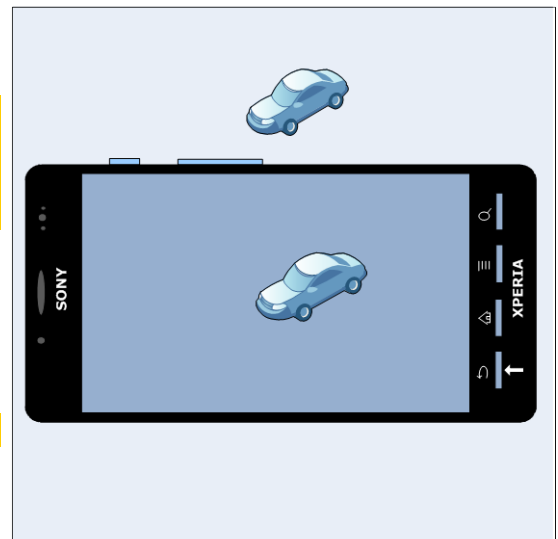


2.2.12 Secondary Camera

Minor variations in image appearance may occur between phones, but is not uncommon and should not be regarded as an indication of a defective camera module!

Aim the camera (located in front of the phone) at an object and check the quality of the image shown in the display.

Press the Back key to return to the Service Test Menu.

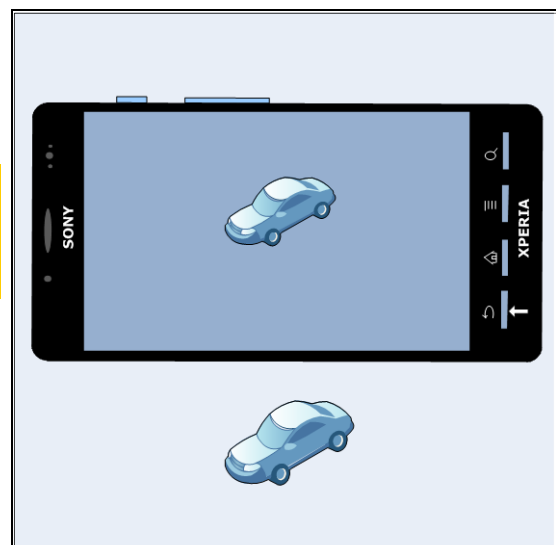


Tests: Service Tests

2.2.13 Flash LED

Check the Flash LED at the back side of phone to see whether it's turned on.

Press the Back key to return to the Service Test Menu.

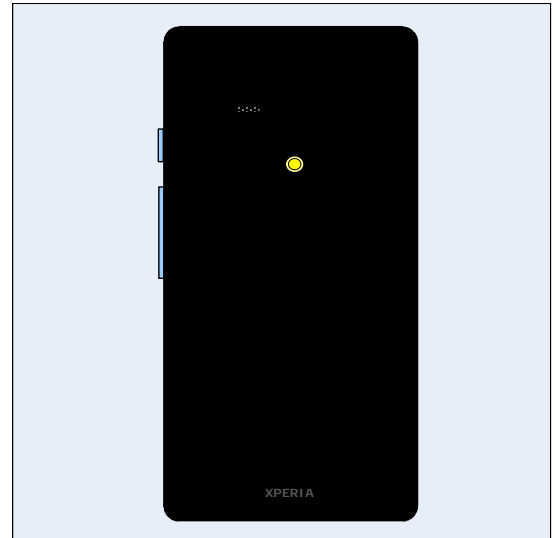

2.2.14 Bluetooth


During this test, the distance between the phone and the target Bluetooth device must be 1.5 to 5 meters!
Make sure the target Bluetooth device is enabled and visible always!

The Bluetooth test will be done in following sequences:

Step 1: Enable Bluetooth; wait 4-5 seconds, shows OK;


Step 2: Searching;

Step 3: Press "Yes" to setup its visibility to target;

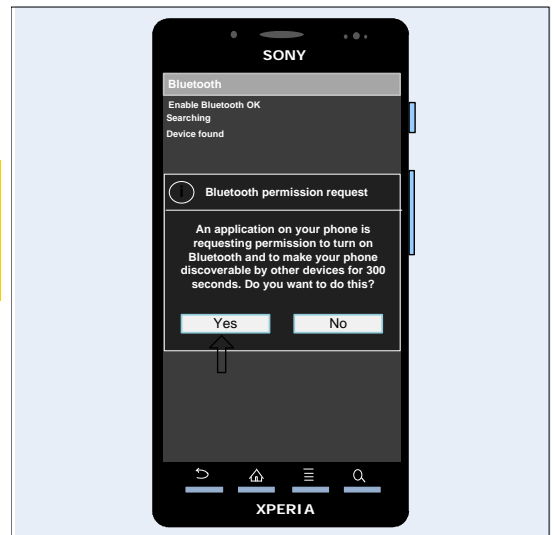

Step 4: Select the Target Bluetooth Device;


Step 5: Bluetooth pairing request shows, verify the passcode and select "Pair" to confirm it;

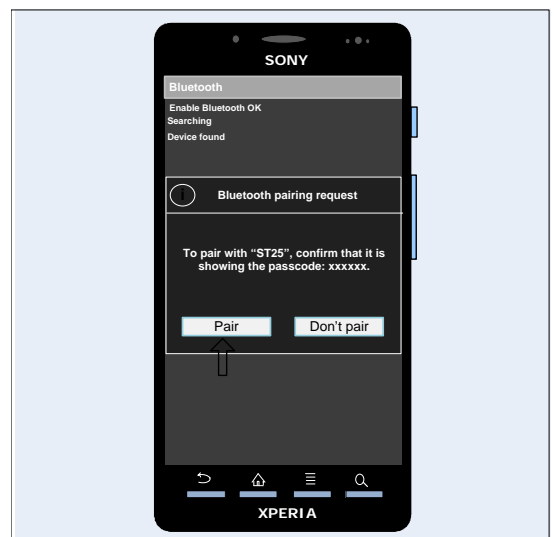

Tests: Service Tests

Step 6: On Target Bluetooth Device, verify the passcode and select "Pair" to confirm it also, when succeeded, it shows "Test Complete".

Press the Back key to return to the Service Test Menu.

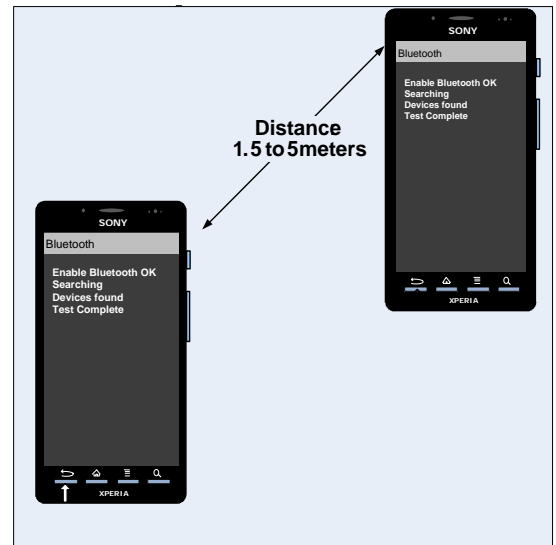

2.2.15 WLAN

Make sure there's a WLAN network before performing this test.

The WLAN test will be done in following sequences:

- Step 1: Enable WLAN; wait 4-5 seconds, shows OK;
- Step 2: Searching;
- Step 3: Access points found list;
- Step 4: Select the Target WLAN network, and type the password to get connected;
- Step 5: Enter a web address (e.g. Google.com)
- Step 6: When connection succeeded, it shows "Test Complete".

Press the Back key to return to the Service Test Menu.




2.2.16 GPS

Enter the GPS Location Test, and wait for the GPS location data.

Press the Back key to return to the Service Test Menu.

For GPS testing, refer to 1220-1333: Generic Repair Manual – mechanical

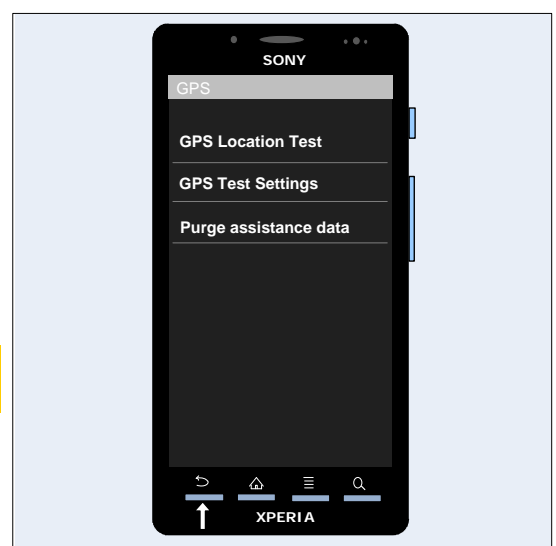


Tests: Service Tests

2.2.17 Compass

Do calibration with hand movements as shown in the phone, and then check the actual direction with measured value.
(Yaw:0=North, 90=East, 180=South, 270=West)

Press the Back key to return to the Service Test Menu.

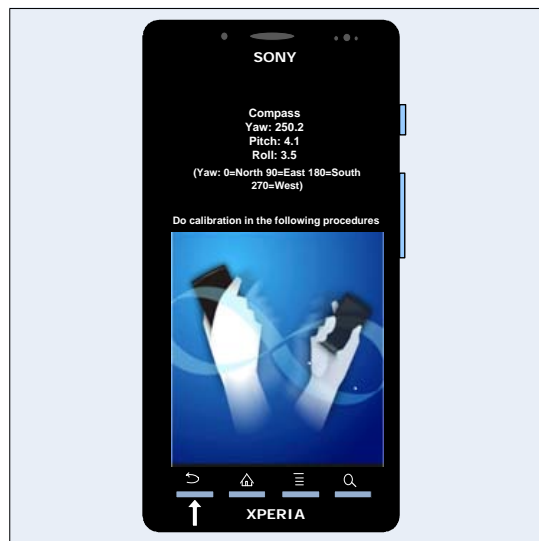

2.2.18 Accelerometer

The accelerometer test displays the actual position of the phone as a 3D coordinate X: Y: Z.


Press the Back key to return to the Service Test Menu.



By tilting the phone in various directions, the X: Y: Z values will change in size and polarity depending on the angle and direction as shown in the adjacent picture.

Check by tilting the phone that the X: Y: Z values shown in the display are in accordance with the tilting shown in the picture.

Press the Back key to return to the Service Test Menu.

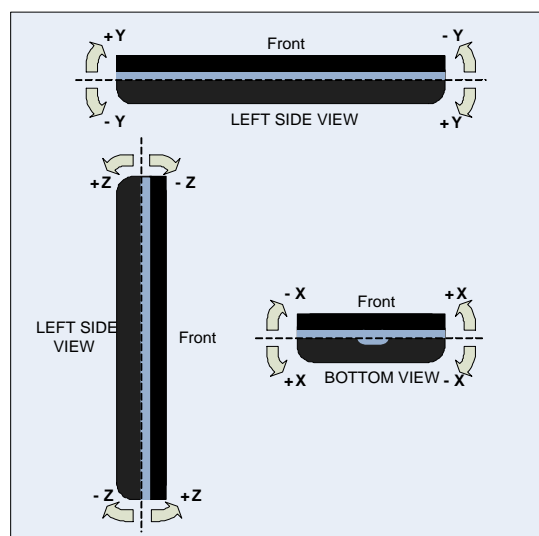

Tests: Service Tests

2.2.19 Ambient Light Sensor

The Ambient light test states a value. The value should increase when the window gets more light and decrease when the window gets less light.

Press the Back key to return to the Service Test Menu.




2.2.20 Proximity switch

The previous 'Speaker' test should have been successfully carried out before doing this test!
Make sure the phone is not in 'silent mode' before performing this test.

When entering into the test, the screen shows 'Proximity switch OFF' and a tone is emitted.

Once your finger cover the proximity switch area (on the left side of the receiver), the screen will show 'Proximity switch ON' with a different type of tone.


Press the Back key to return to the Service Test Menu.

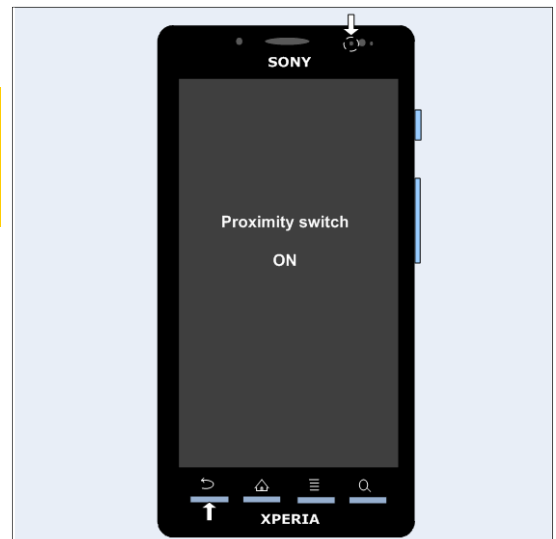

2.2.21 Pressure Sensor

Not applicable, do not use.

Press Back key to return to Service Test Menu.

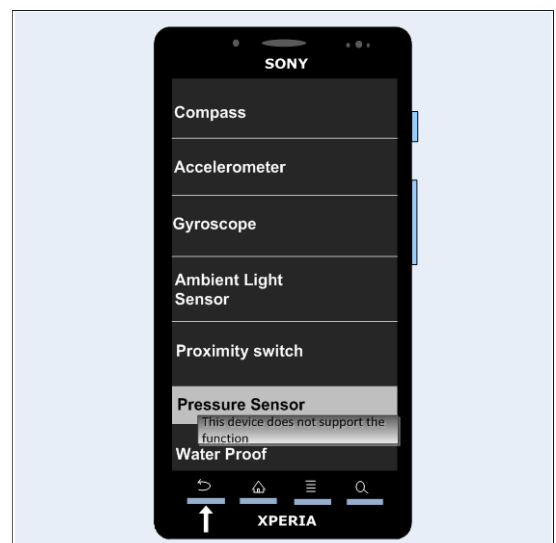


Tests: Service Tests

2.2.22 Real time clock

During the actual test the text 'Real time clock test' is displayed, and then followed by a message stating whether the test was OK or not.


Press the Back key to return to the Service Test Menu.

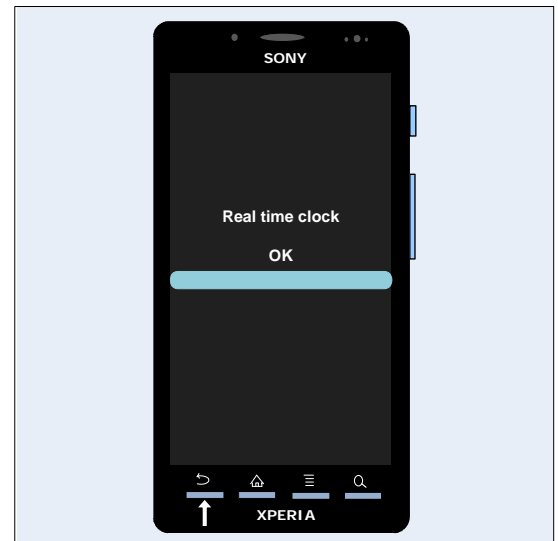

2.2.23 Total call time

The total call time is displayed in the format HH:MM:SS (hours: minutes: seconds).

Press the Back key to return to the Service Test Menu.

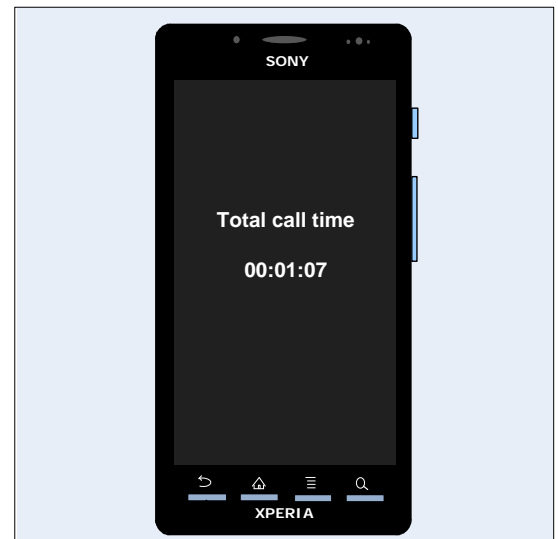


2.2.24 External Memory

A memory card should be inserted in the phone before starting this test!

The phone should detect that the memory card is inserted.

Press the Back key to return to the Service Test Menu.

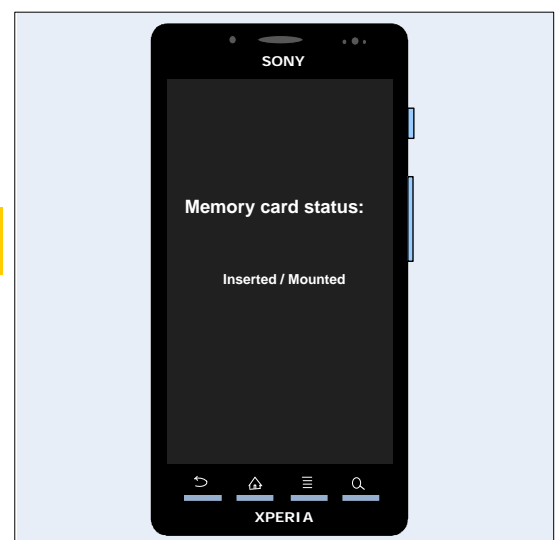

Tests: Service Tests

2.2.25 Security

The DRM keys are shown in the display.
There may be different content shown based on different market software versions.


Press the Back key to return to the Service Test Menu.



2.2.26 FM Radio

Not applicable, do not use.


Press Back key to return to Service Test Menu.

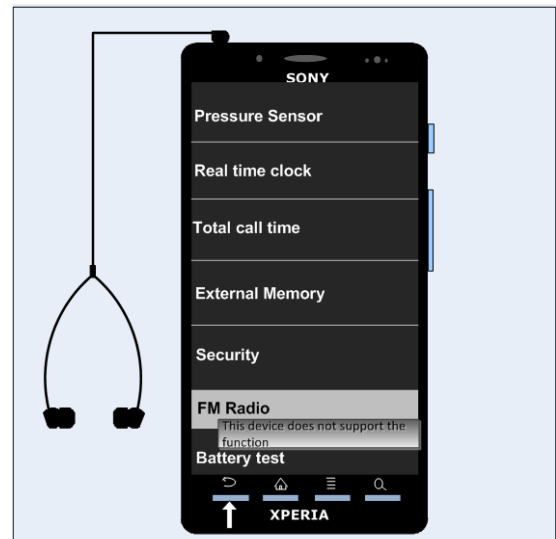

2.2.27 Battery test

Do not use.

Press Back key to return to Service Test Menu.

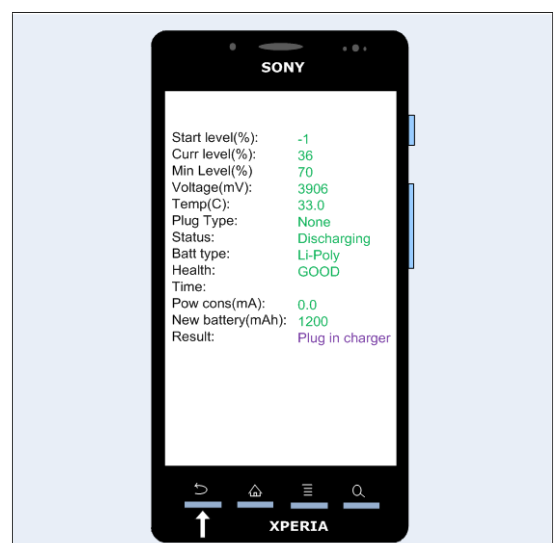


Tests: Service Tests

2.2.28 Flip slider counter

Not applicable, do not use.


Press the Back key to return to the Service Test Menu.

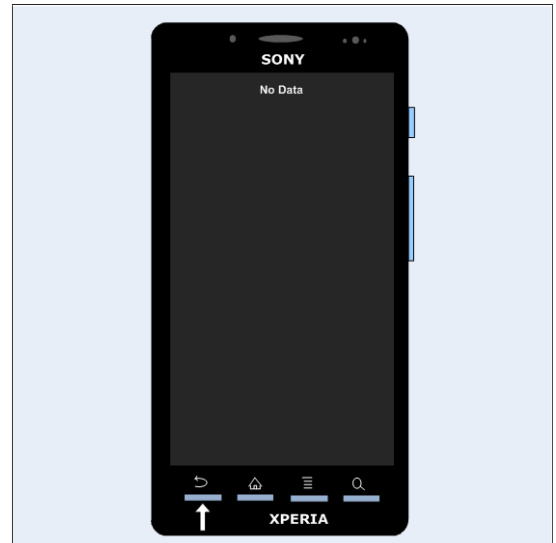

2.2.29 Verify certificates

Not applicable, do not use.


Press the Back key to return to the Service Test Menu.

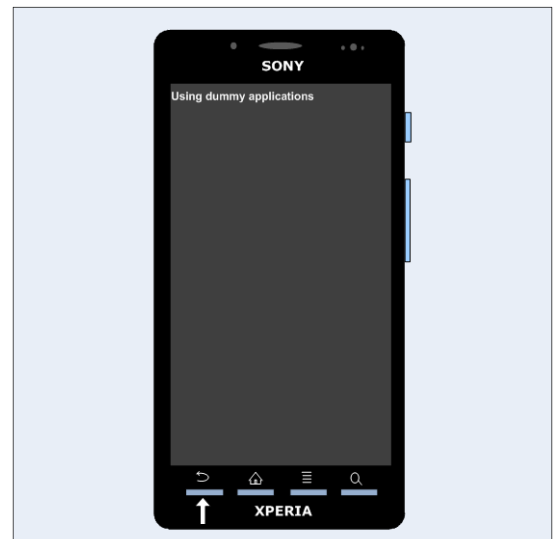

2.2.30 IrDA Test

Not applicable, do not use.

This test is not available for this product!

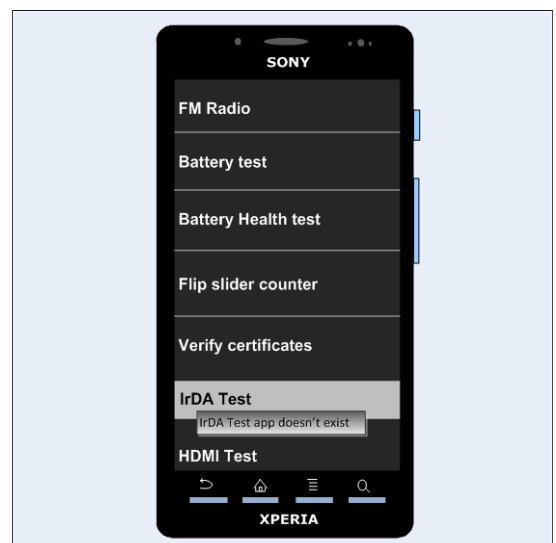


Tests: Service Tests

2.2.31 HDMI Test

Not applicable, do not use.


Press the Back key to return to the Service Test Menu.

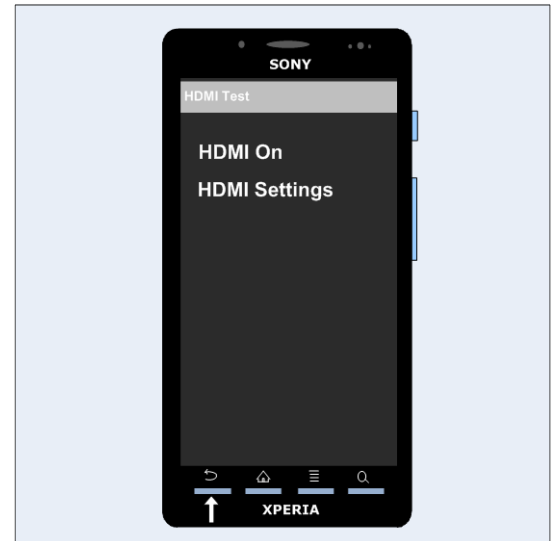

2.2.32 Connector Ground Test

Not applicable, do not use.


Press Back key to return to Service Test Menu.

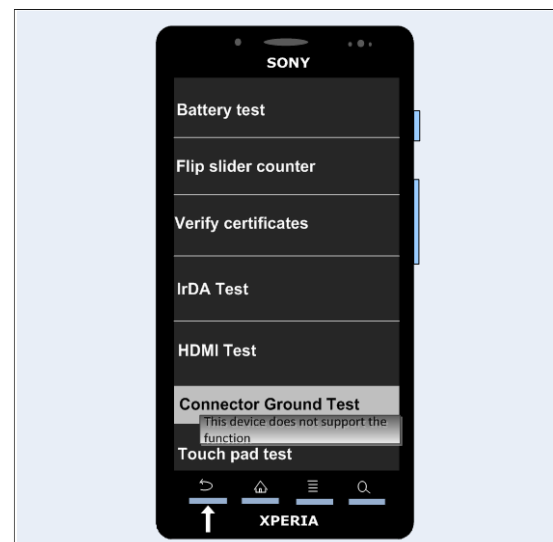

2.2.33 Touch pad test

Touch pad test using fingers, the display will show white box on screen when fingers touch display. Maximum support 4 point touch.

Press the Back key to return to the Service Test Menu.

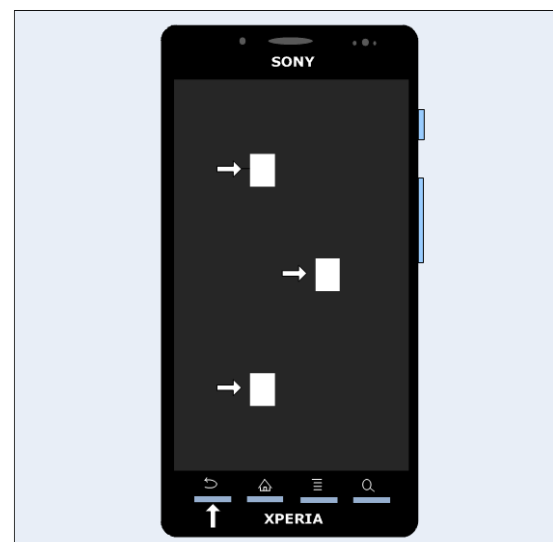


Tests

2.3 Manual Tests

2.3.1 SIM

Verify that the phone can detect a SIM card:

- Insert a SIM card, and start the phone.
- If the SIM card is detected by the phone, the start-up procedure will continue.
- Pull down the Status Bar (put finger next to the receiver and drag the menu down from the Status Bar)
- To see SIM card operator name.
- The SIM card operator name will be displayed above the Time clock when phone is in Lock status.
- If not detected, the message 'Emergency call only' will be displayed instead in the pull down Status Bar.
- Press Back key to return to Standby Menu.

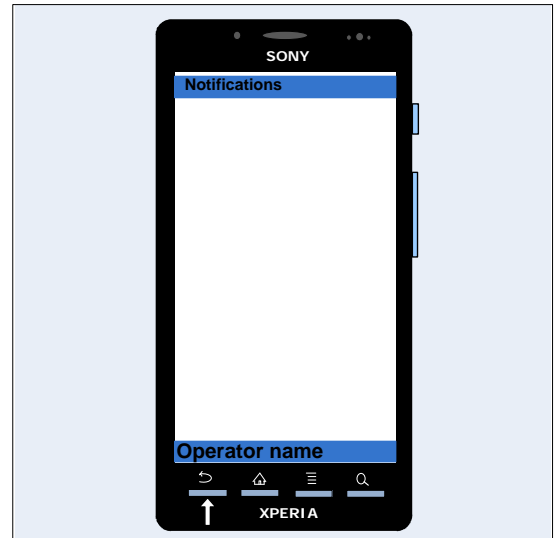

2.3.2 On/Off key test

Press the On/Off key for a long time to turn the phone on or off.

When the phone stands by, press the On/Off key for a short time to enter/exit Sleep mode.



2.3.3 Home key test

Whatever the phone shows during operation, press the Home key, the phone will go back to the Stand by screen directly.



Tests: Manual Tests


2.3.4 Charging via USB (Charger or Computer)

Verify that the phone can charge the battery via a USB port:

Ensure that no computer application, such as PC Suite or Emma, is active!

- Do not start the phone
- Connect a USB cable from a computer (or charger) to the system connector;
- Verify that the phone is being charged by Notification LED and Battery icon;

Remove the USB cable from the connector and verify that the notification LED and Battery icon no longer indicates charging.

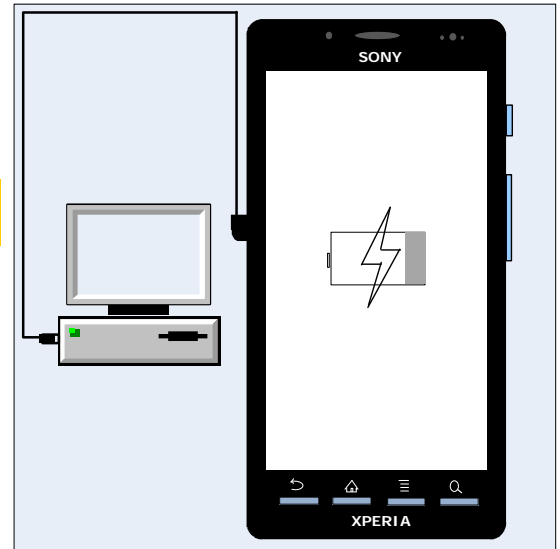

Tests

2.4 Network Test

This test can only be performed if the phone has an activated SIM/USIM card (no Test SIM/USIM) and an available network signal!


**There are two versions of the test depending on whether a UMTS network is available or not!
If a UMTS network is available, the network test has to be done separately for GSM and UMTS!**

2.4.1 On-the-air call to mobile (no UMTS network available)

To verify the radio functions (GSM) of the phone, follow the '2.4.1.1 Procedure' below:

2.4.1.1 Procedure

1. Set up a call from a landline phone (PSTN).
2. Check that there is a ring signal.
3. Check that the display backlight illuminates.
4. Answer the call and check the sound quality in both phones.
5. Adjust the volume up and down with the side keys and verify that the sound level is altered.
6. End the call and check that the elapsed time is displayed and that the termination is done properly.

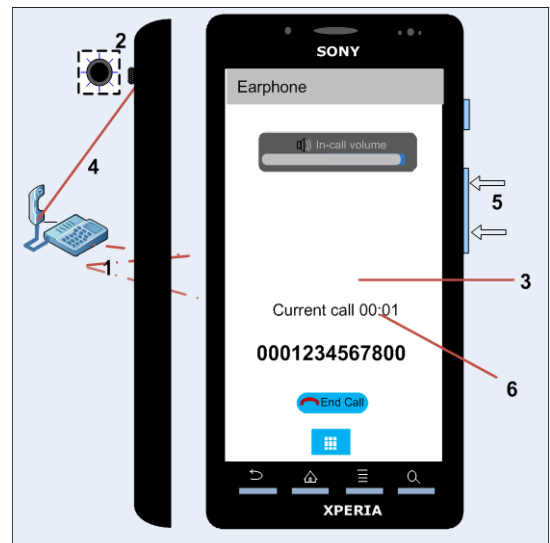

2.4.2 On-the-air call to mobile (UMTS network available)

GSM

Go to the phone menu and set:

Press Menu key → *Settings* ⇒ *Wireless & networks* ⇒ *Mobile Networks* ⇒ *Network mode* ⇒ *GSM only*

To verify the radio functions (GSM) of the phone, follow the '2.4.1.1 Procedure' above.

UMTS

Go to the phone menu and set:

Press Menu key → *Settings* ⇒ *Wireless & networks* ⇒ *Mobile Networks* ⇒ *Network mode* ⇒ *WCDMA only*

Switch off the phone and then start it up again to enable search for an available UMTS signal.

Ensure that the UMTS/3G icon now is visible at the top of the display.

To verify the radio functions (UMTS) of the phone, follow the '2.4.1.1 Procedure' above.

3 Revision History

Rev.	Date	Changes / Comments
1	2012-Jun-25	Initial release