



Sony Ericsson

# Repair Movies

- mechanical -



*Spiro*

*W100i, W100a*



## CONTENTS

<b>1</b>	<b>Movies .....</b>	<b>3</b>
1.1	Disassembly .....	3
1.2	Reassembly .....	3
<b>2</b>	<b>Revision History .....</b>	<b>4</b>

***To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.***

***For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader. To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.***

***If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow.***

***In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.***

***For general information about repair movies, refer to  
1220-1333: Generic Repair Manual - mechanical***





# 1 Movies

## 1.1 Disassembly

- Battery Cover
- Battery
- Deco Sheet
- Upper Front Cover Assy and Sub Keypad
- LCM FPC Connector Mylar and Upper Rear Cover Assy (incl. Main Display&Hinge Assy)
- Sub PCBA Assembly and Hinge FPC
- Main Keypad
- Lower Rear Cover Assy
- Lower Front Frame and Main PBA



## 1.2 Reassembly

- Main PBA and Lower Front Frame
- Lower Rear Cover Assy
- Main Keypad
- Hinge FPC and Sub PCBA Assembly
- Upper Rear Cover Assy (incl. Main Display & Hinge Assy) and LCM FPC Connector Mylar
- Sub Keypad and Upper Front Cover Assy
- Deco Sheet
- Battery
- Battery Cover





## 2 Revision History

Rev.	Date	Changes / Comments
1	2010-Jul-28	Initial release