



Sony Ericsson

Repair Movies

- mechanical -



W705
W715



CONTENTS

1	Movies	3
1.1	Disassembly	3
1.2	Reassembly	3
2	Revision History	4

To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.

For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader. To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.

If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow.

In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.

**For general information about repair movies, refer to
1220-1333: Generic Repair Manual - mechanical**



1 Movies


1.1 Disassembly

- Battery Cover
- Battery
- Rear Cover
- Main PBA
- SIM Flex/Carrier Unit
- Co-branding
- Screw Sheets
- Front Cover
- Navigation Key Unit
- Display



1.2 Reassembly

- Display
- Navigation Key Unit
- Front Cover
- Screw Sheets
- Co-branding
- SIM Flex/Carrier Unit
- Main PBA
- Rear Cover
- Battery
- Battery Cover

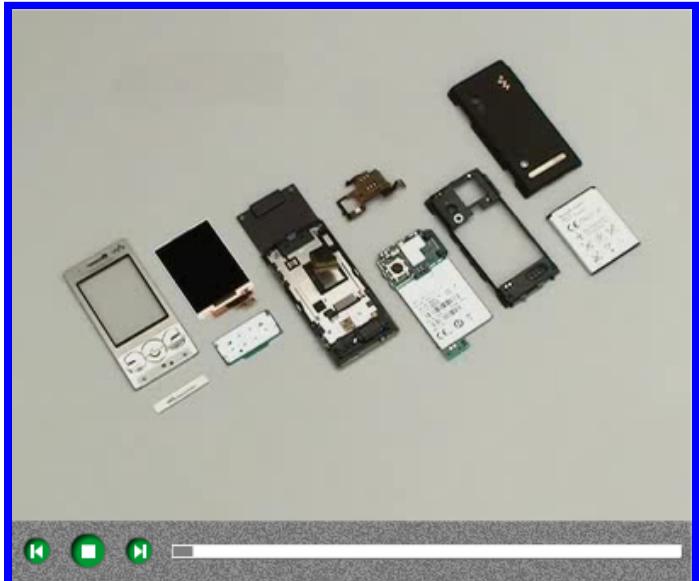



2 Revision History

Rev.	Date	Changes / Comments
1	2009-Feb-18	Initial release