

## Tutorial for the S3650 Corby

Be sure to have a backup of the data on your phone!  
Flashing a phone is a tricky business so be sure to know the risks!

### What do you need for installation:

- The desired firmware
- The Multiloader application
- The Samsung S3650 USB-cable
- The S3650

### Preparation:

- 1) Firmware
- 2) Multiloader 5.60
- 3) Samsung S3650 USB cable
- 4) How to get you phone into firmware mode:



Picture 1. Download Mode.

### Link FW-List P-S-U

The application that will flash the new firmware to your mobile.

### Link MultiLoader

Original cable.

Press and hold the following buttons.

(Picture. 1):


- (1) Volume down
- (2) Camera button.
- (3) Power button.

Turn off your phone

Remove your MicroSD and SIM card, put the battery back in

### Flashing:

- 5) Connect your phone with your pc.
- 6) Before you start do a hard reset.
- 7) Use the original USB cable 😊  
Enter the following code: \*2767\*3855#
- 1) Open the MultiLoader.
- 2) Extract the firmware onto your desktop.
- 3) Select the option (BRCM2133) in the control section of the MultiLoader.
- 4) Put a check in Boot Change, Full Download and Master Rom: BRCM2133  
Boot Change  
Full Download  
Master Rom
- 5) Click the Boot button and browse to the firmware folder on the desktop and select the file.
- 6) Do the same for all the other buttons (work the list from top to bottom, skip FOTA, Tune and ETC).  
Boot = BOOTFILES  
Following groups are NOT required:
  - Amss
  - FOTA,
  - Tune
  - ETCAlways choose the LOW version.  
Click on Port Search
- 7) Be sure to select the LOW version for the Rsrc2 button
- 8) Check if your phone is correctly connected.  
If the Port Search is ready, click DOWNLOAD.
- 9) Leave your phone connected during the entire firmware installation.
- 10) When the MultiLoader says "All files complete", disconnect your phone, remove the battery, insert your MicroSD and SIM card  
Remove battery. Insert battery.
- 11) Turn on your phone, enter your PIN code.  
Flash is successfully completed.

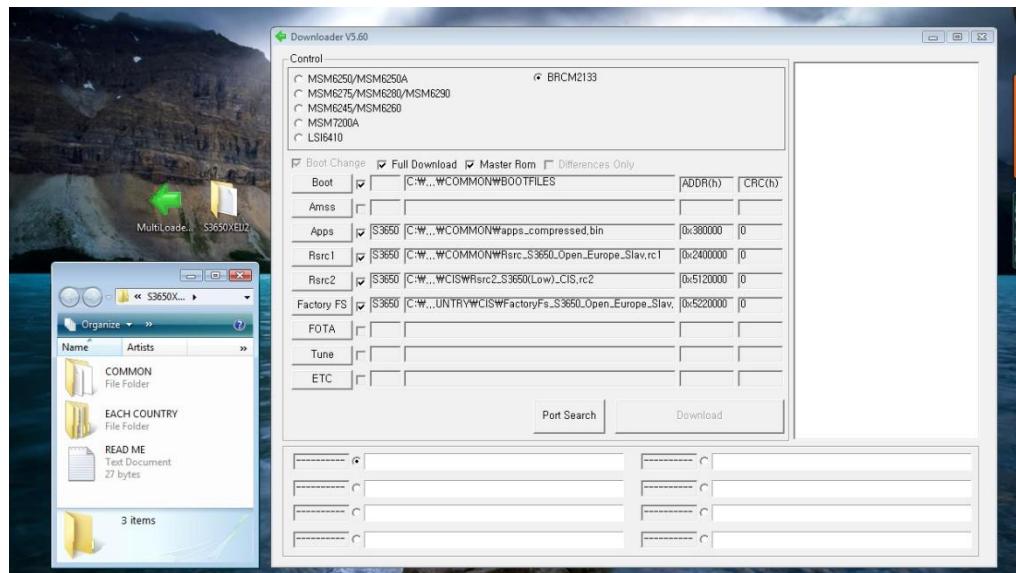

Picture 2. Example picture Samsung Corby.