



9. Flow Chart of TroubleShooting


9-1. Power On



● PDA Part

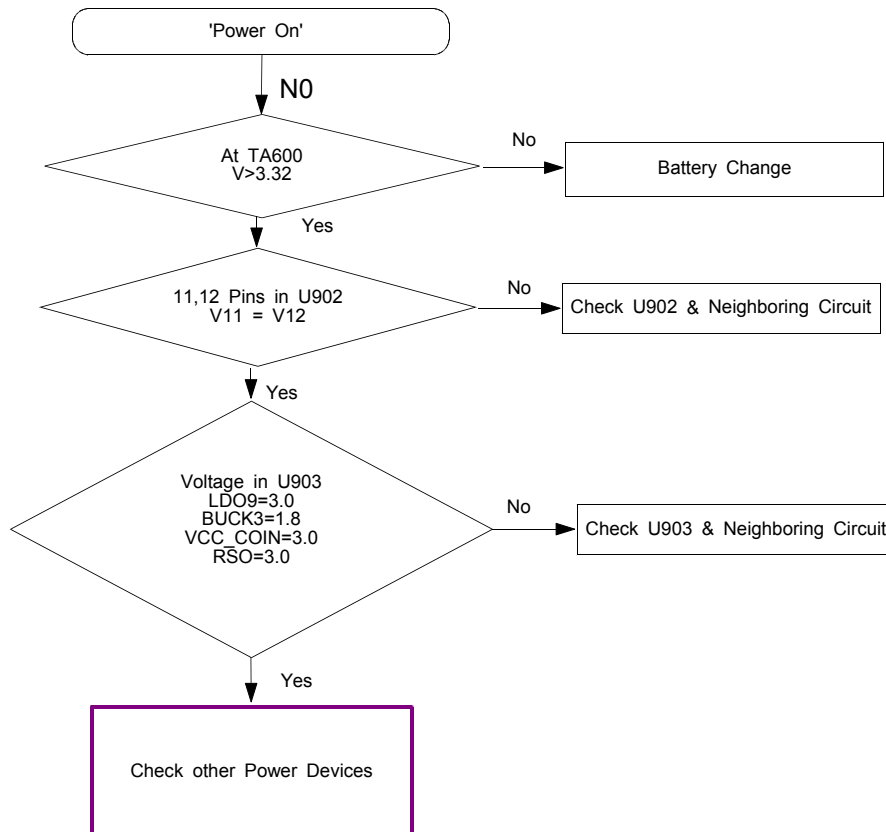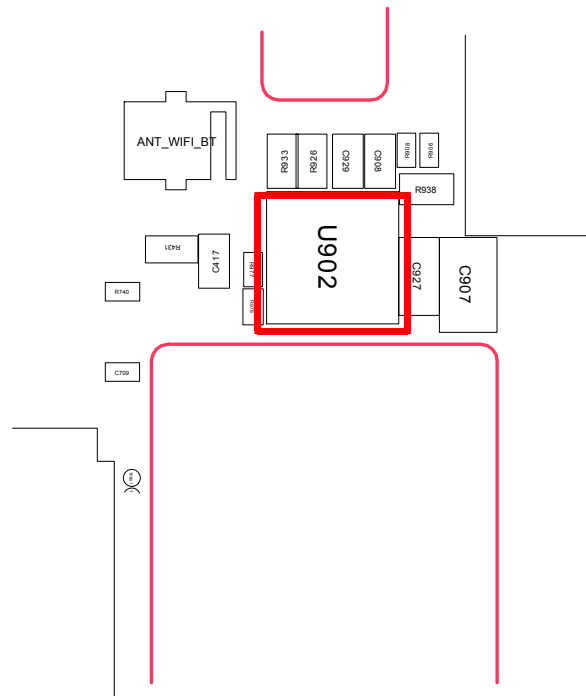

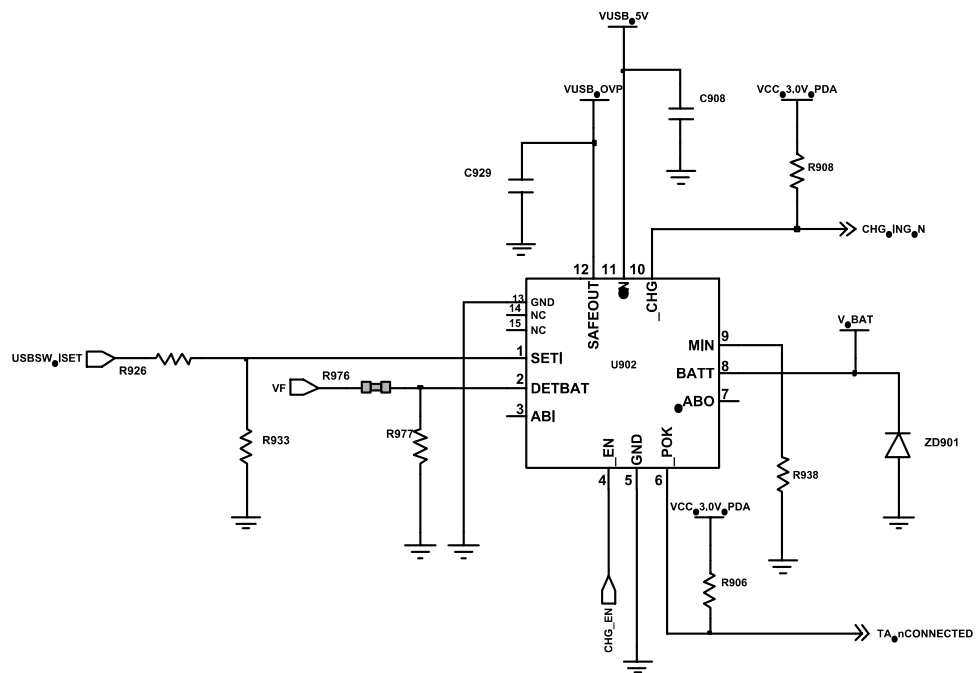



● PHONE Part

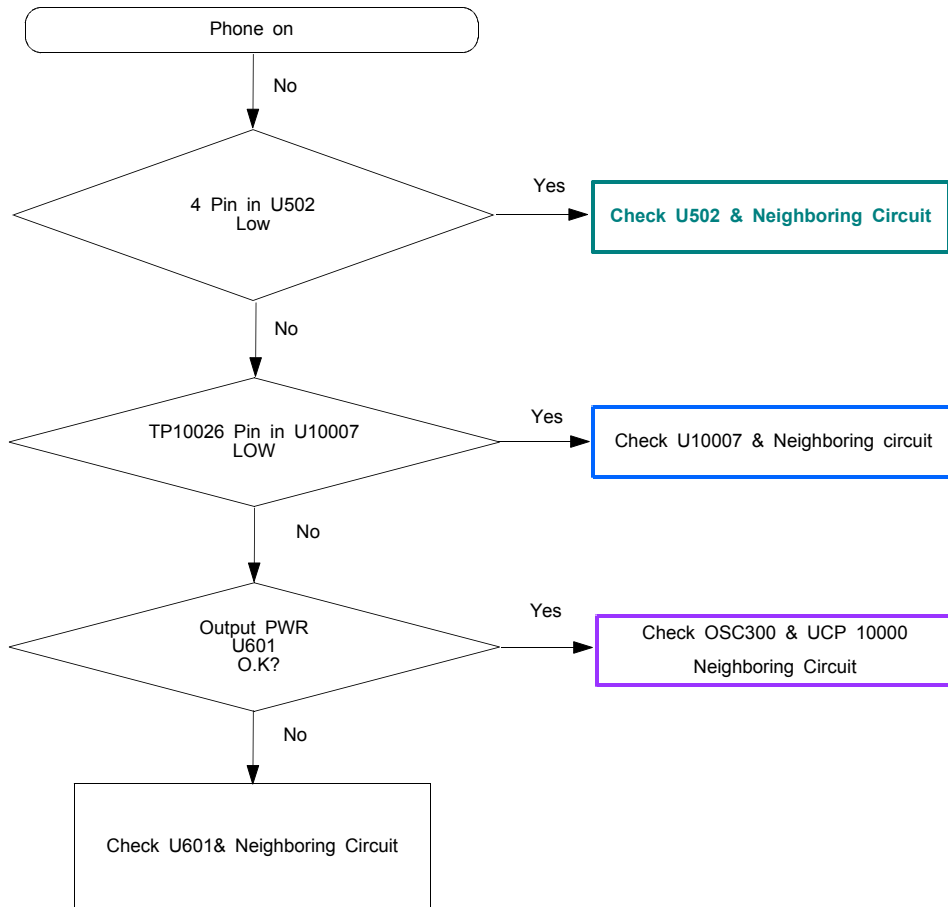

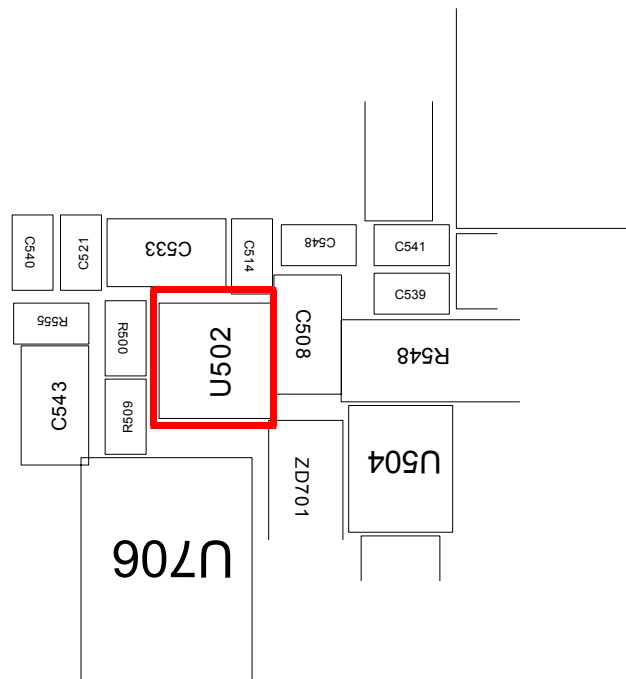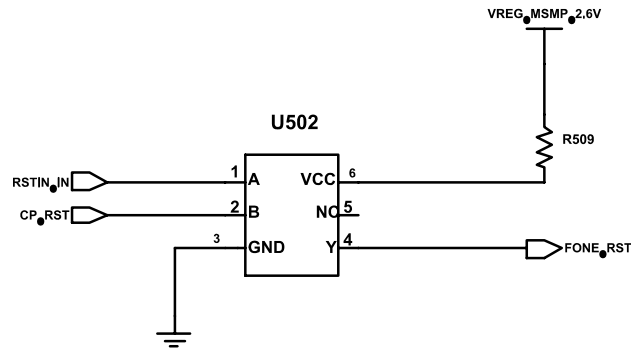



9-2. RECEIVER Working

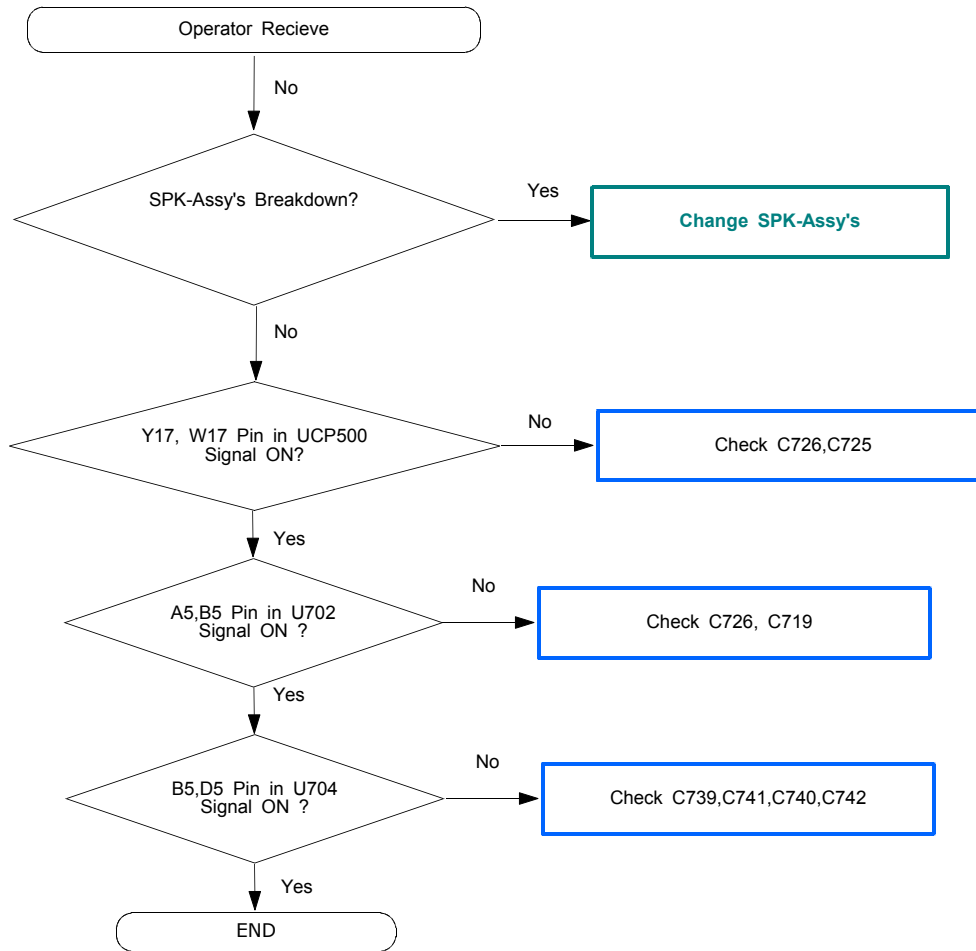





9-3. SPEAKER Working

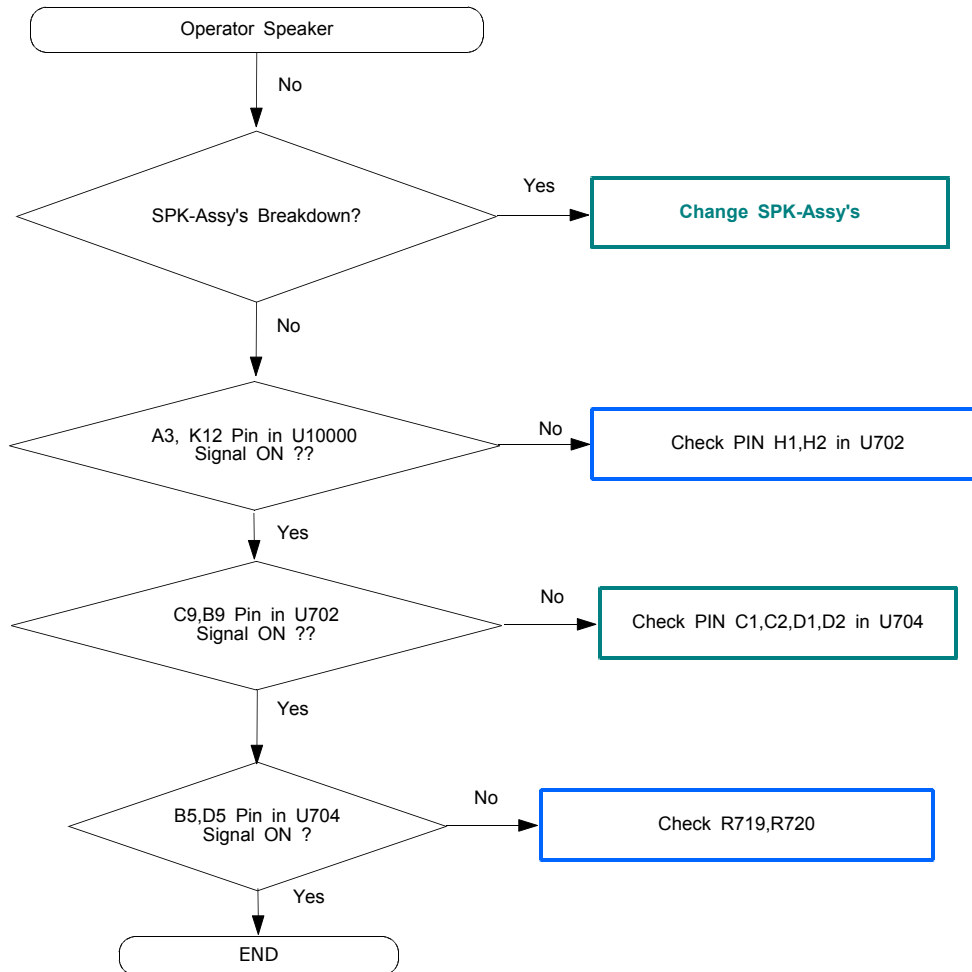


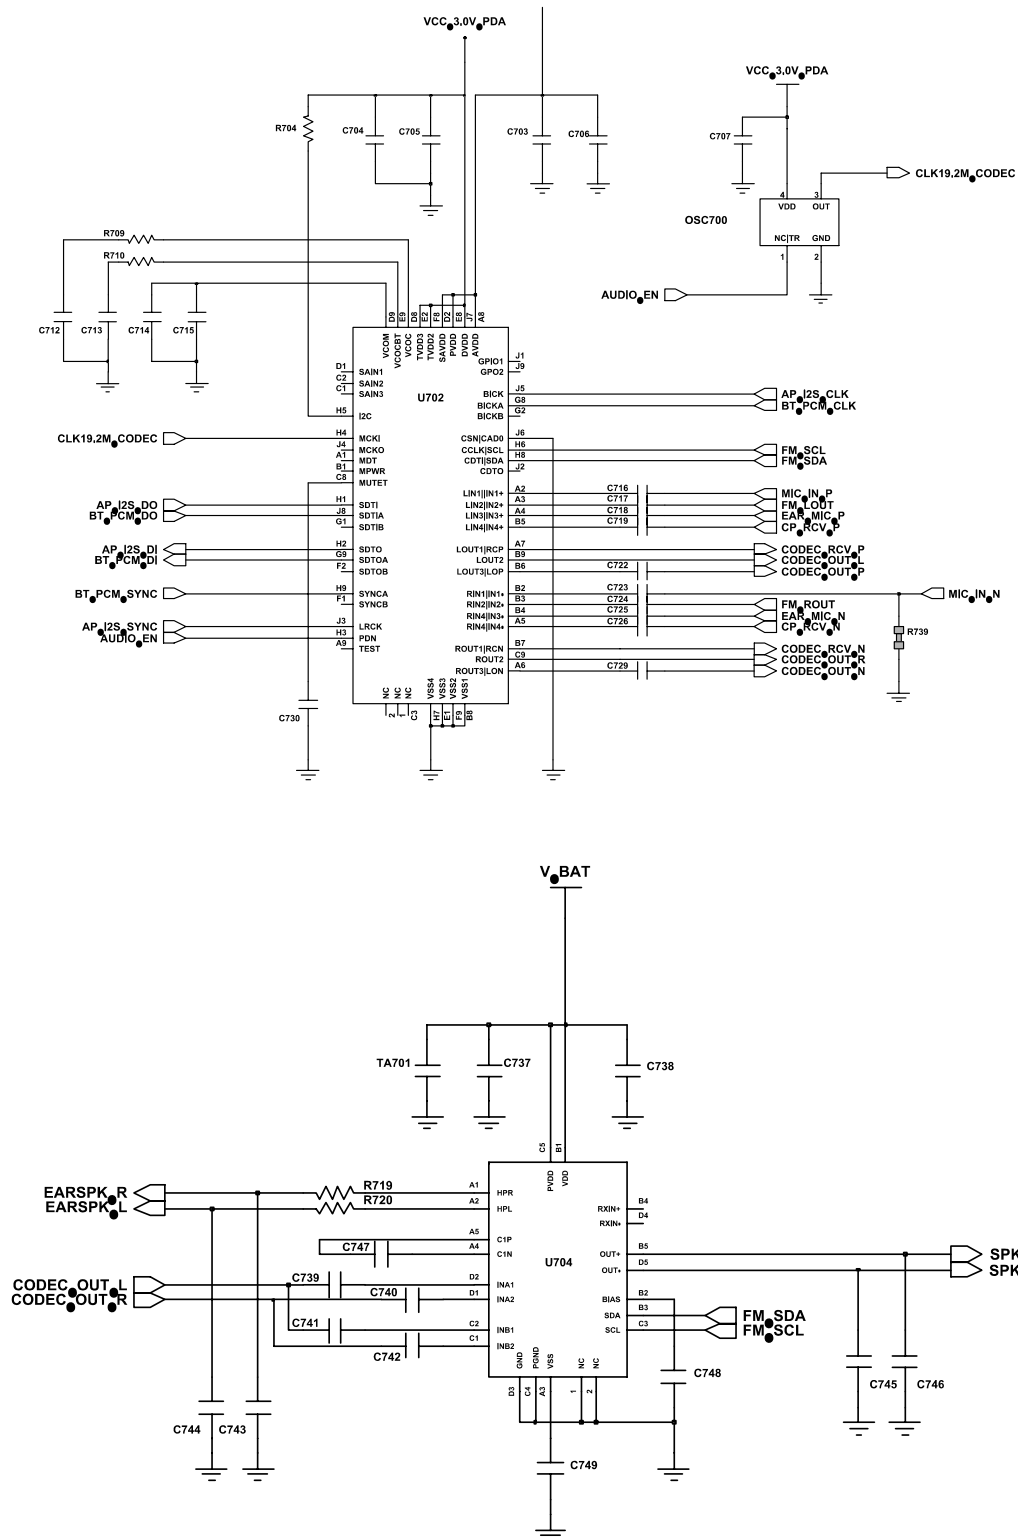

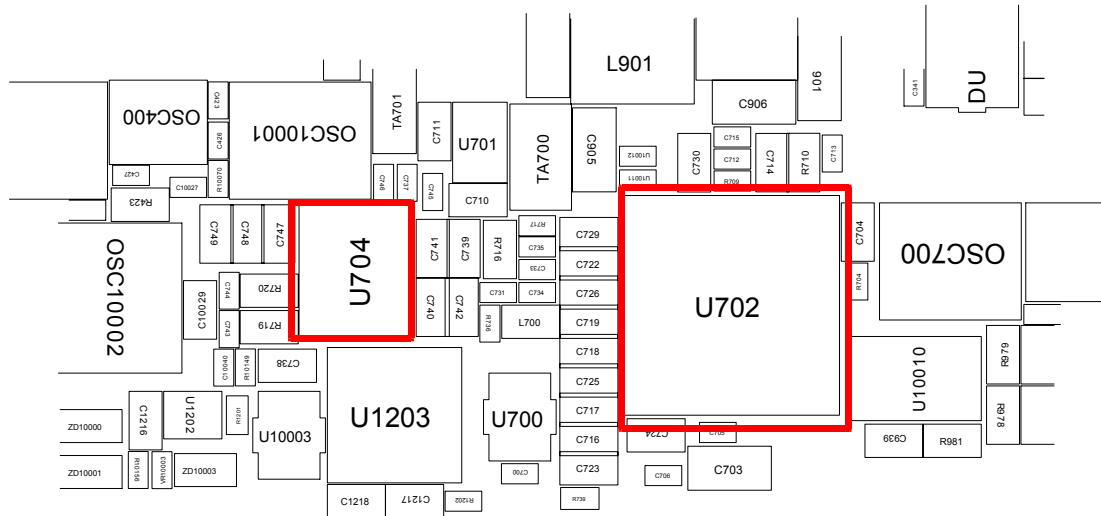


9-4. MIC Working

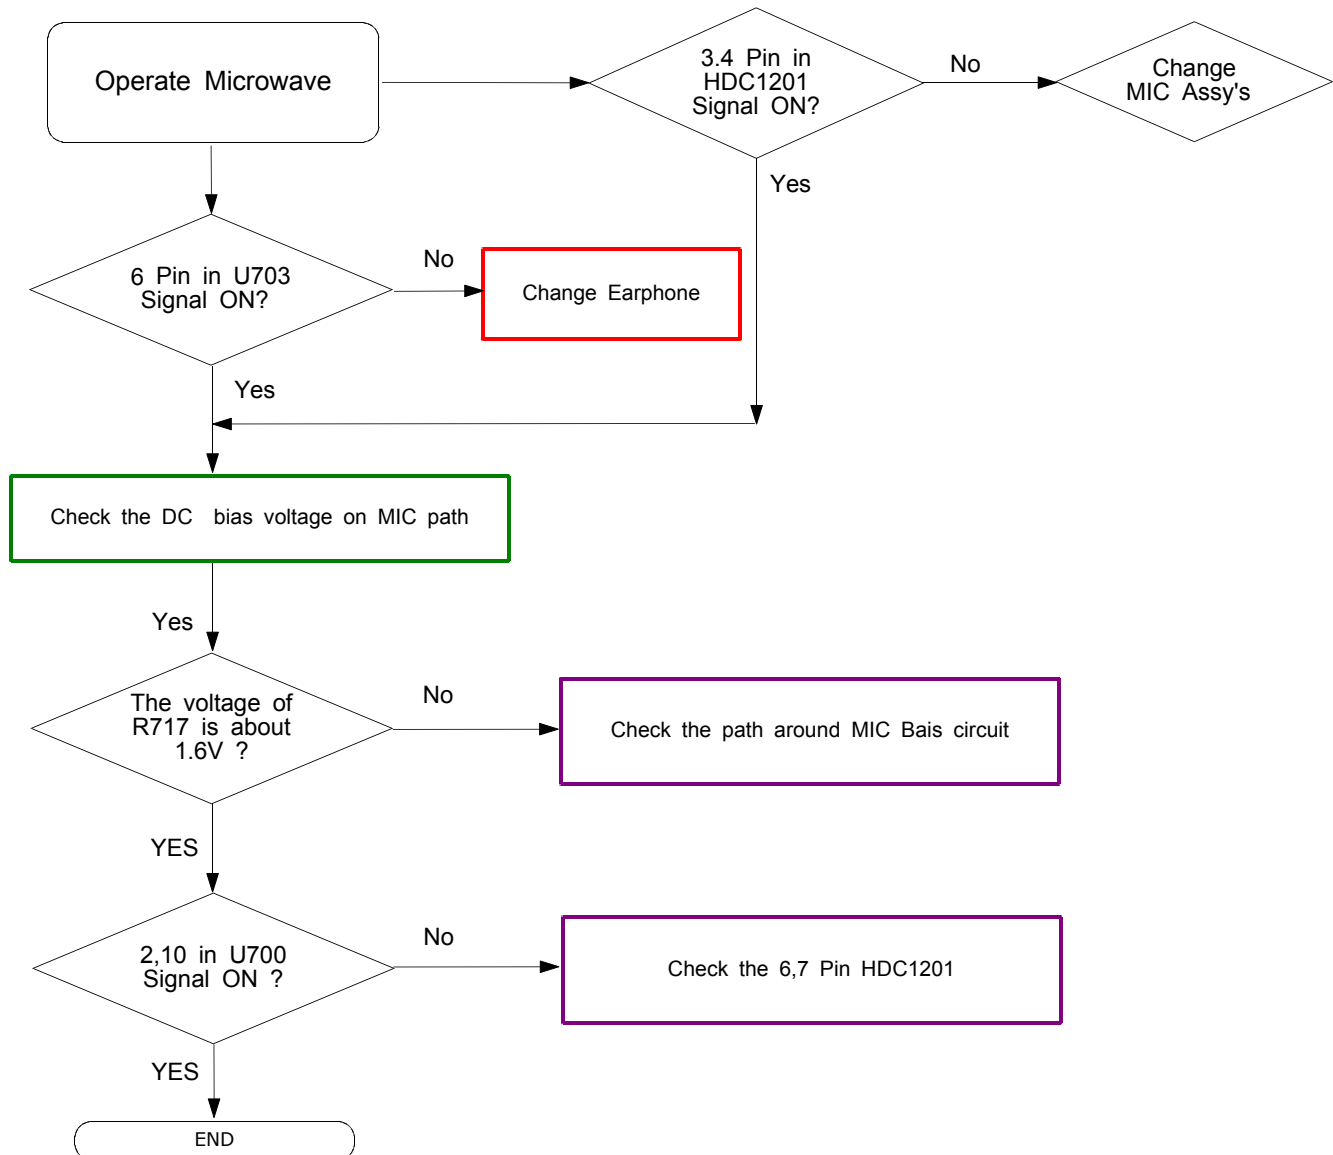

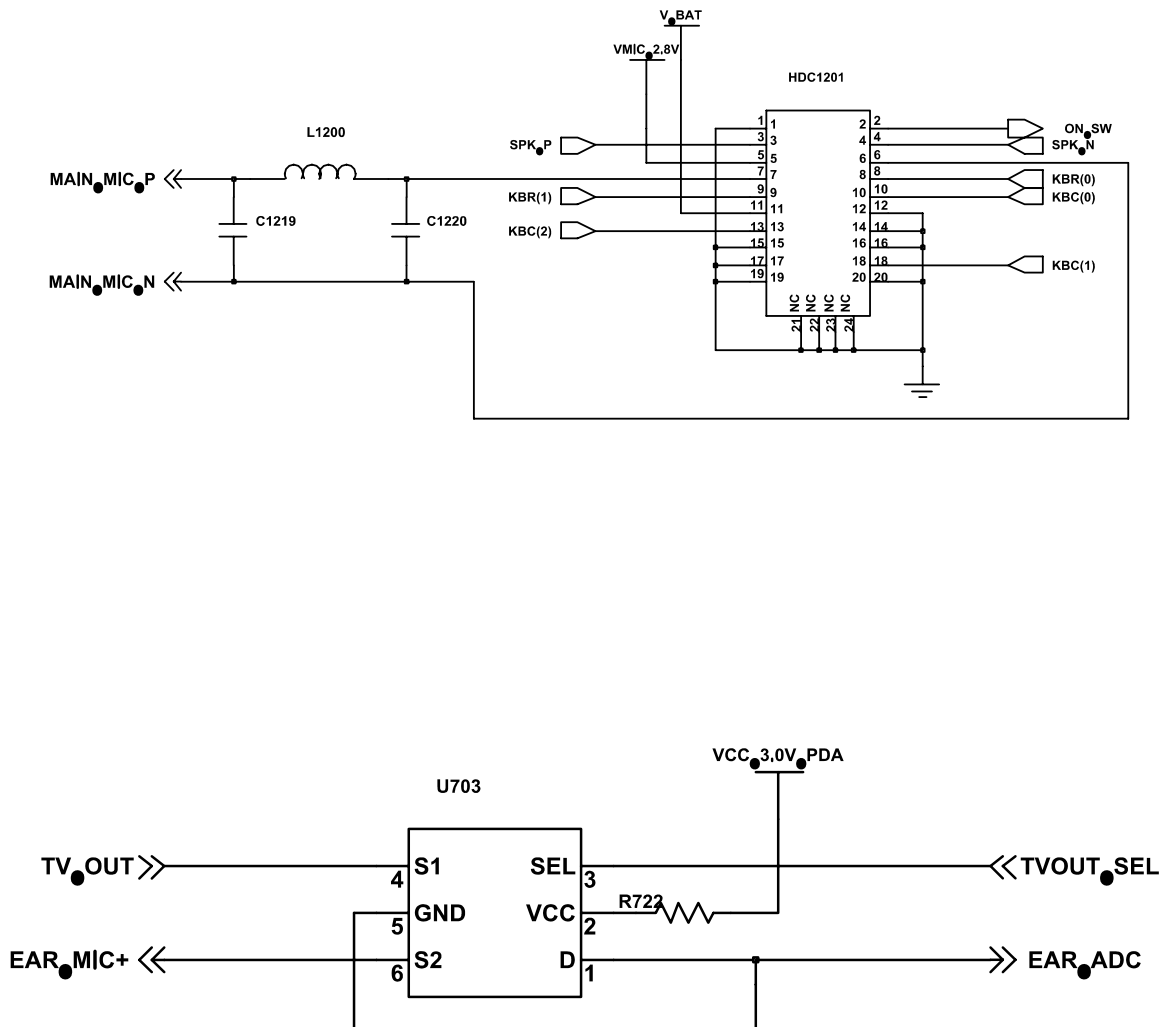






9-5. KEY Working


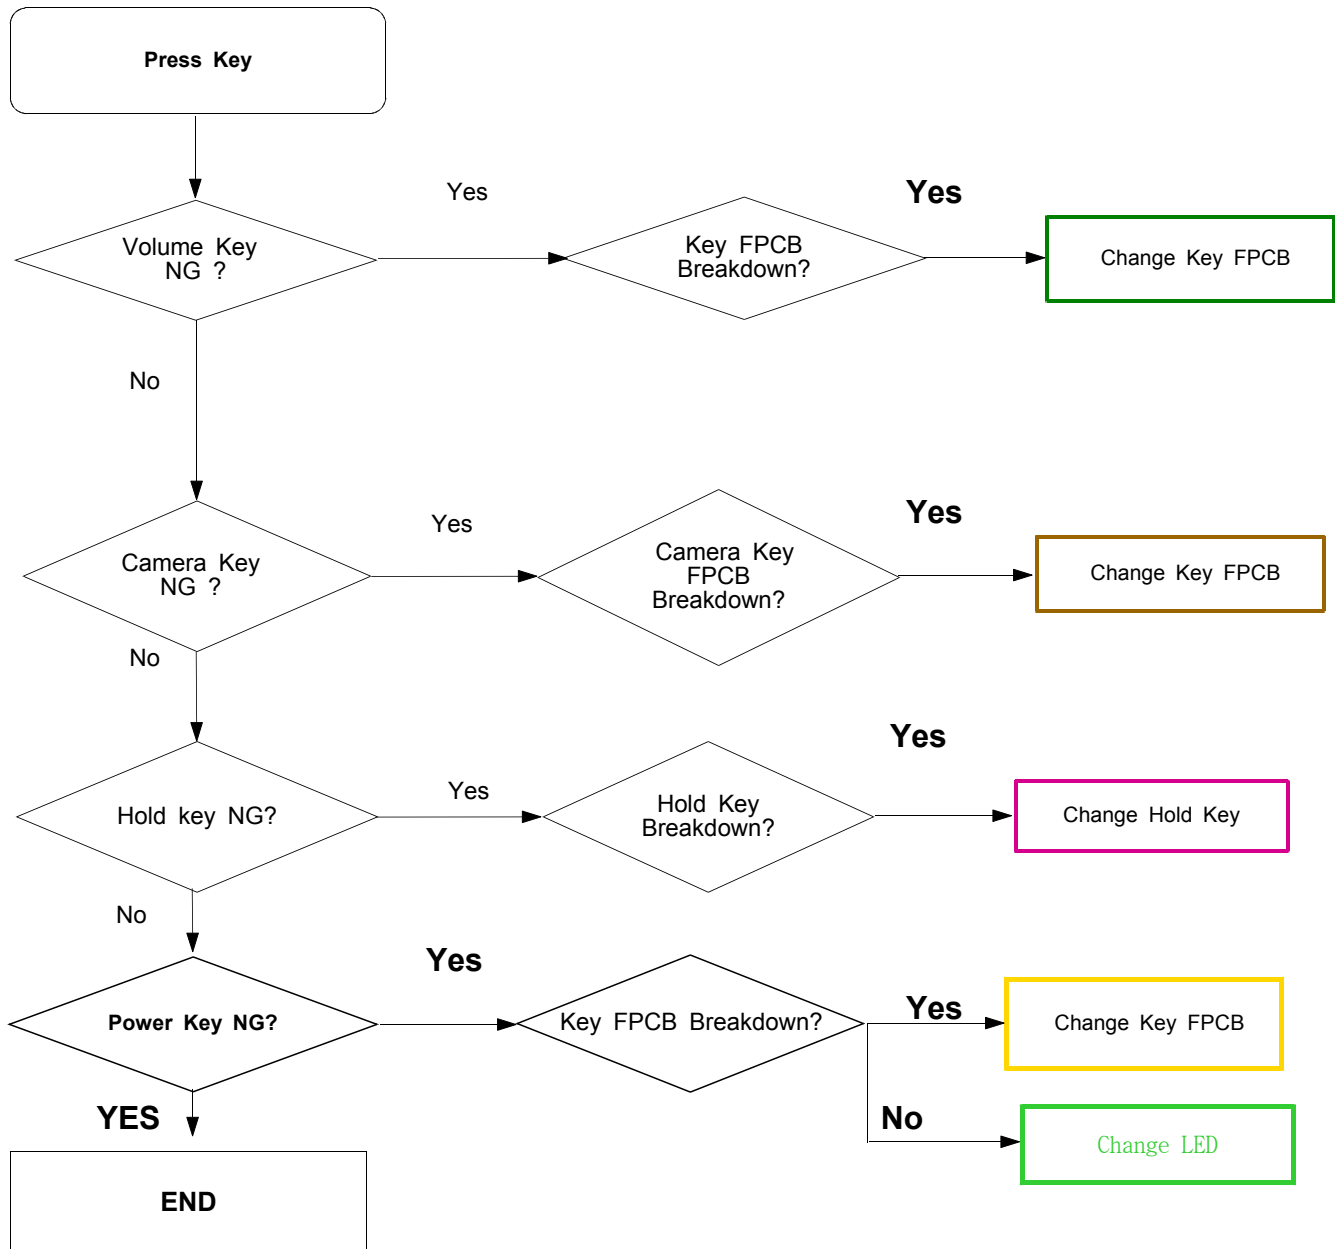




9-6. T-Flash Card Working

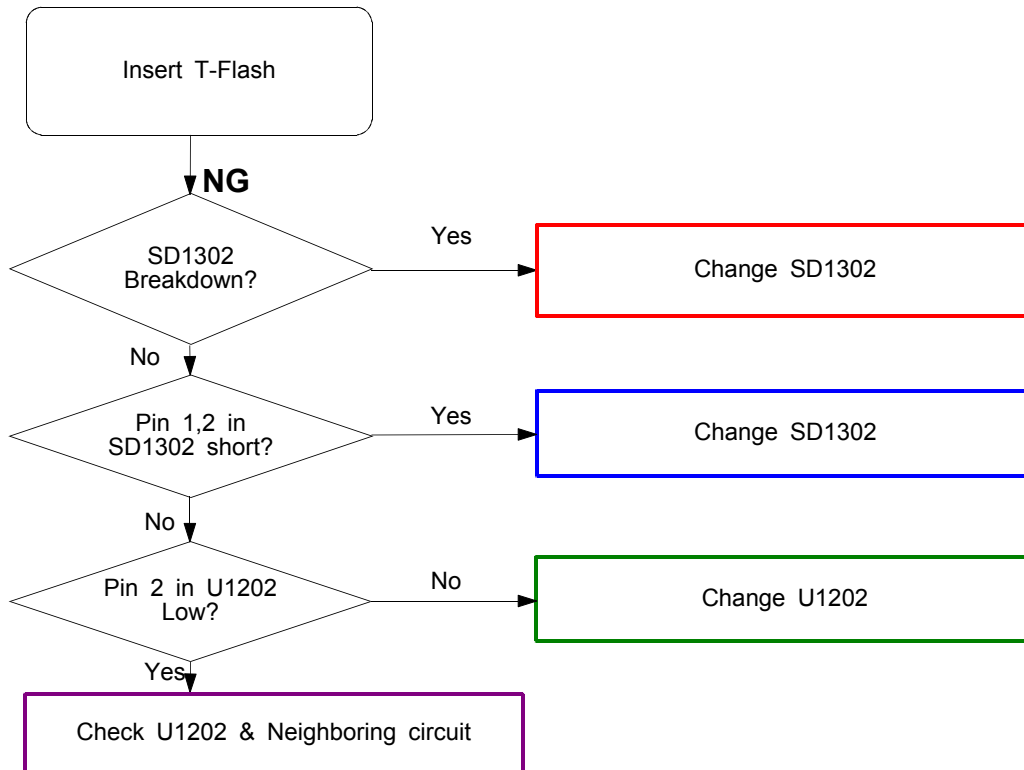

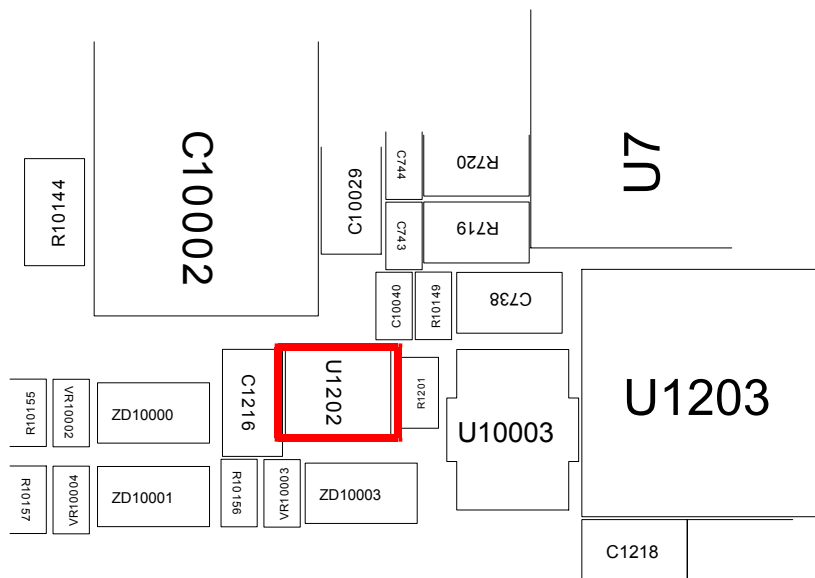
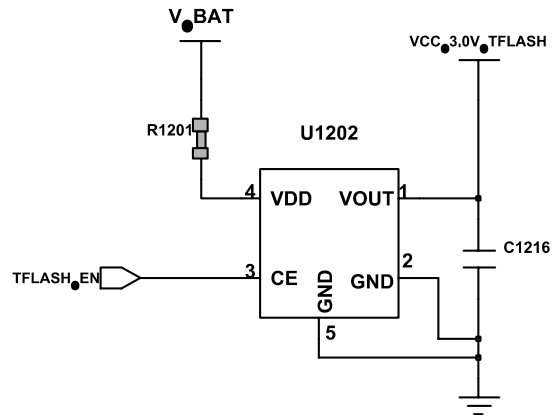



9-7. Bluetooth Working

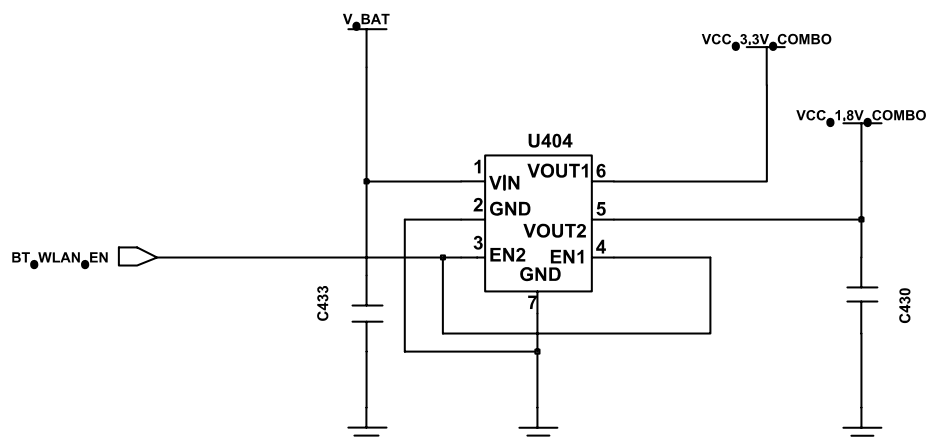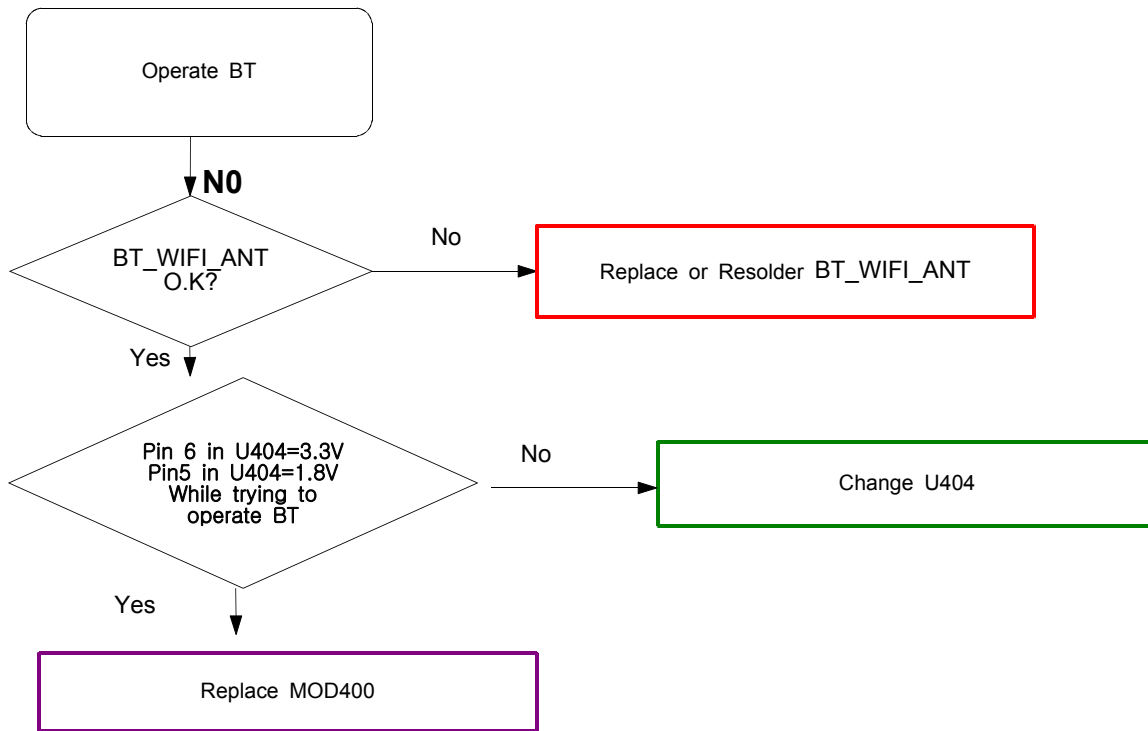

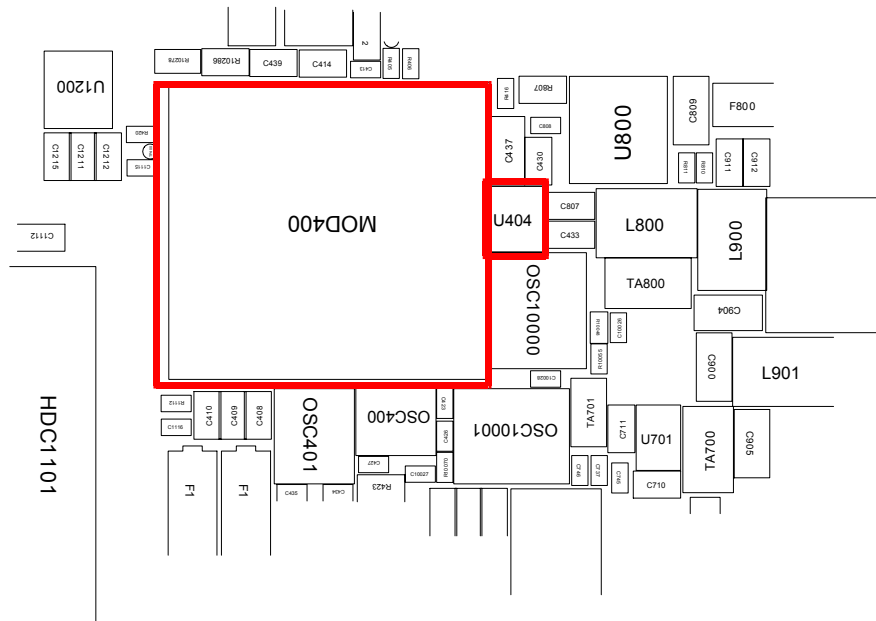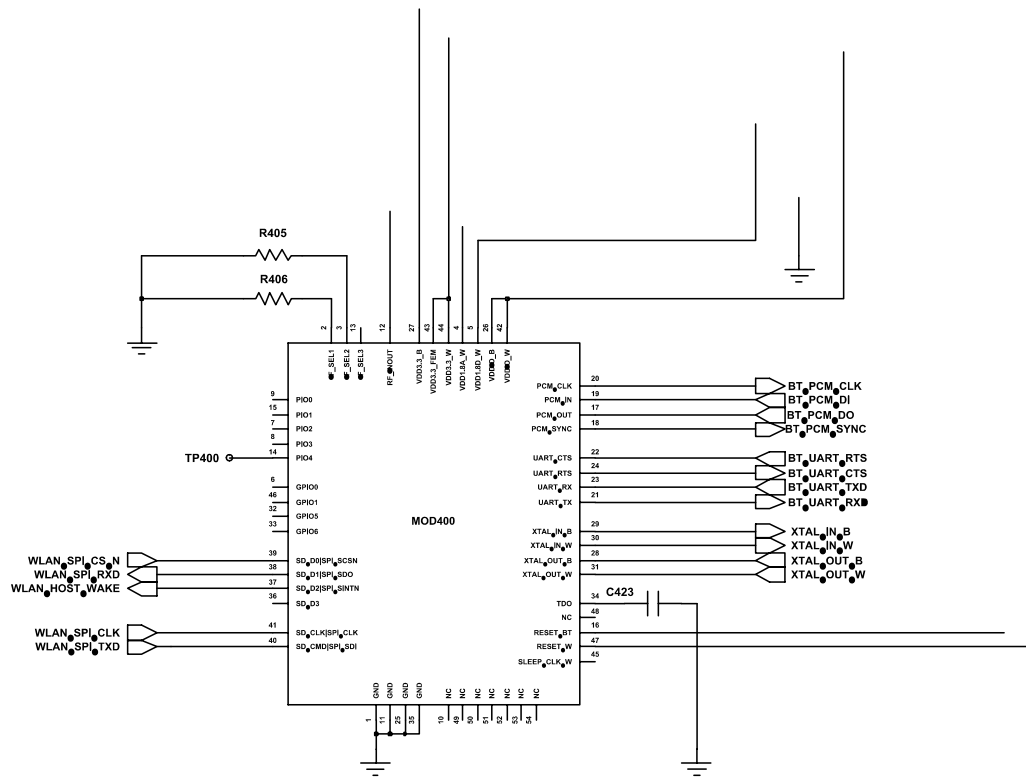




9-8. GSM850 Receiver

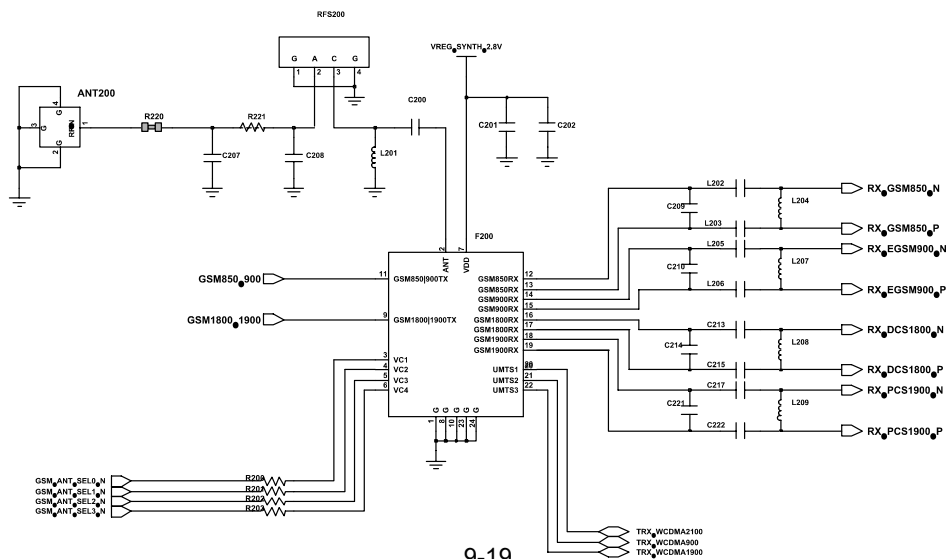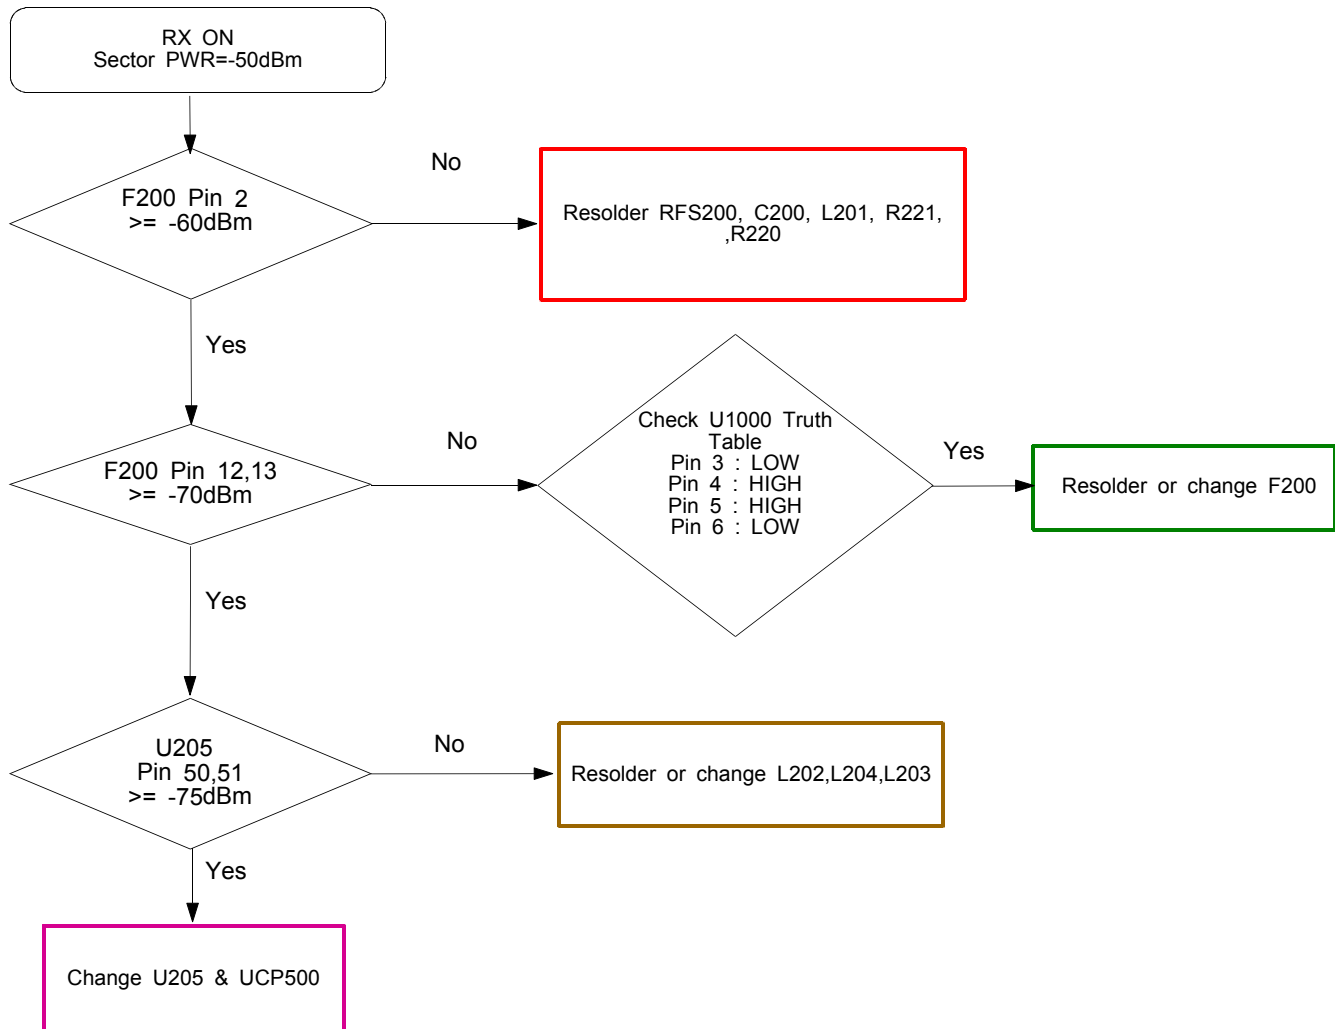


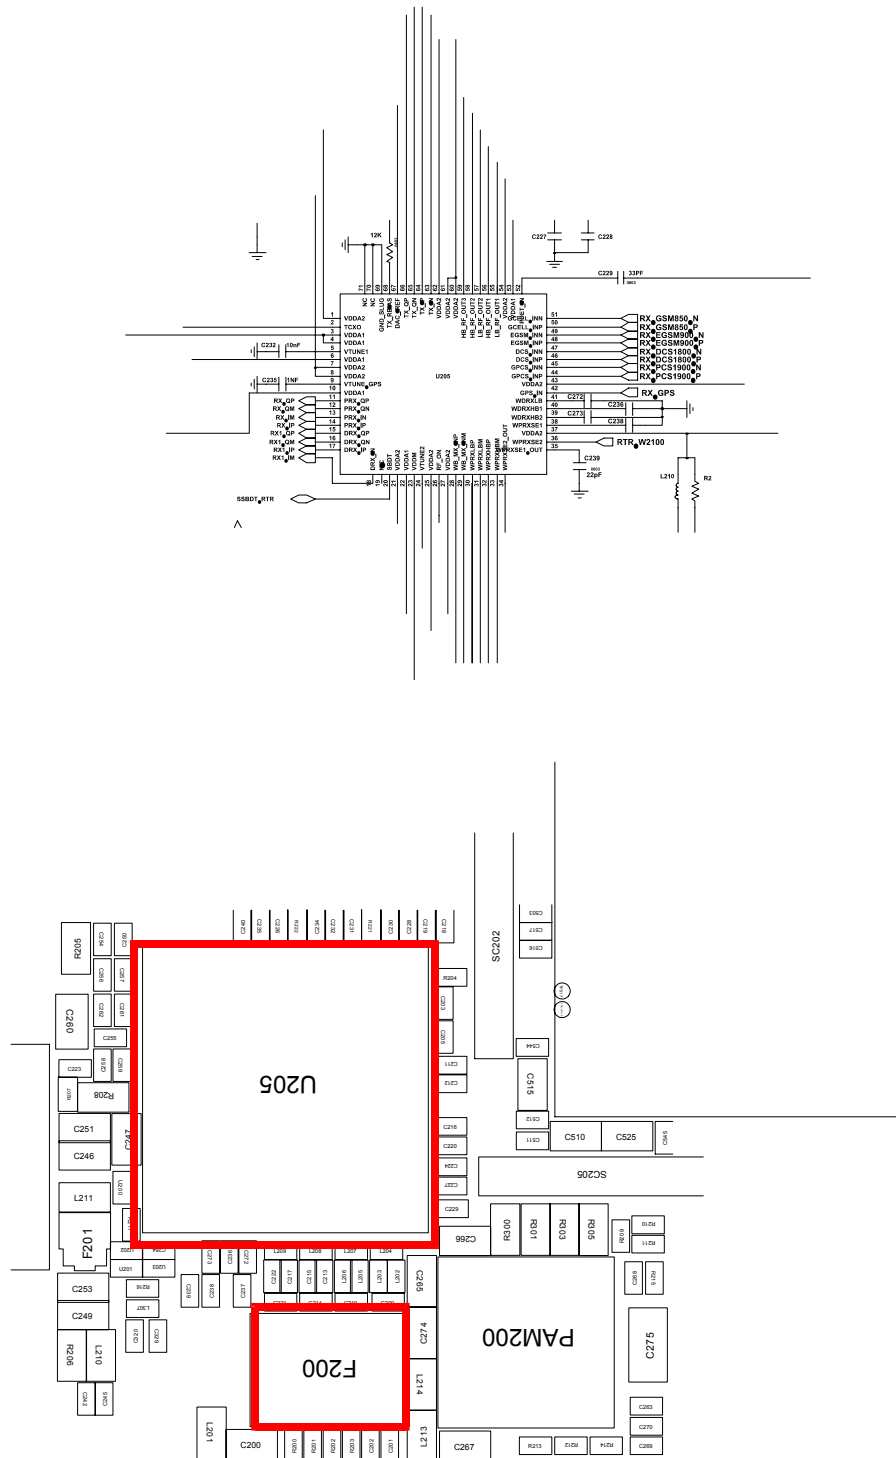



9-9. GSM850 Transmitter

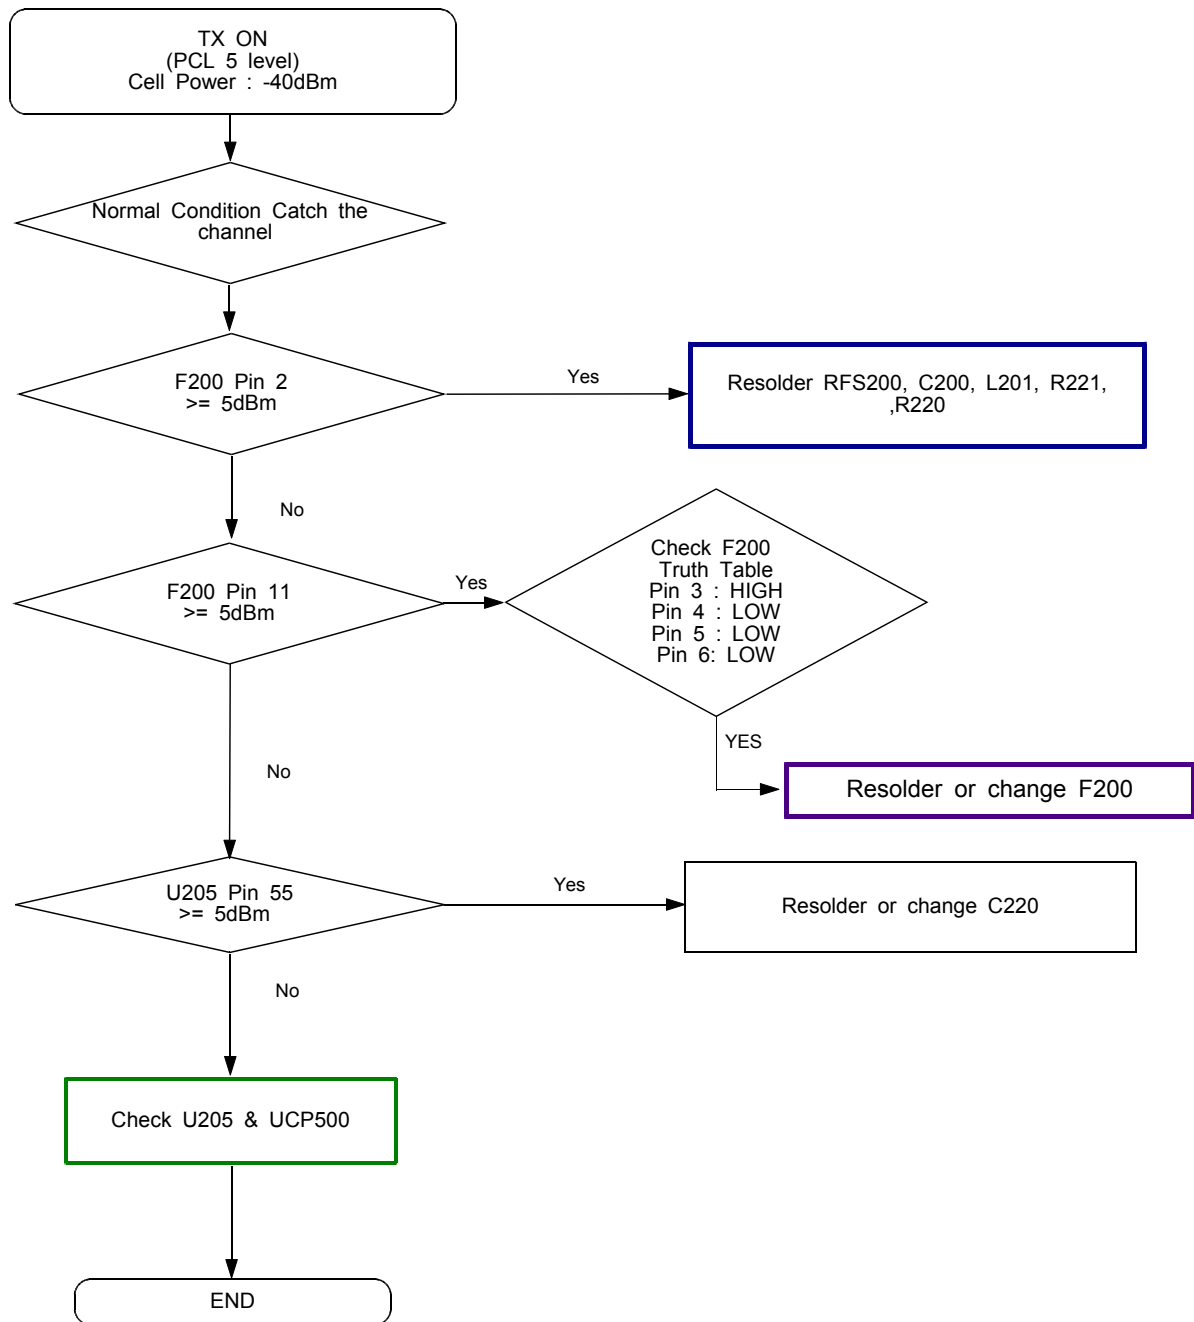


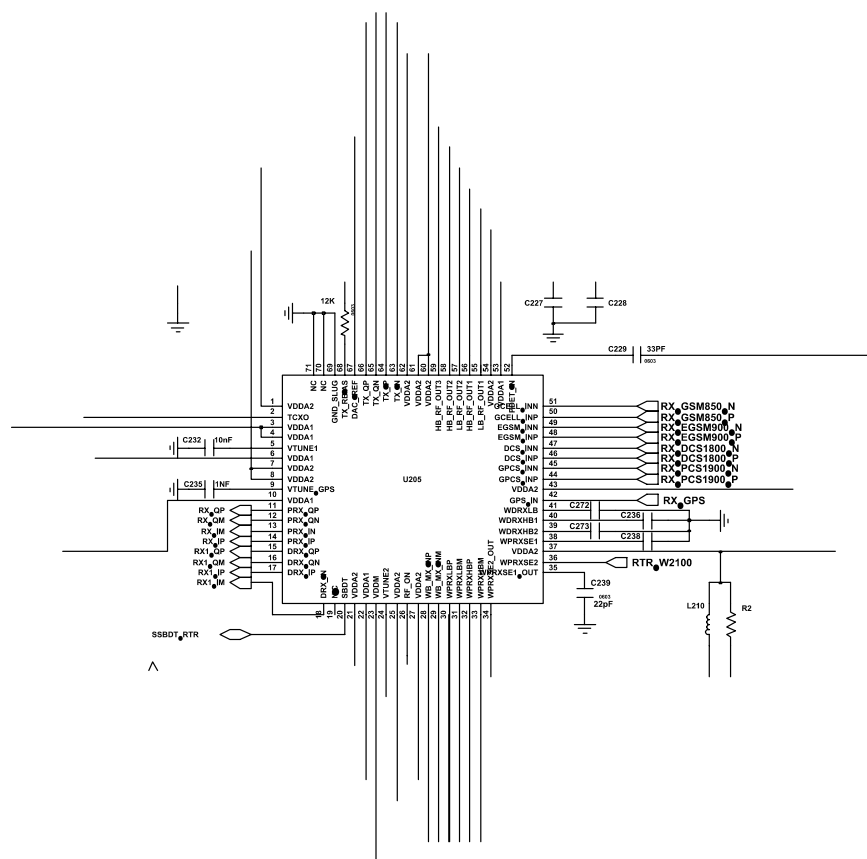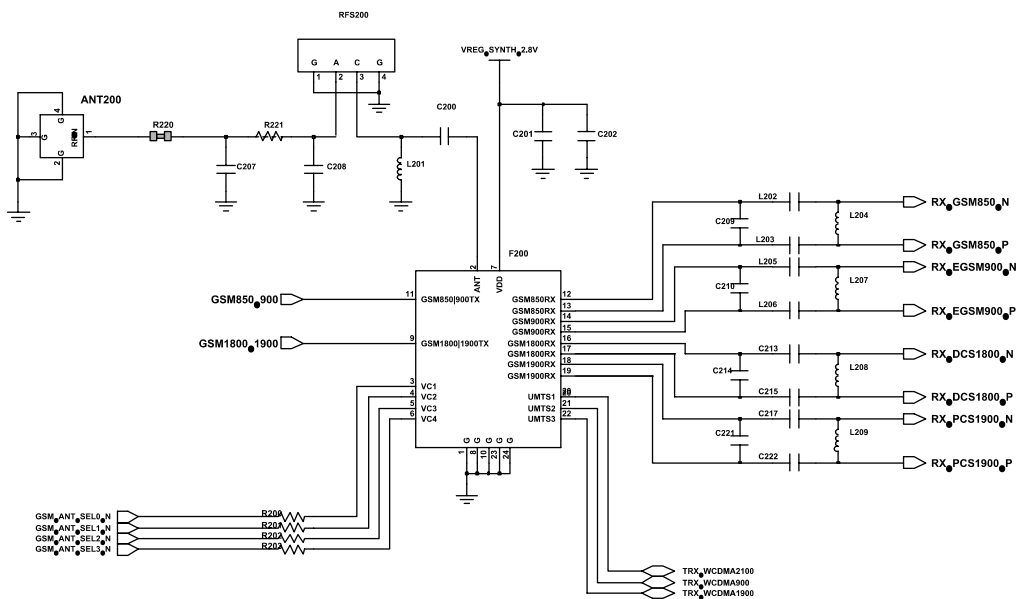

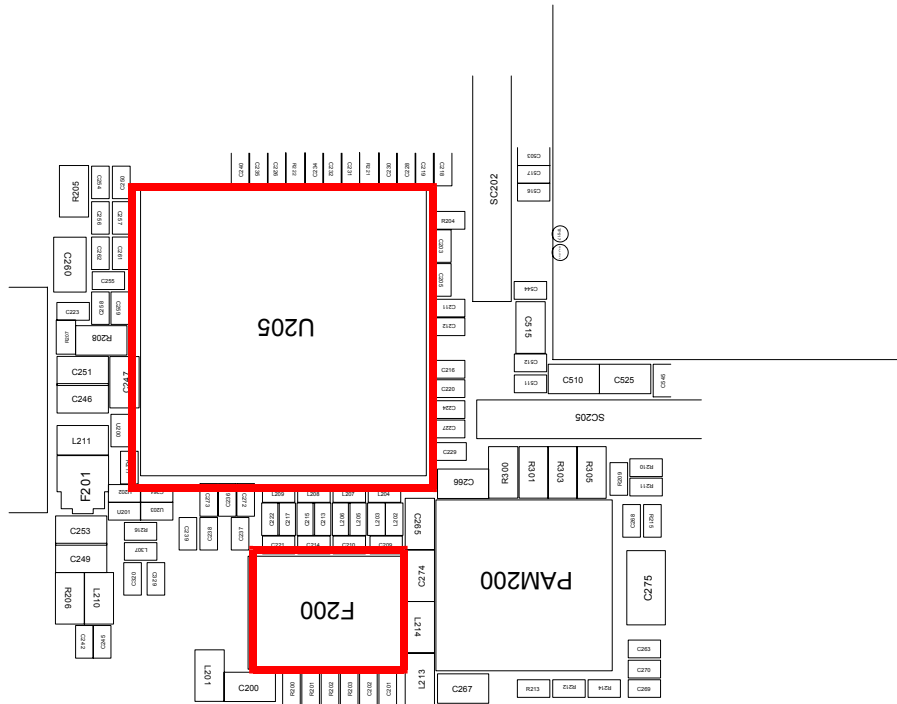



9-10. GSM900 Receiver

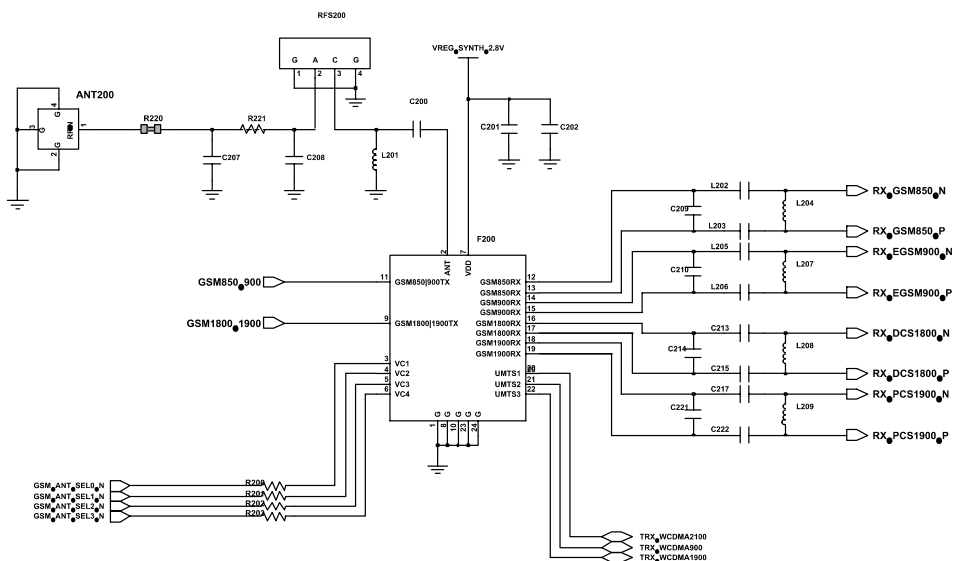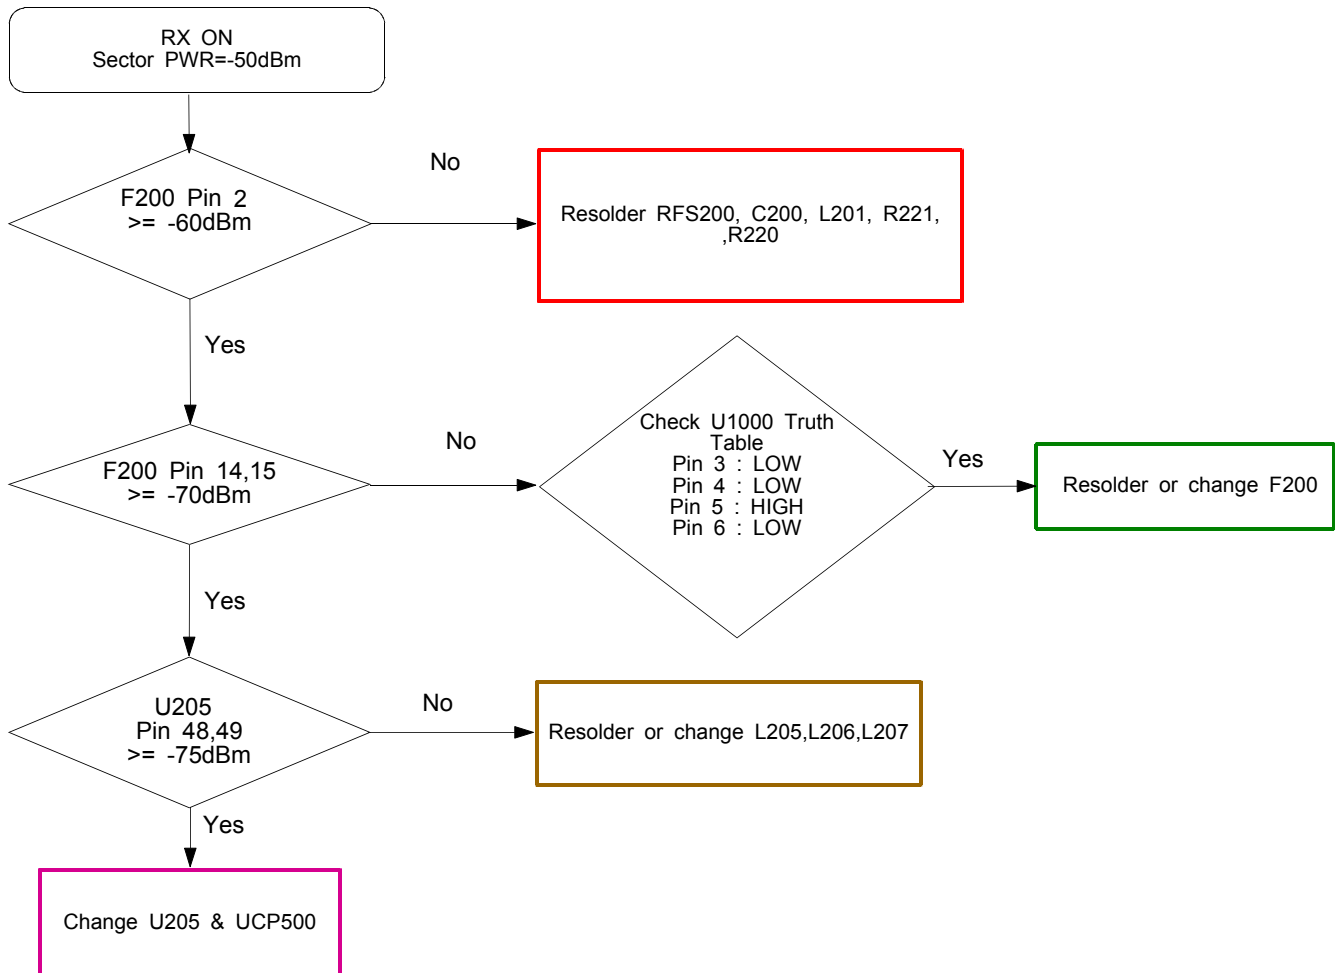


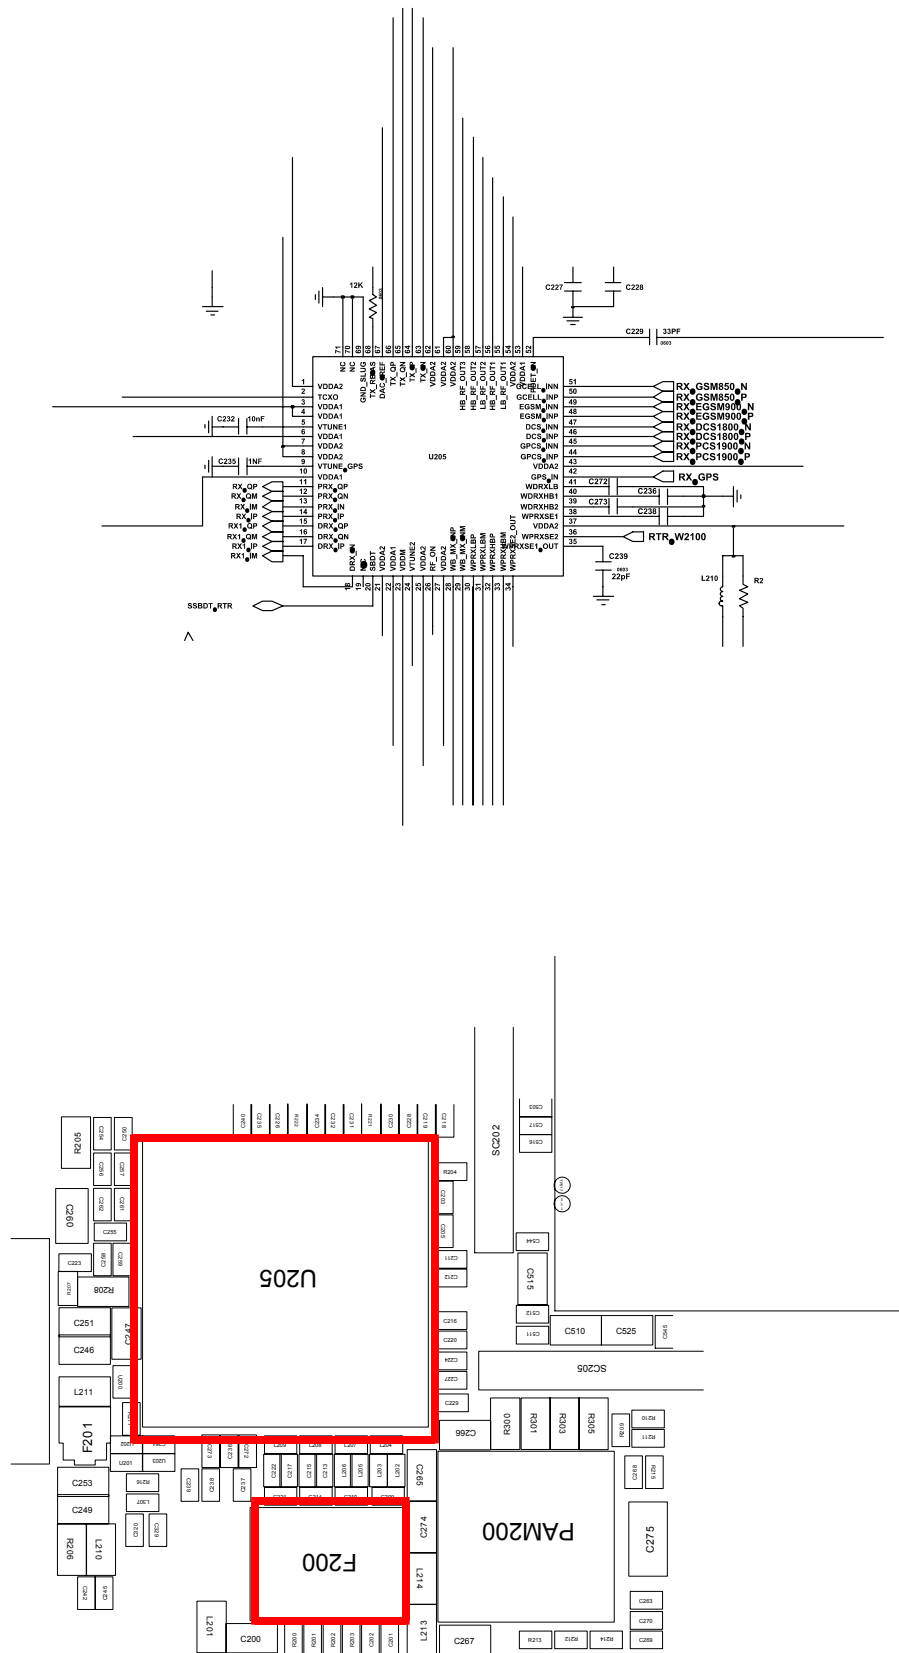



9-11. GSM900 Transmitter

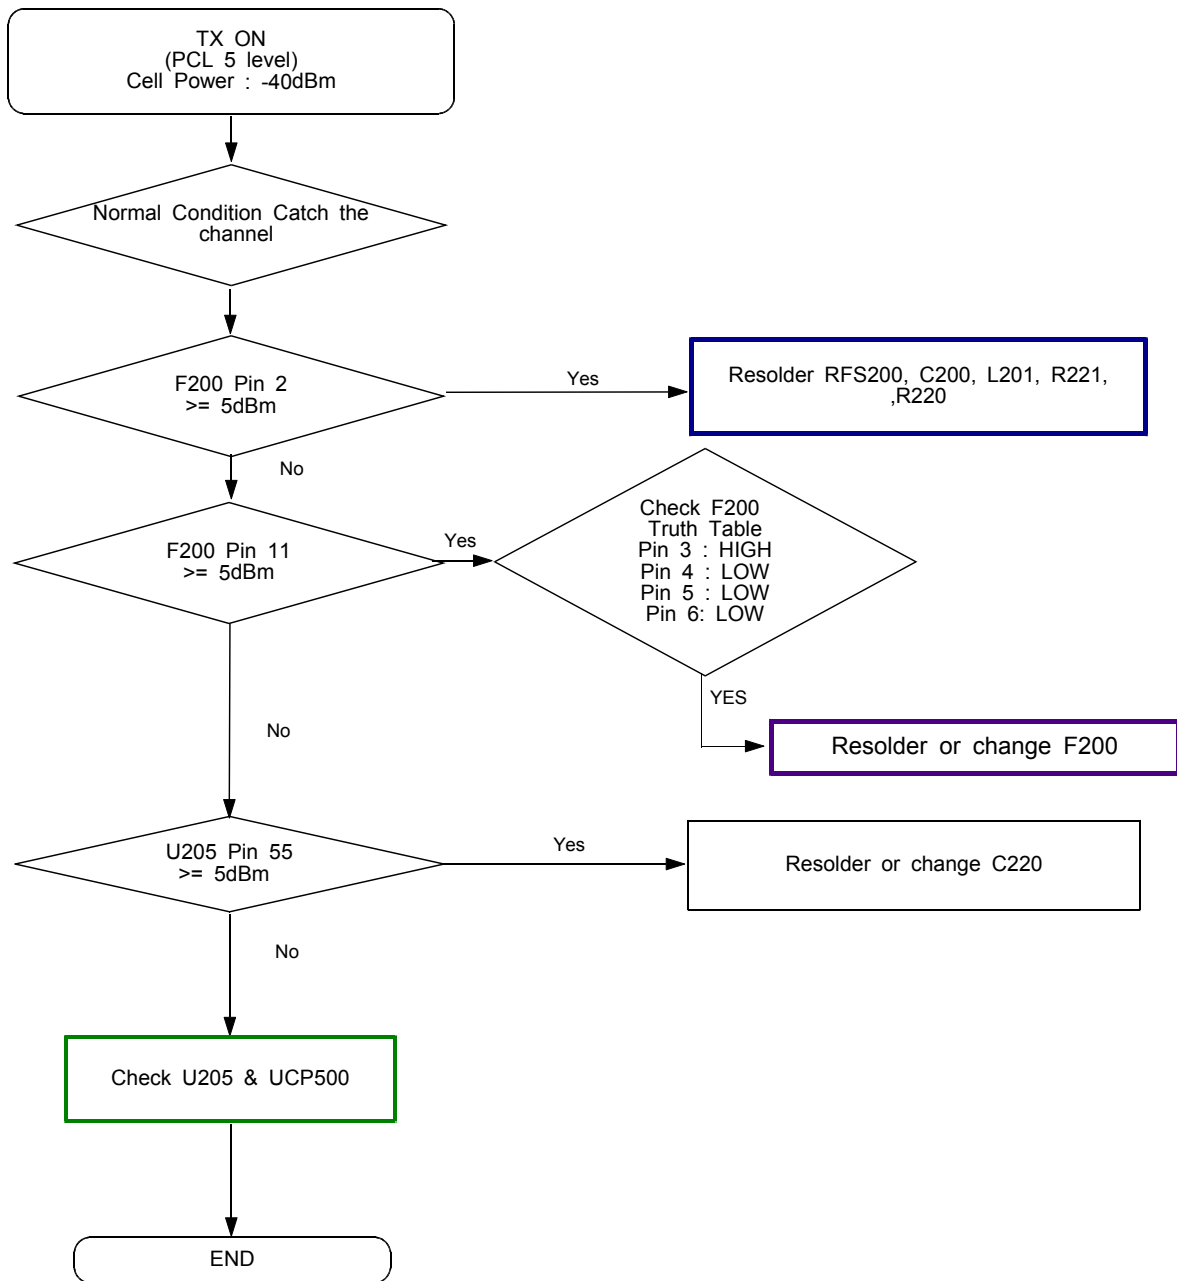


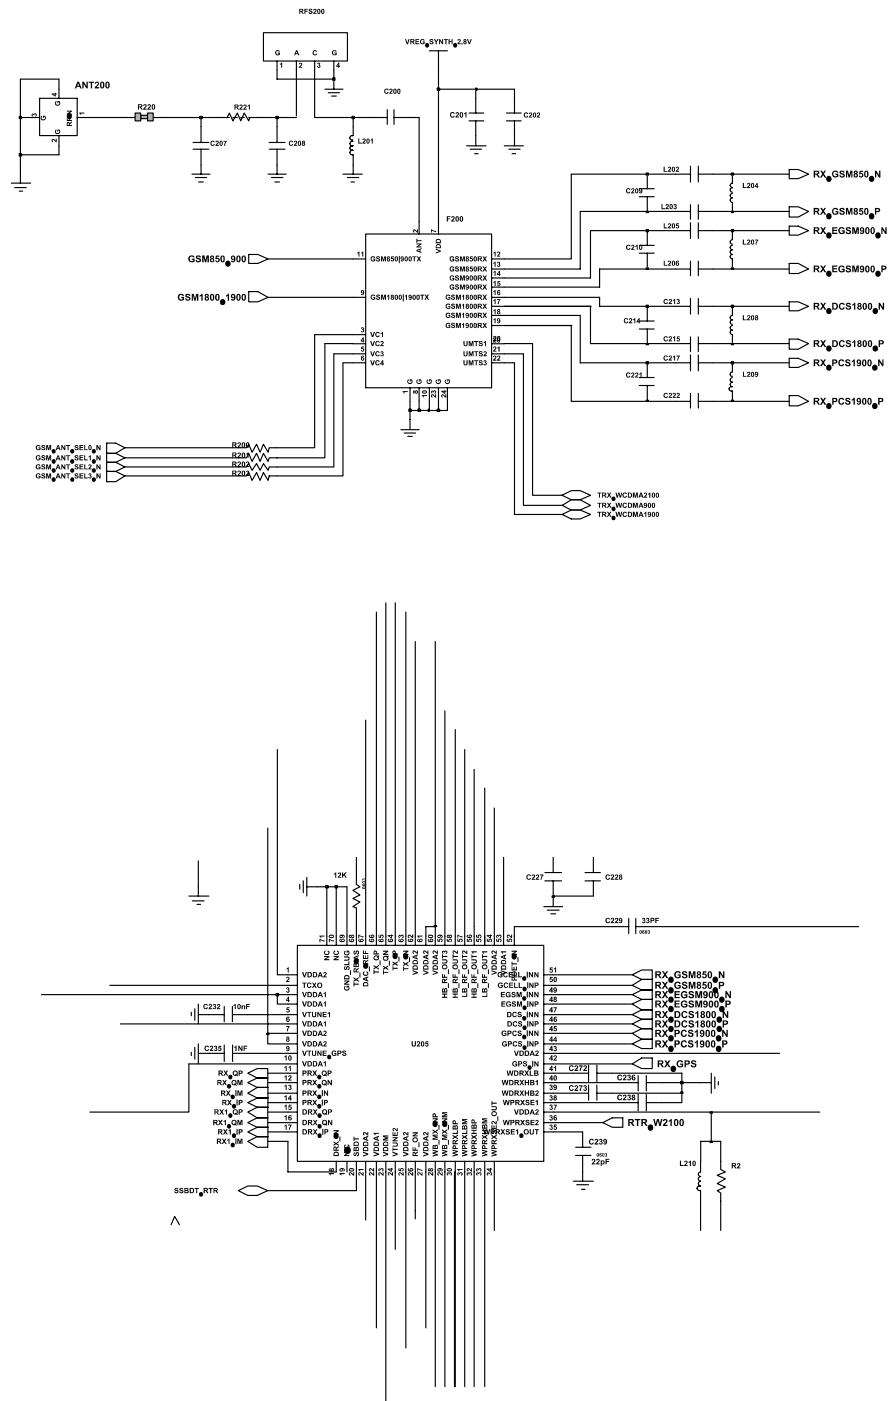


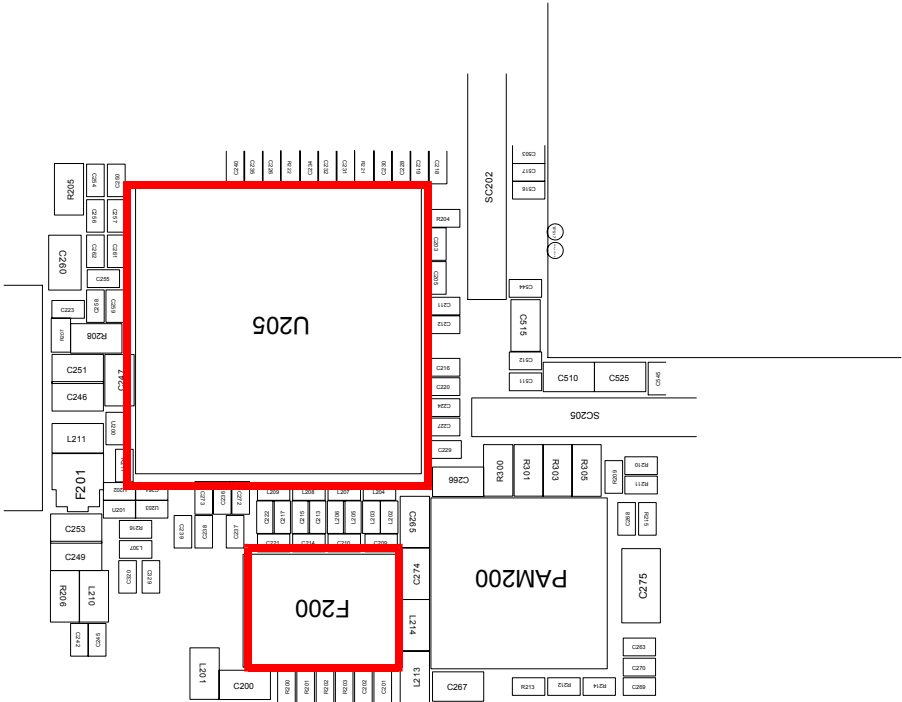



9-12. DCS Receiver

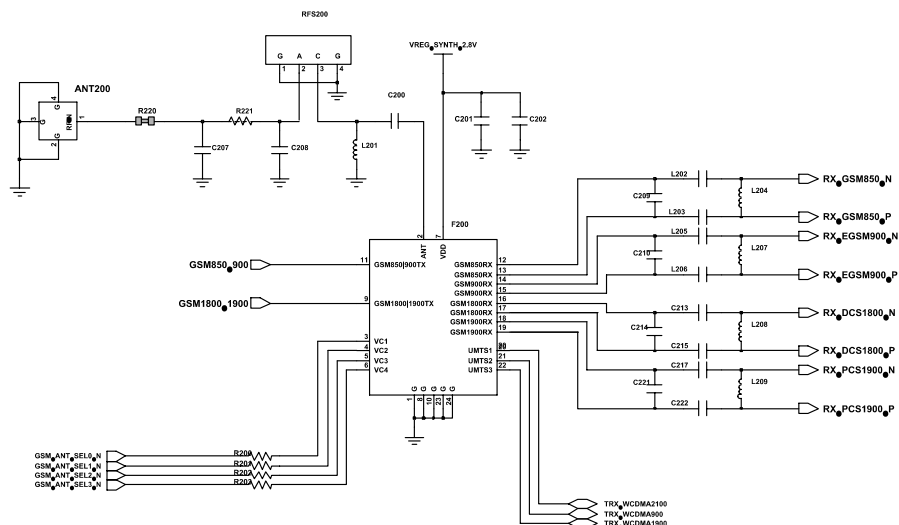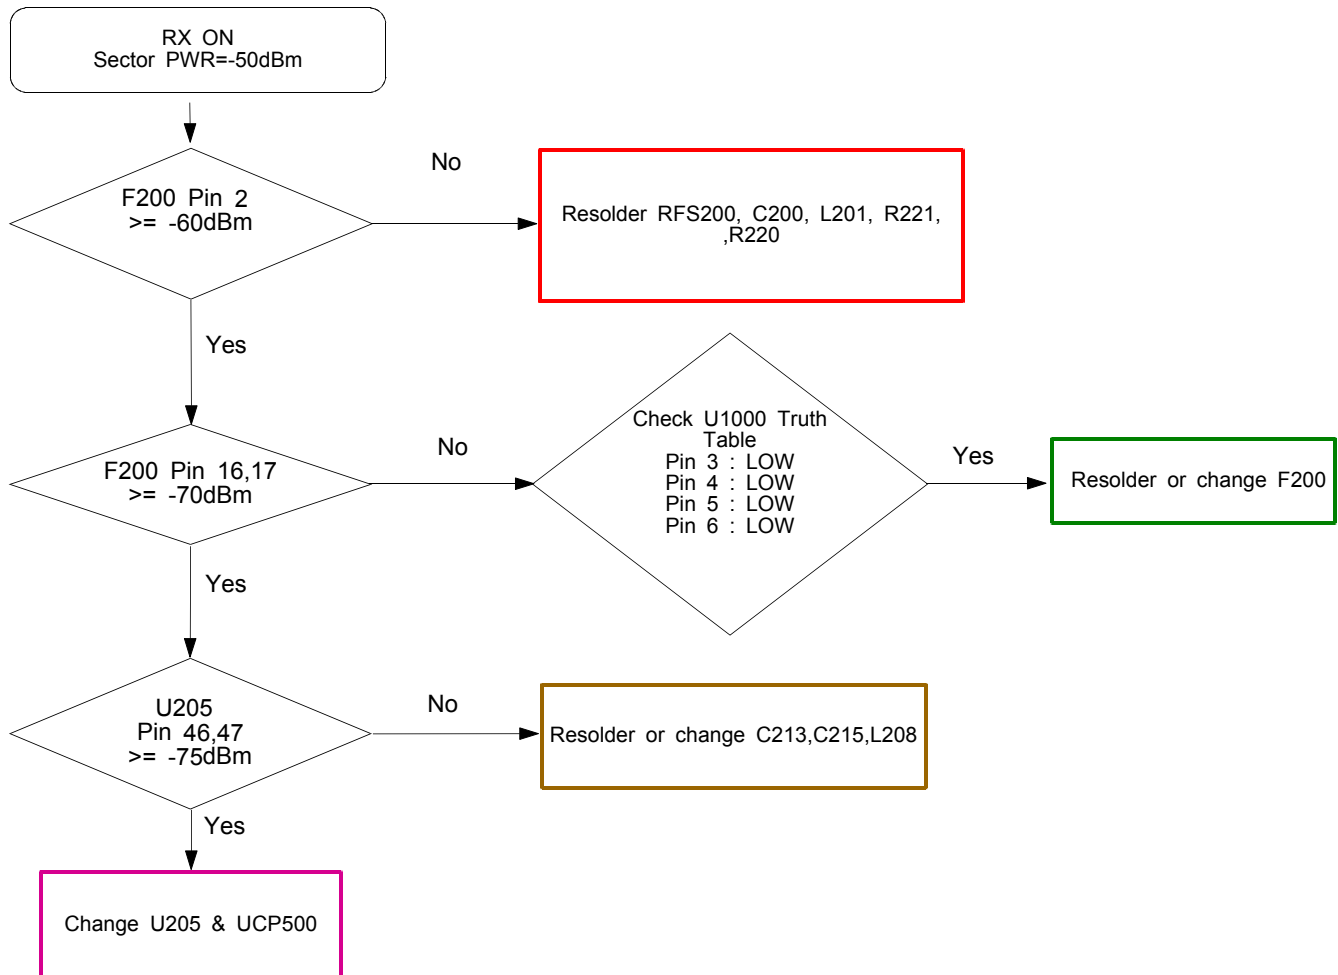


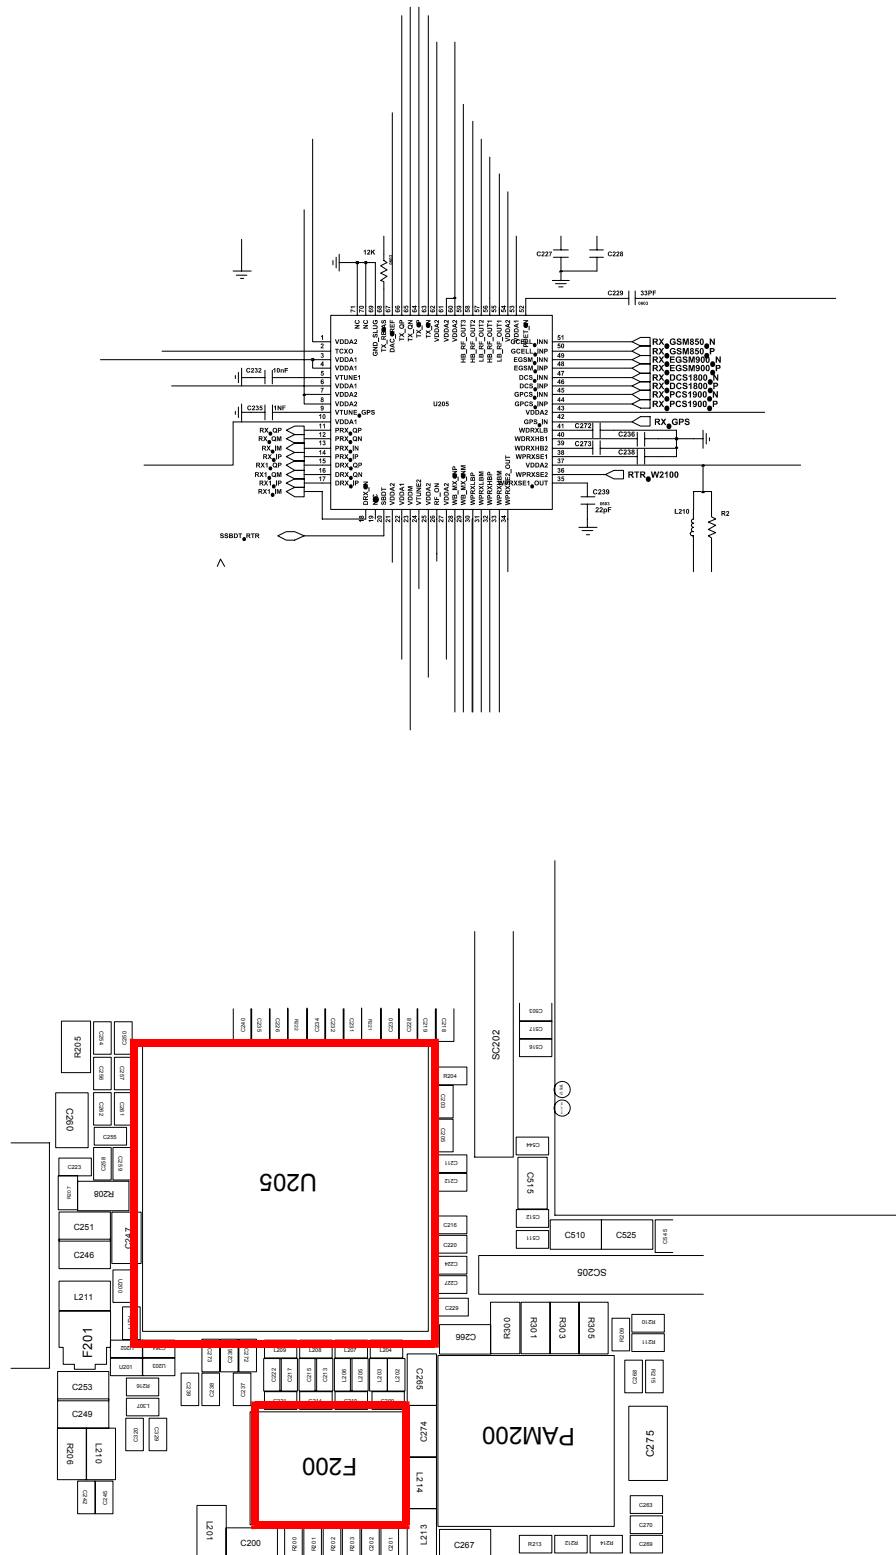


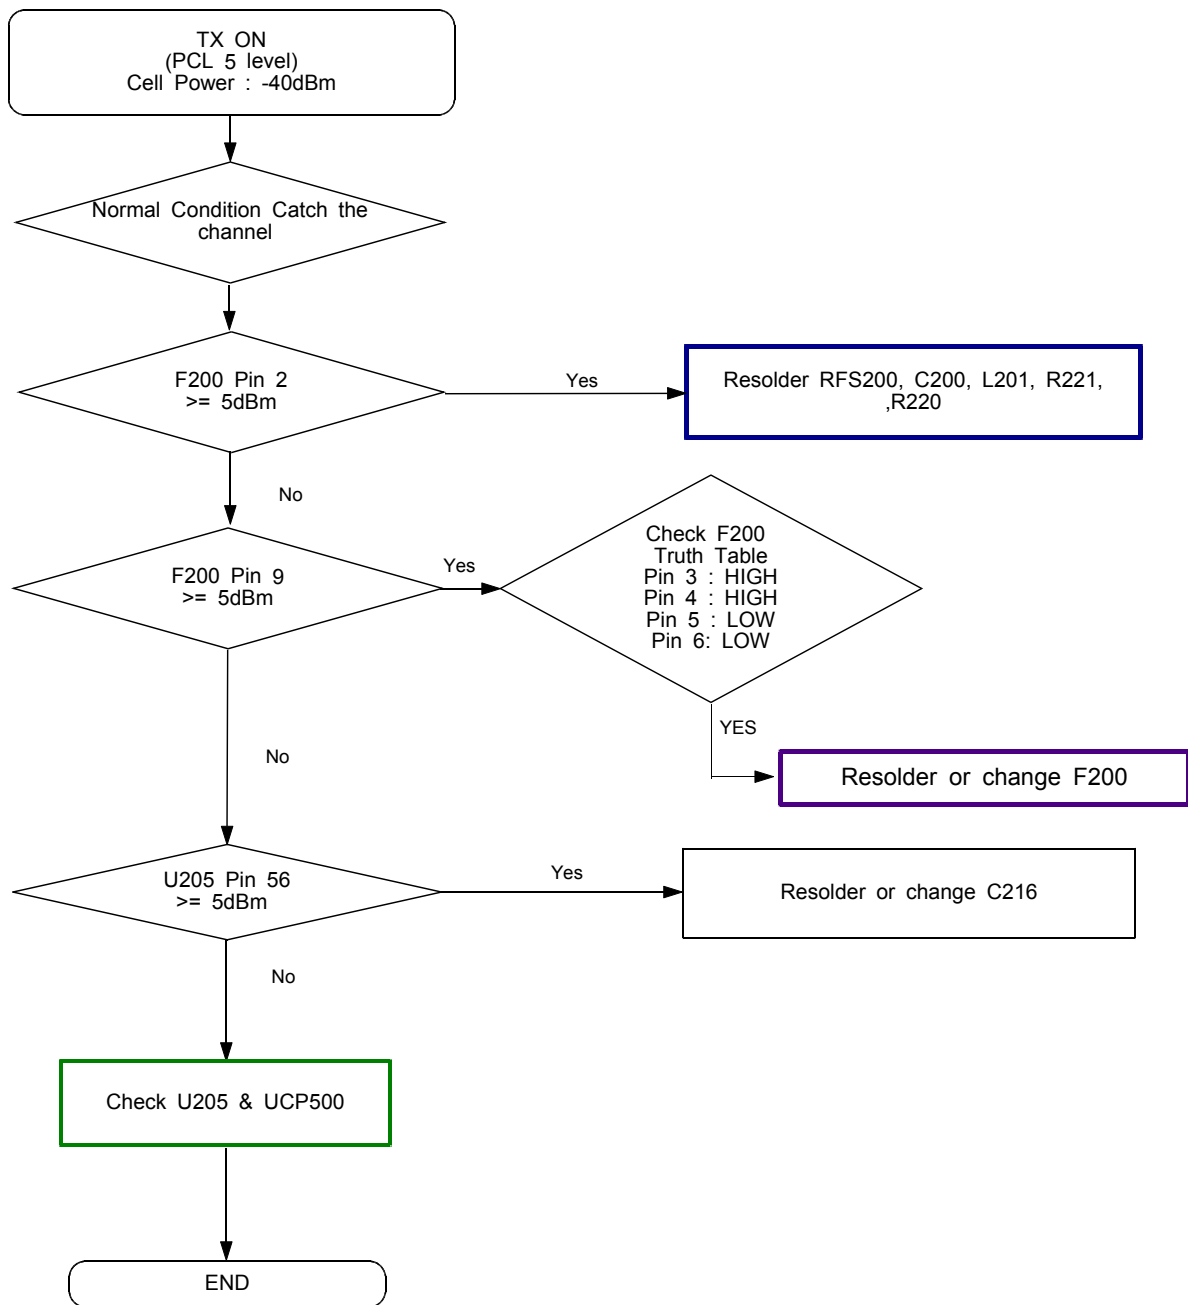
9-13. DCS Transmitter

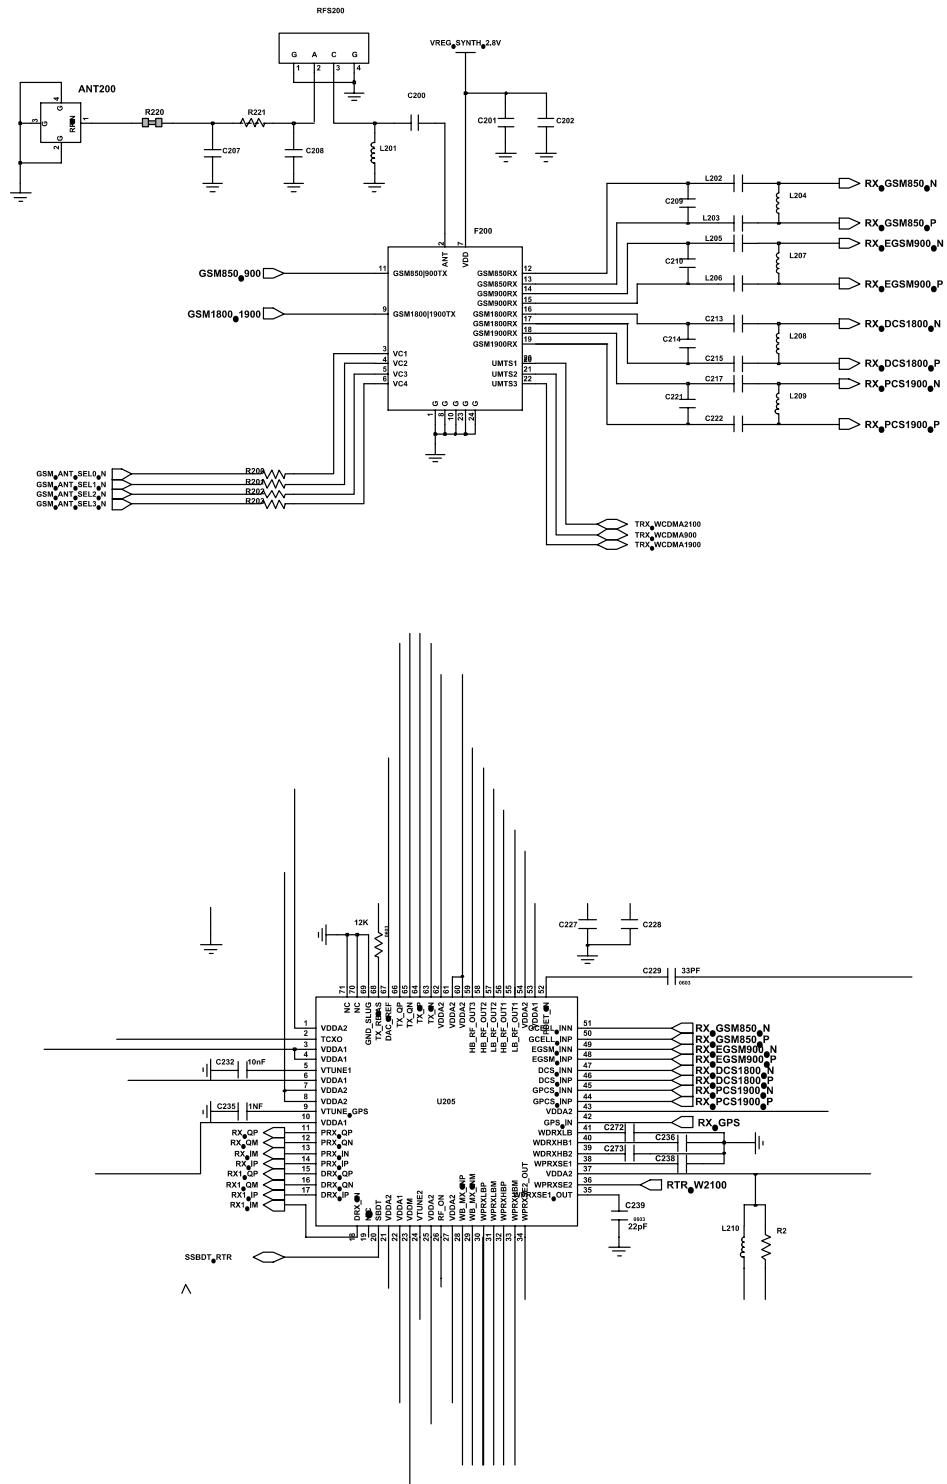

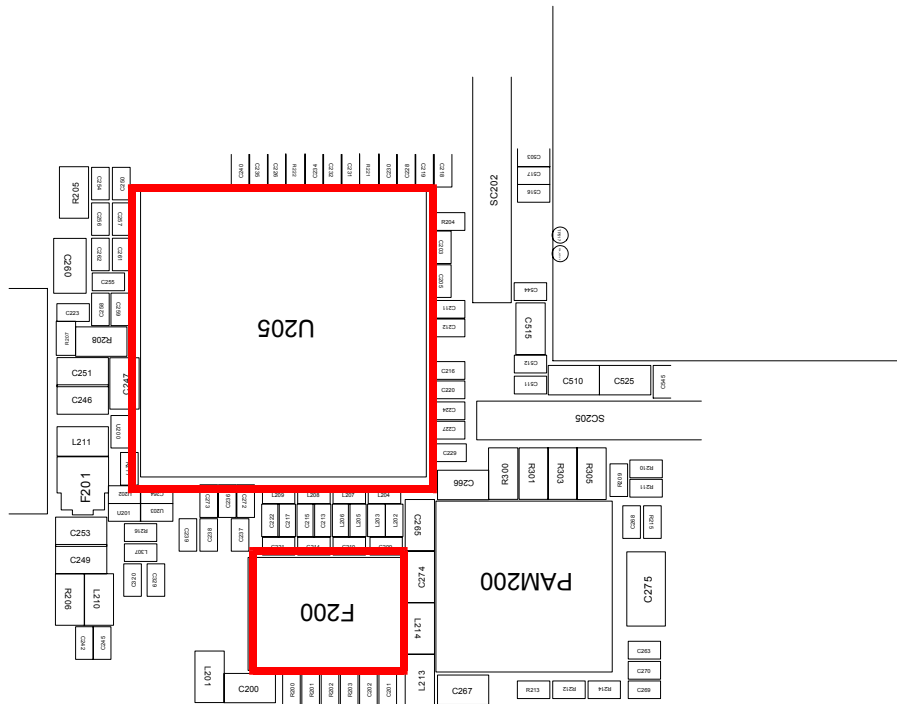



9-14. PCS Receiver

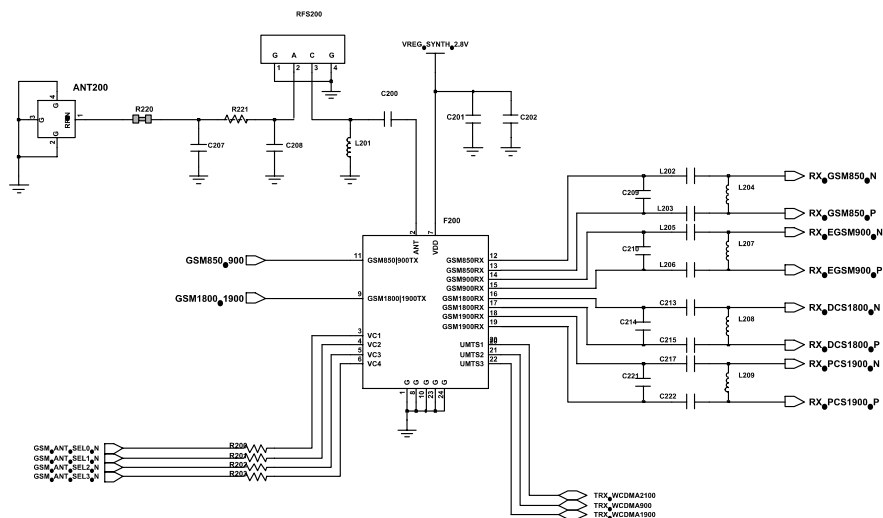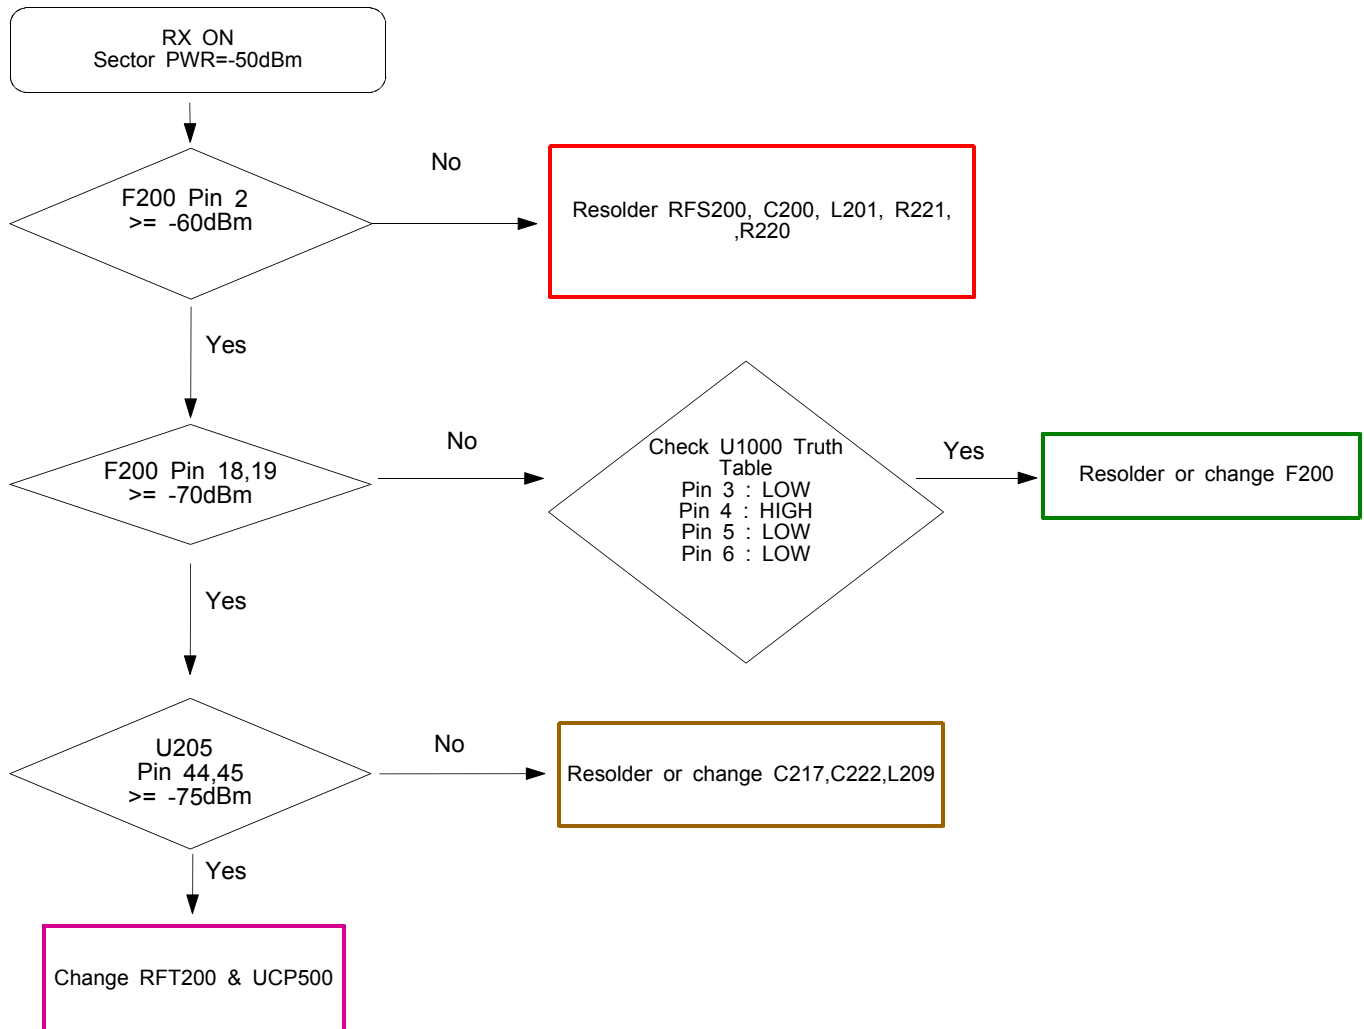



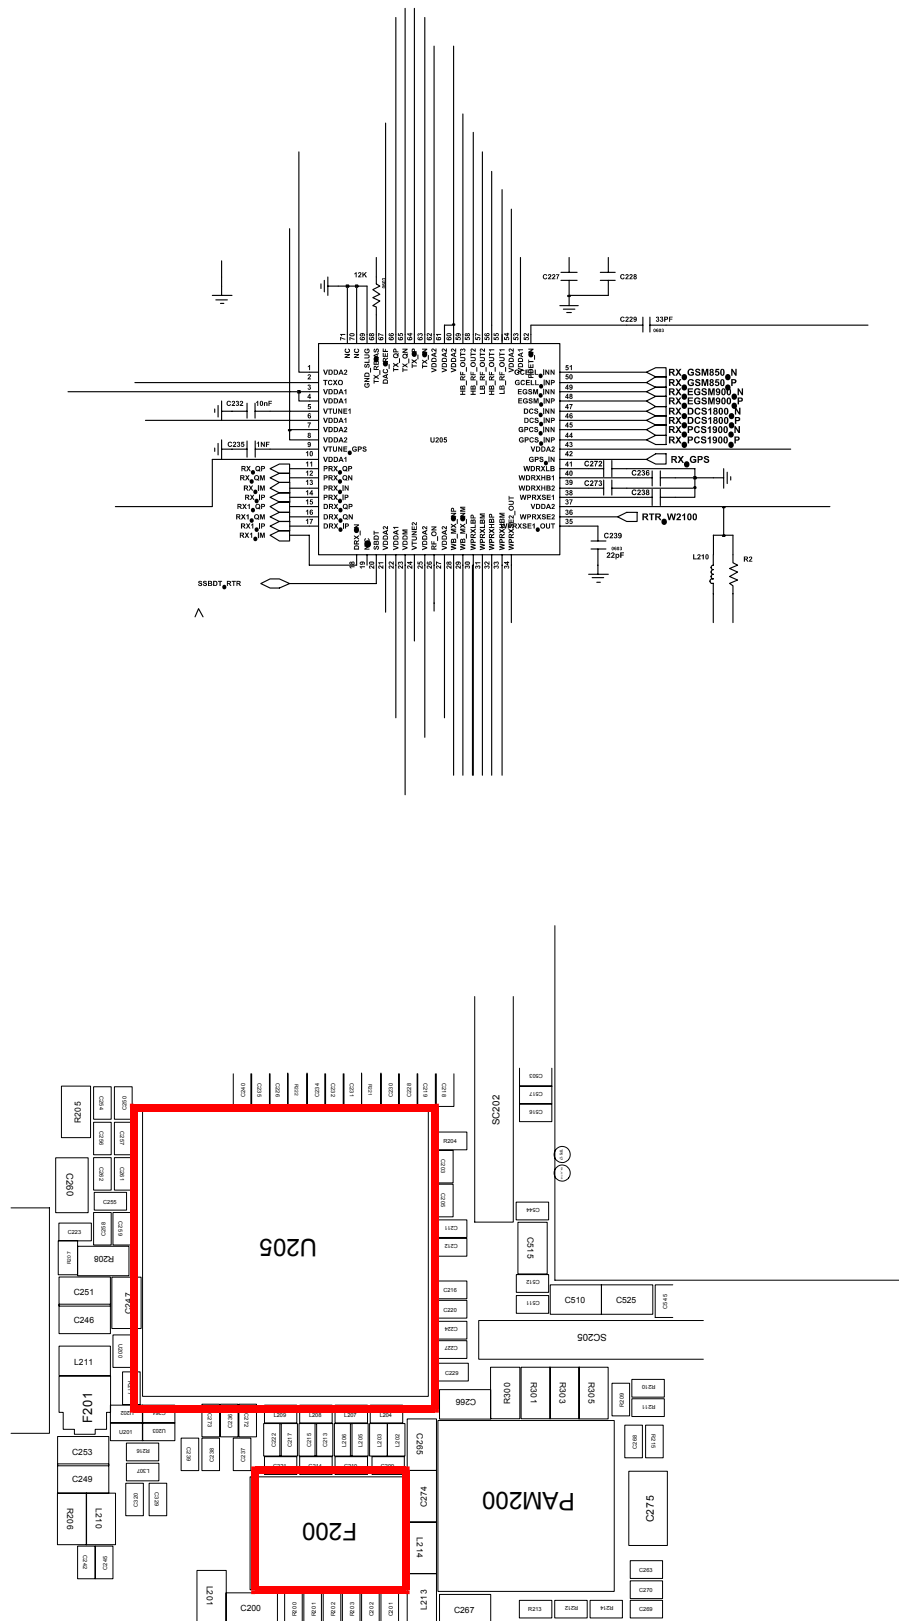


9-15. PCS Transmitter

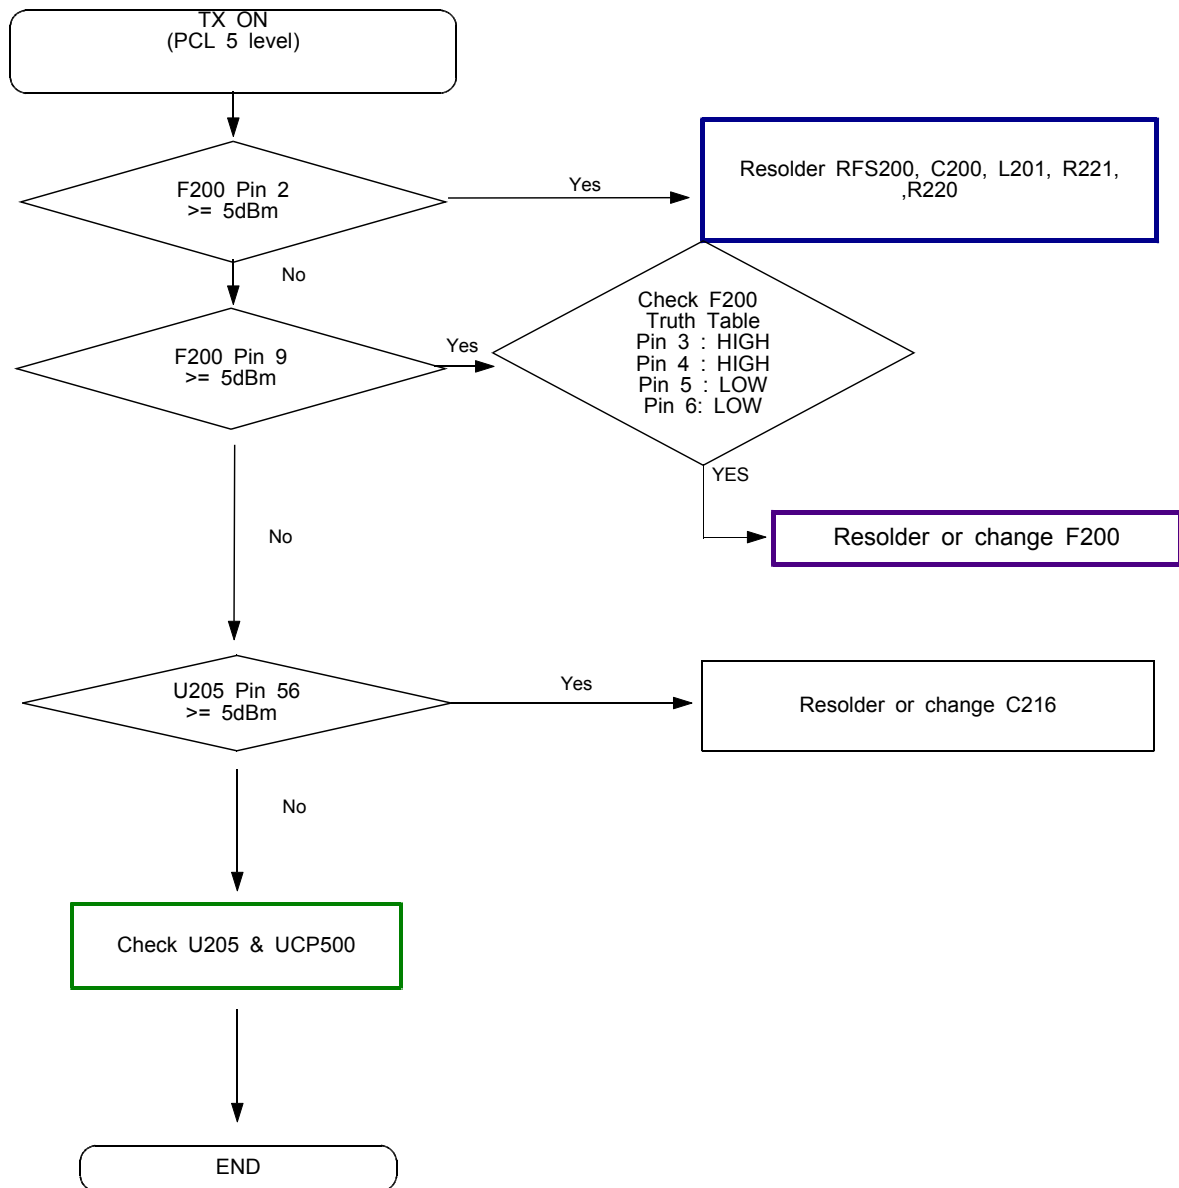


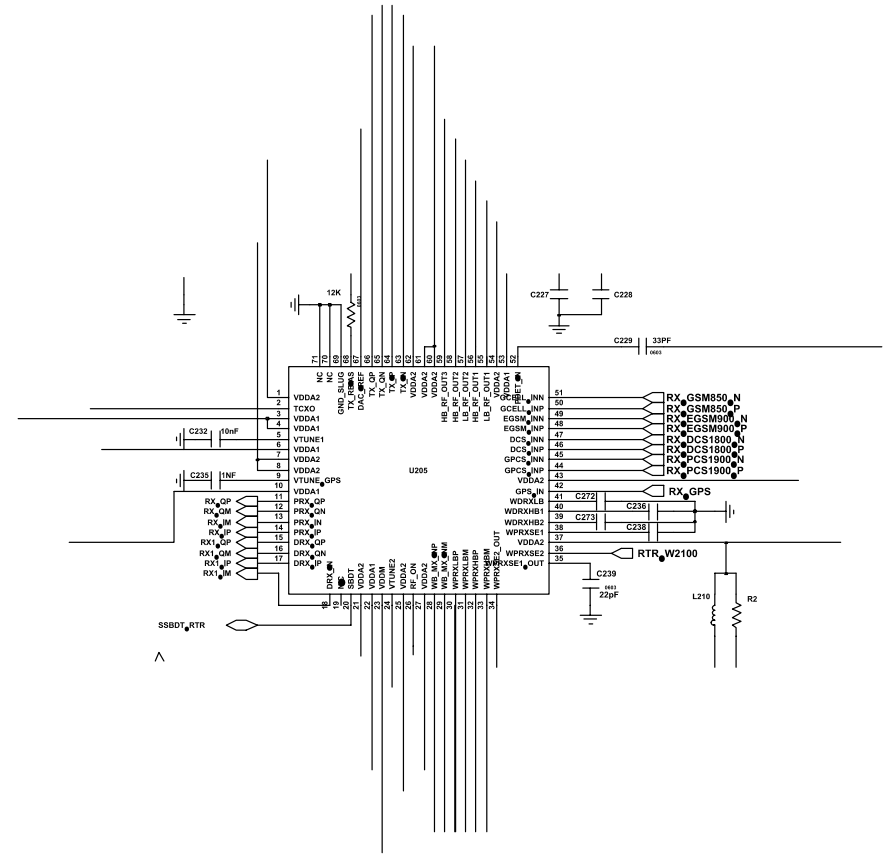





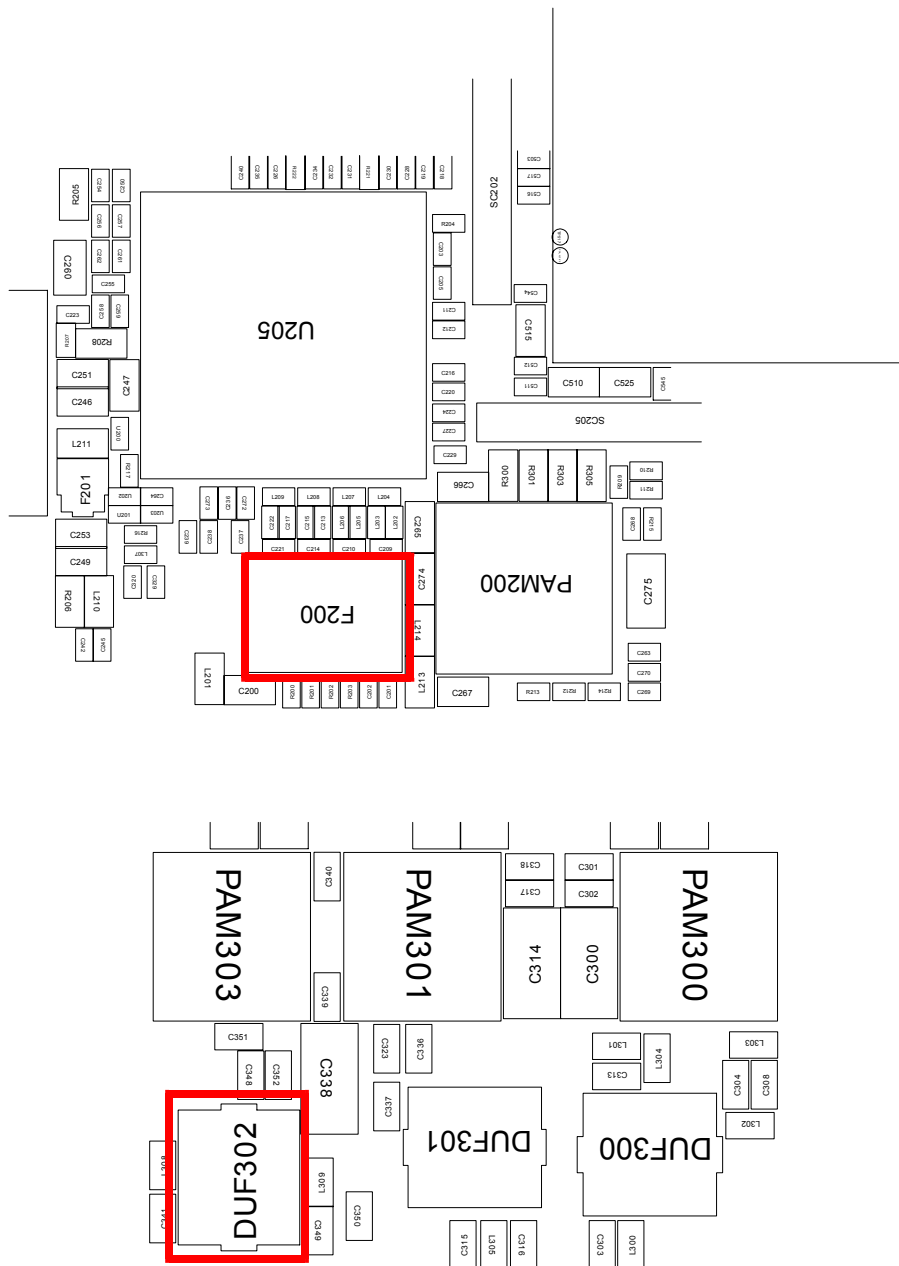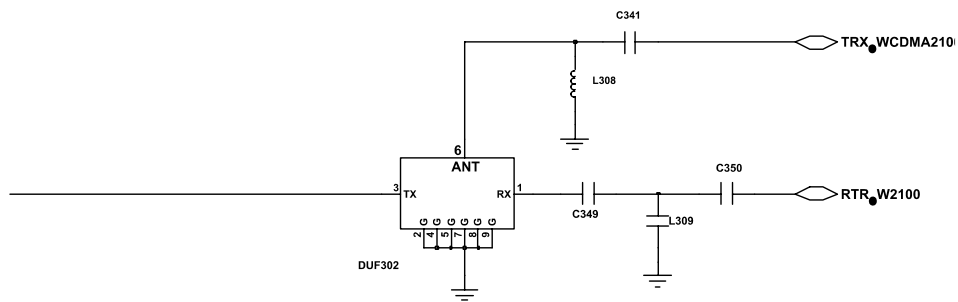


9-17. WCDMA 2100 Transmitter


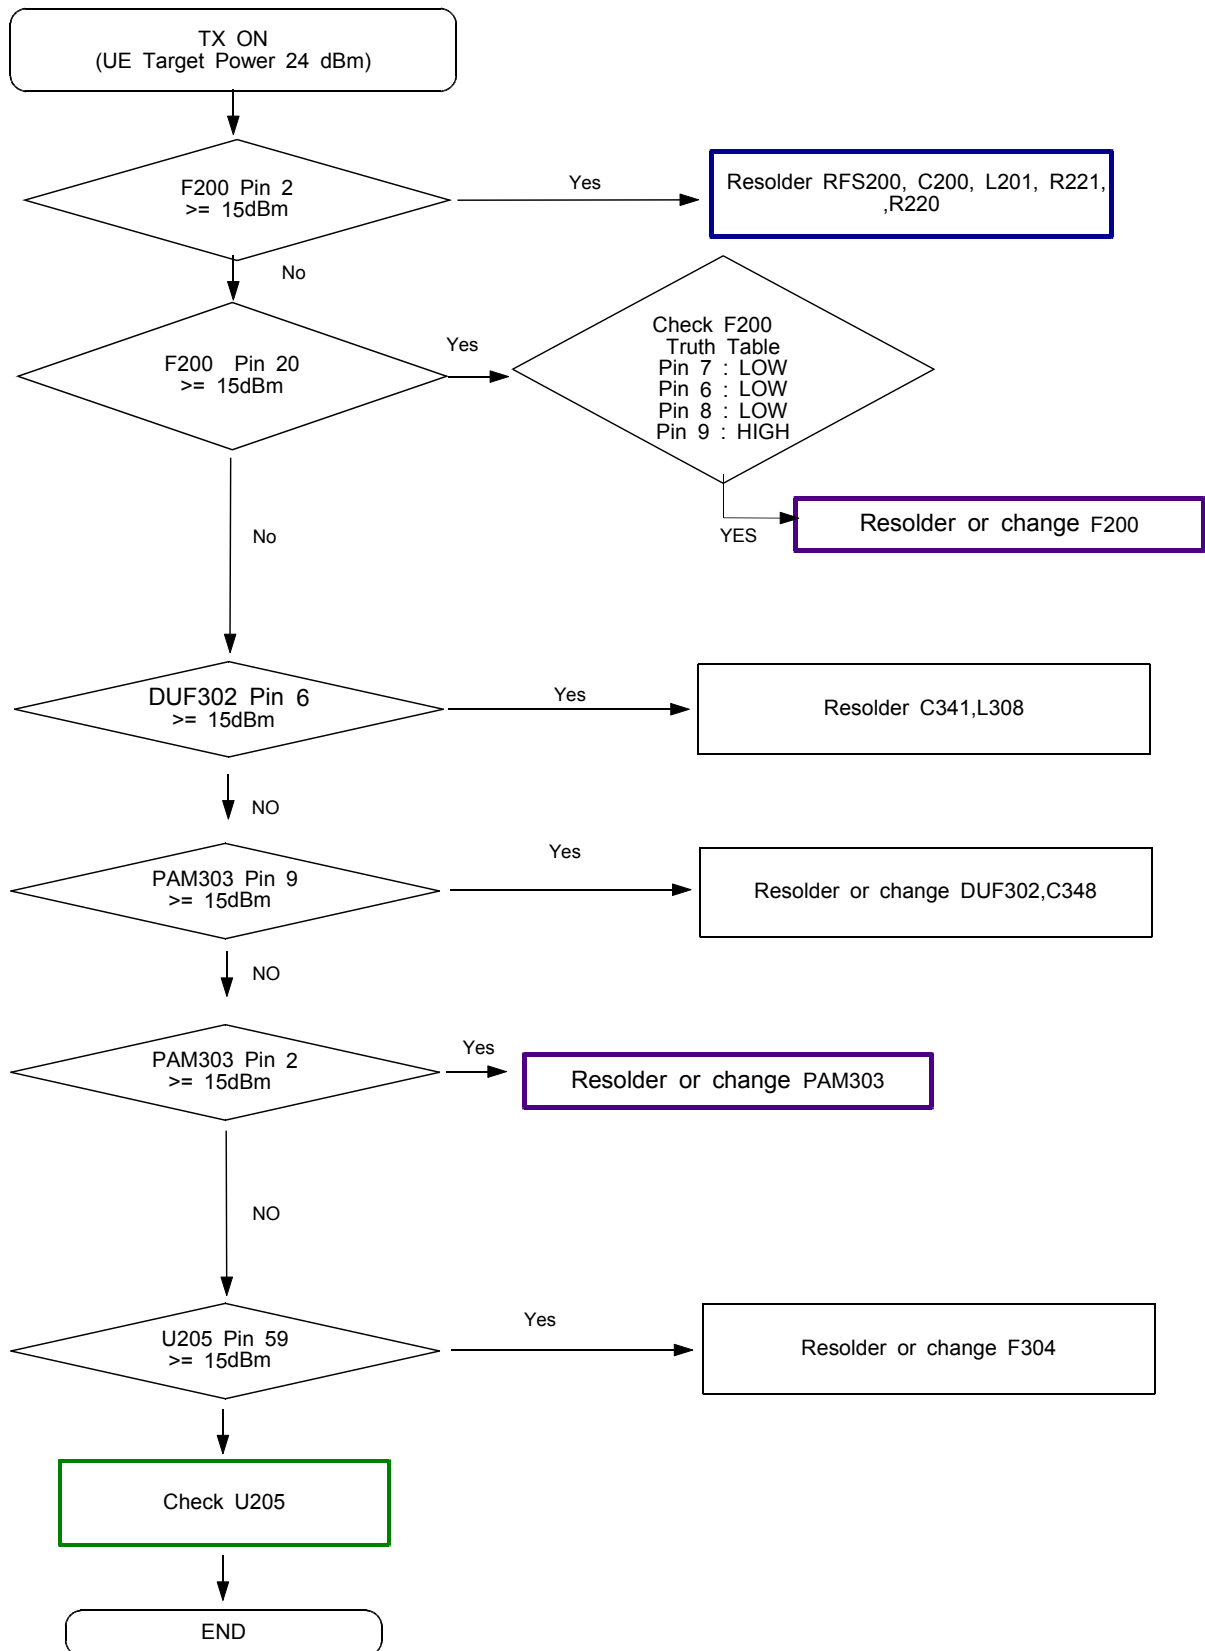


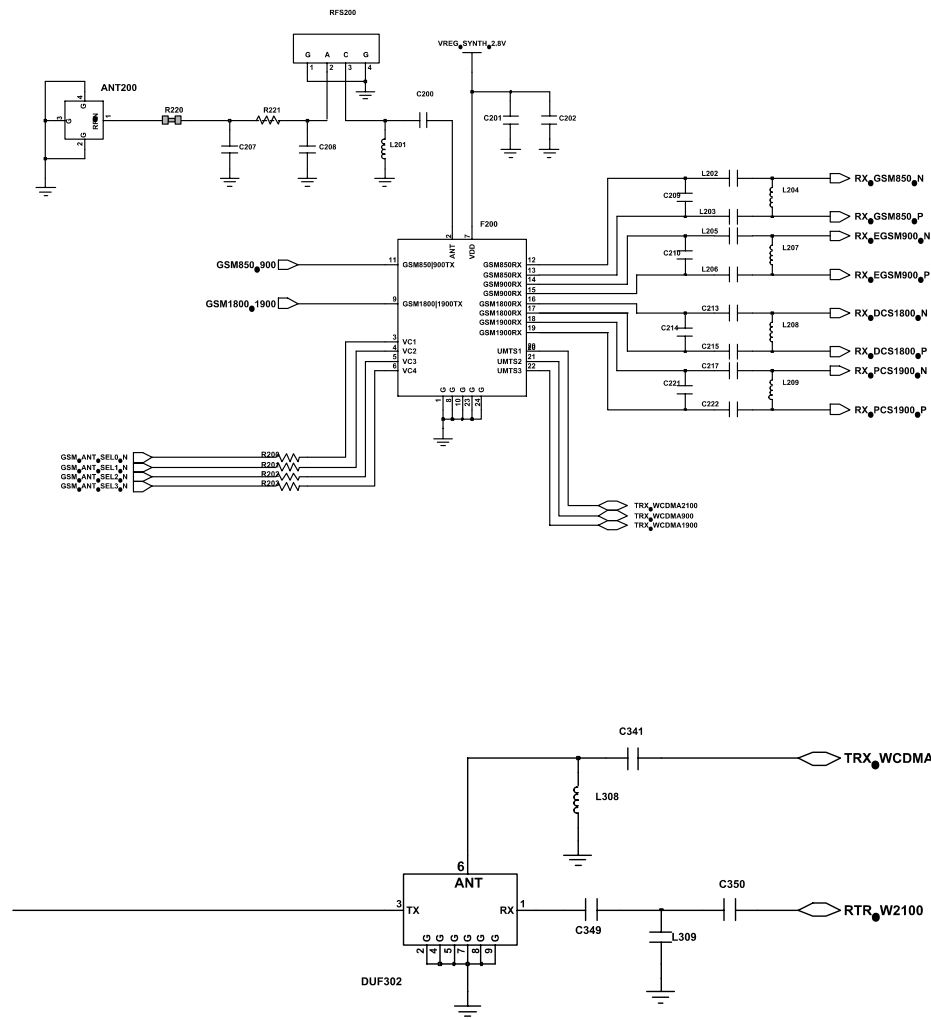





9-18. WCDMA 1900 Receiver


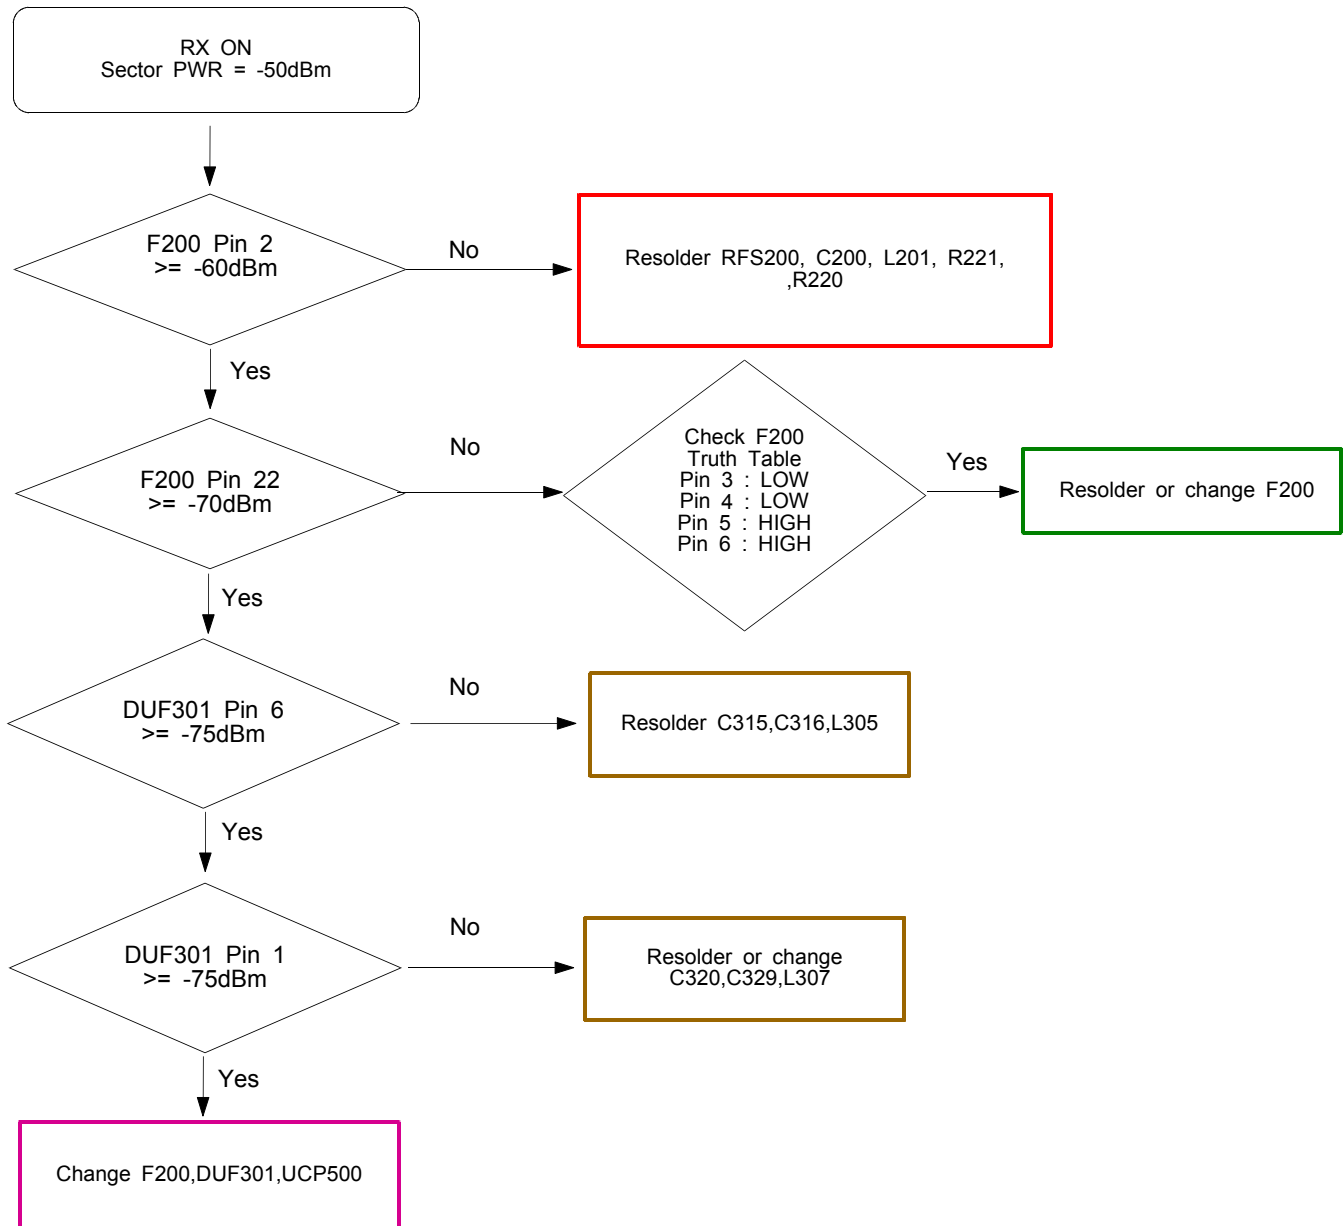


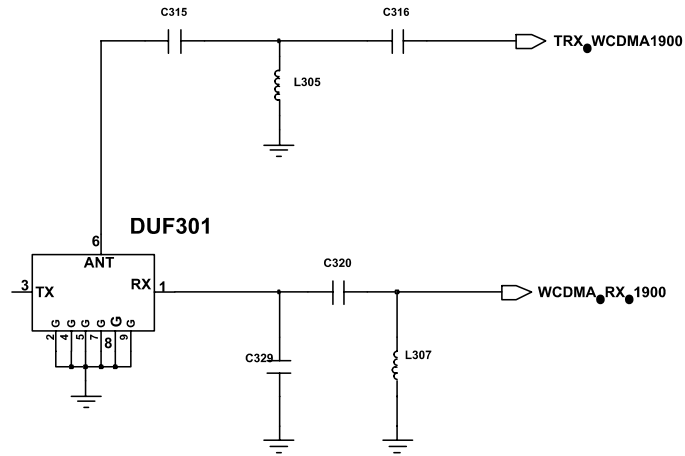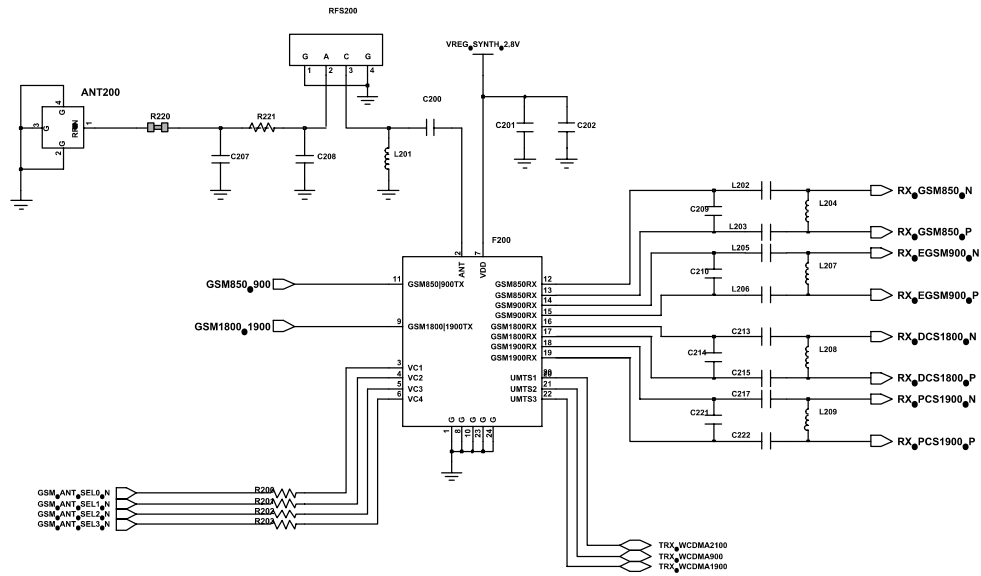


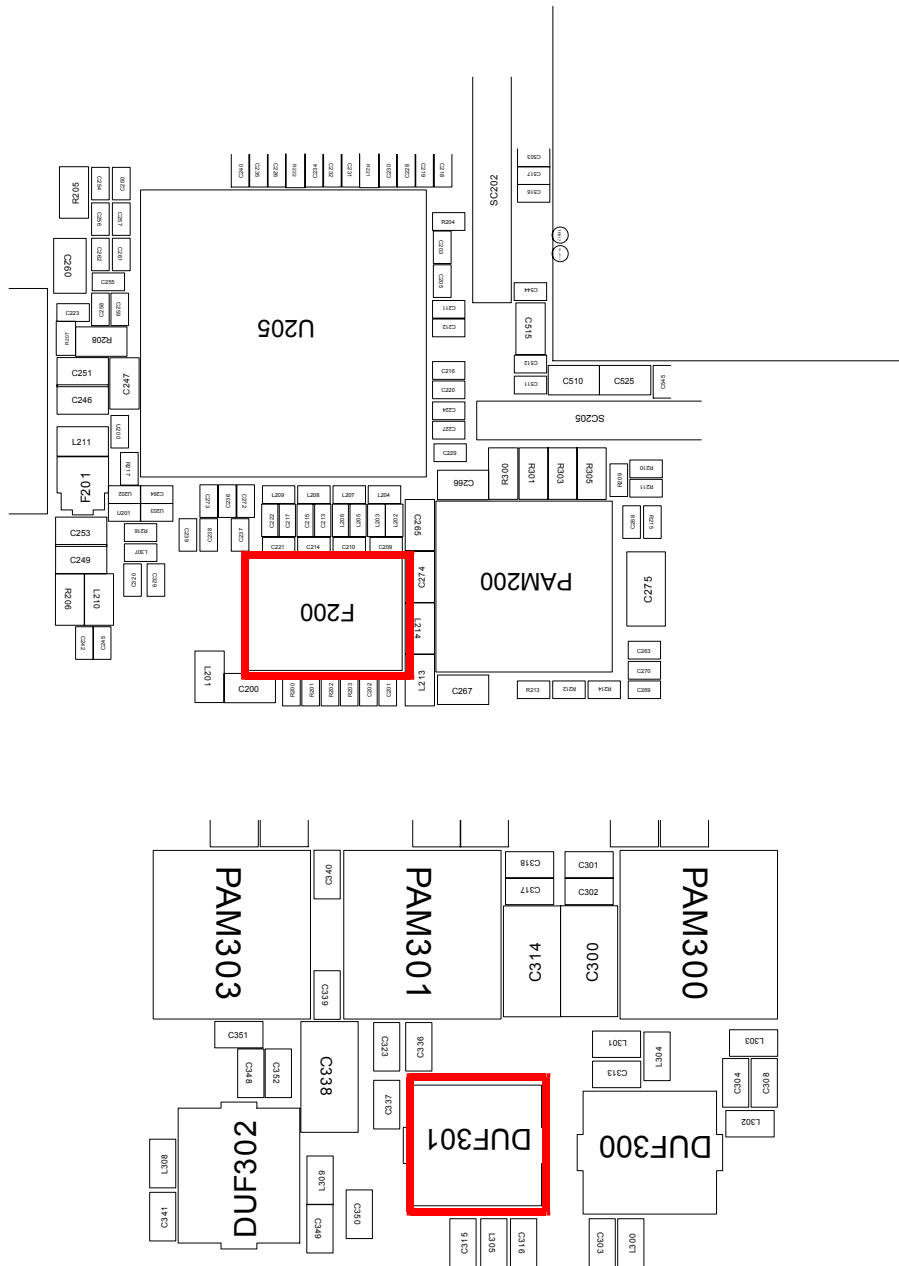


9-19. WCDMA 1900 Transmitter

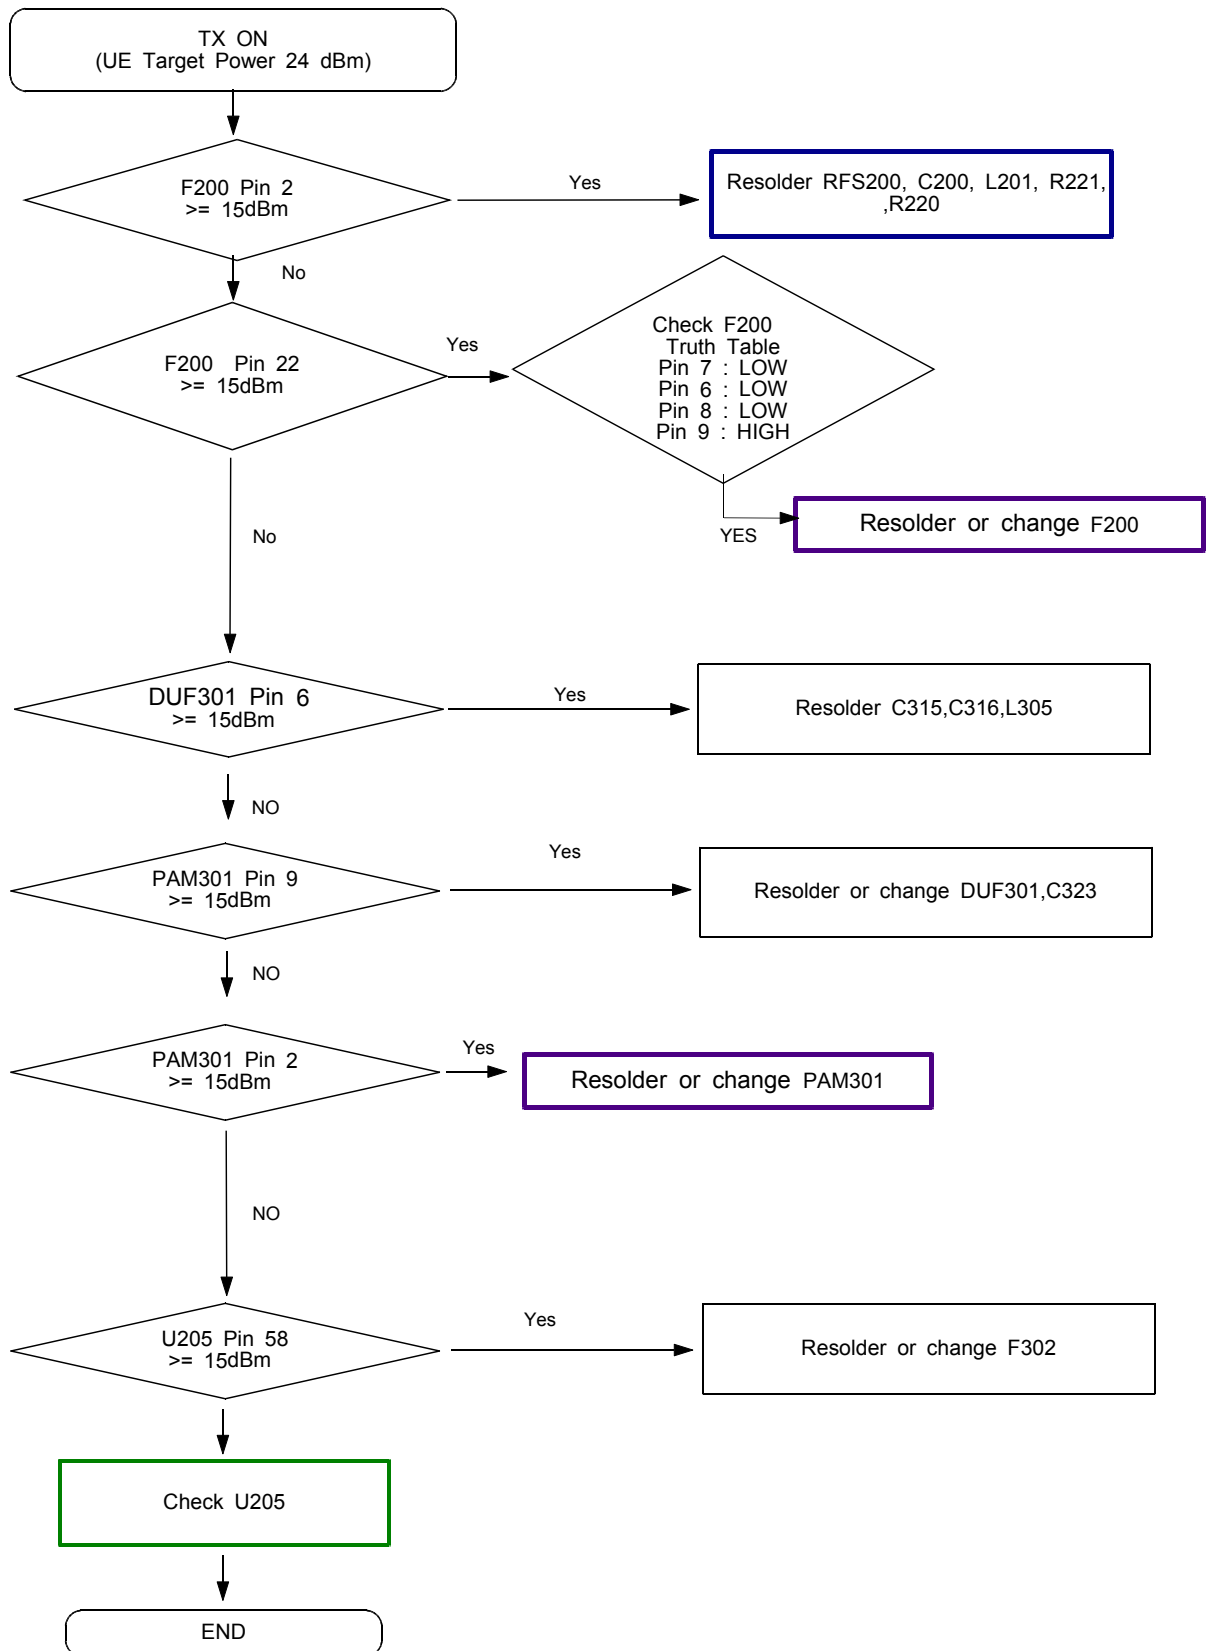


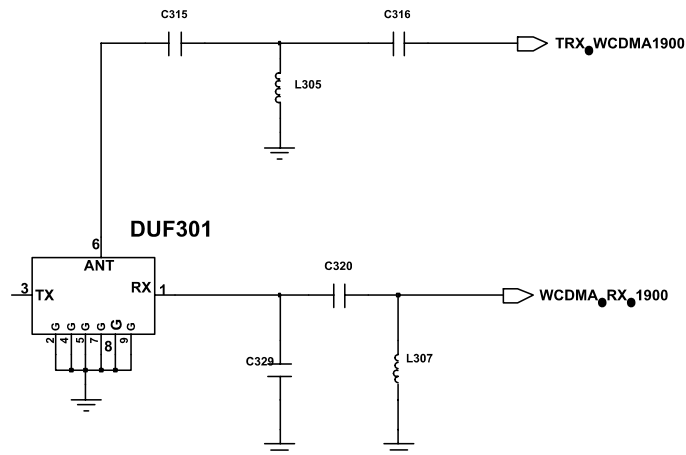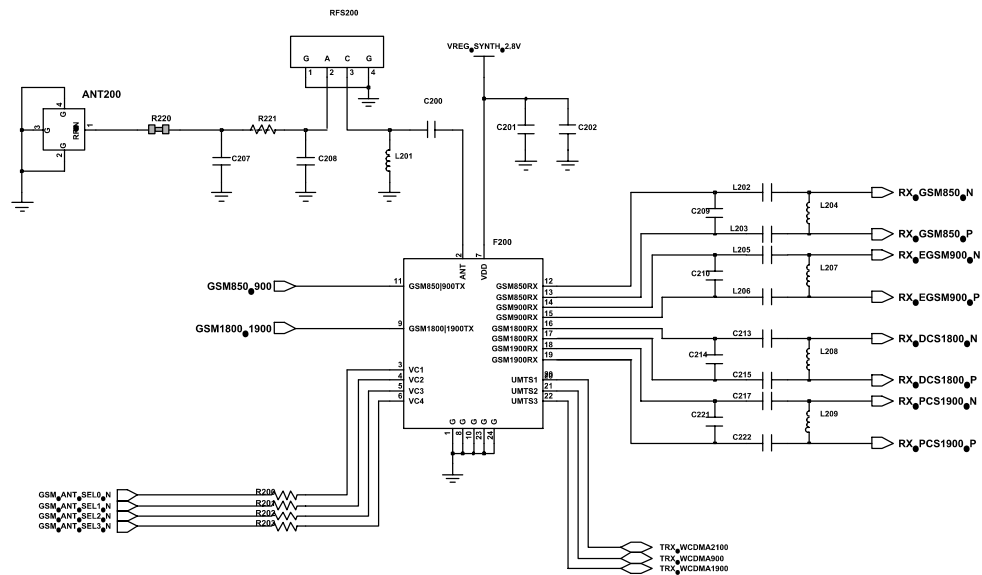


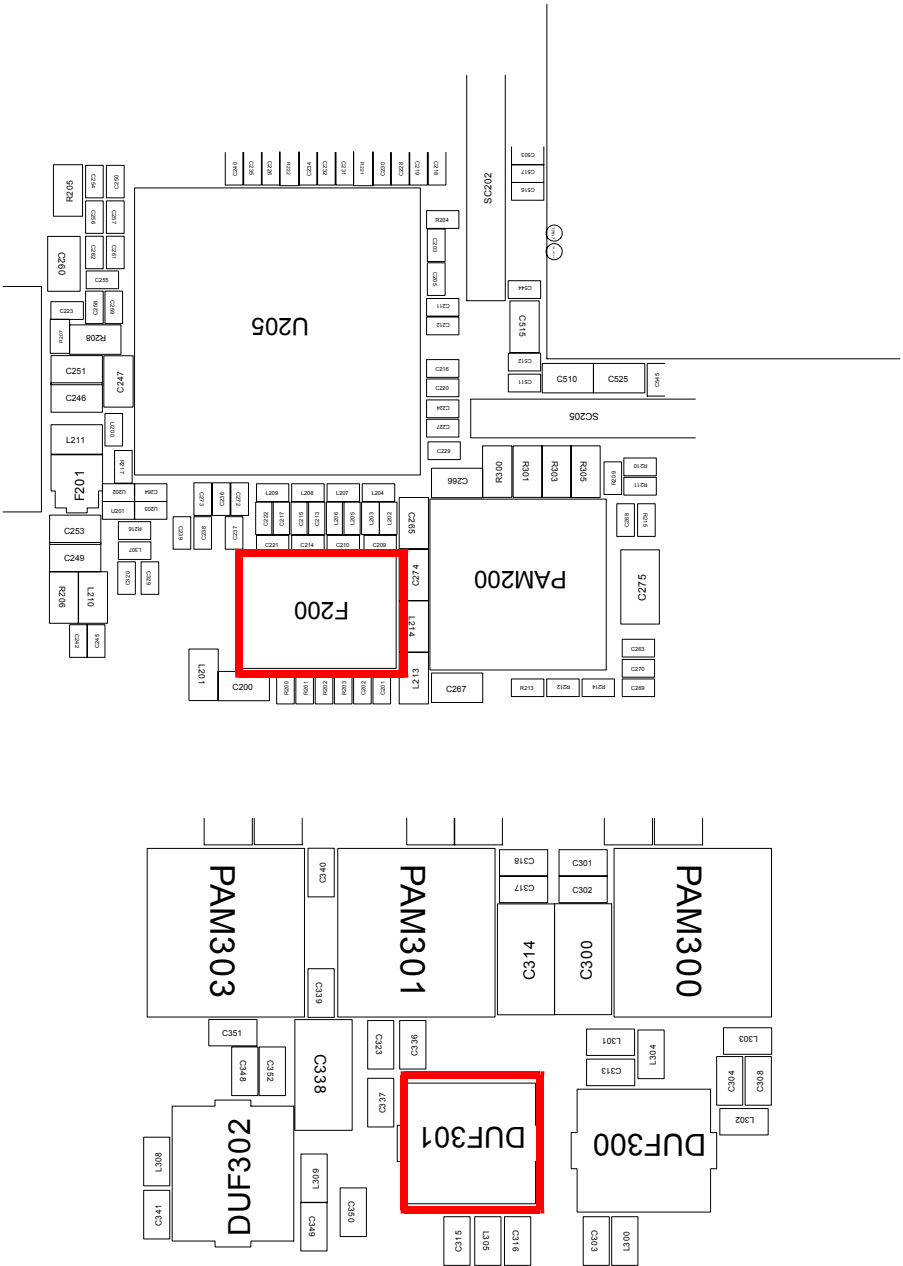


9-20. WCDMA 900 Receiver

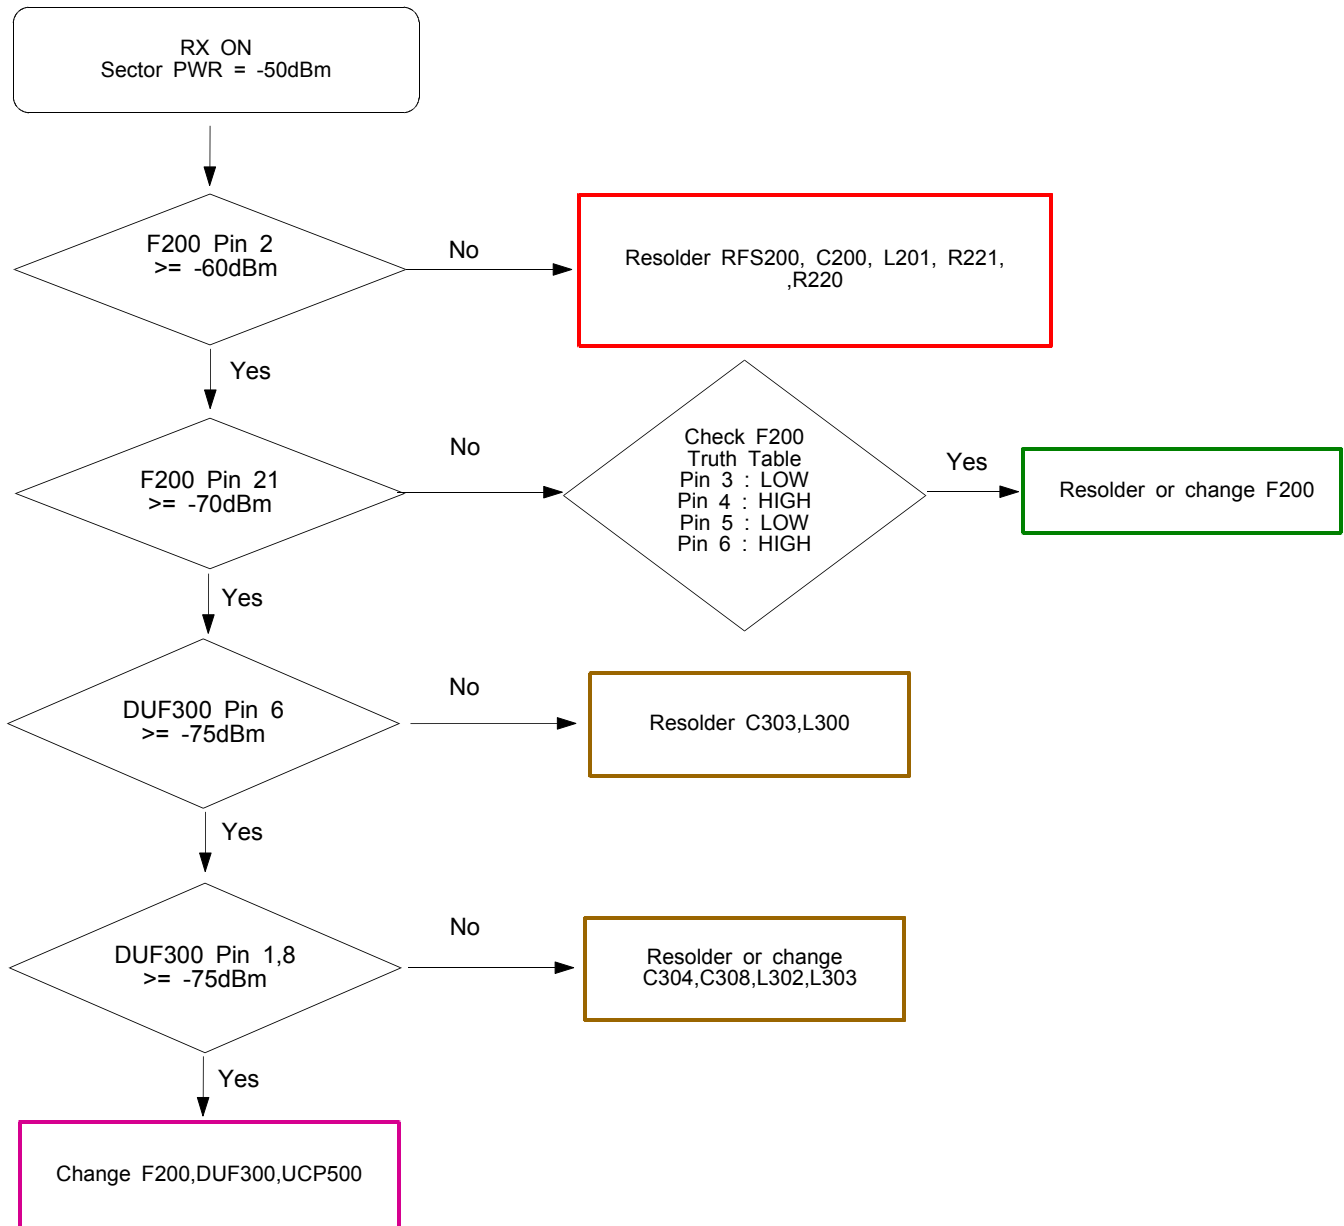


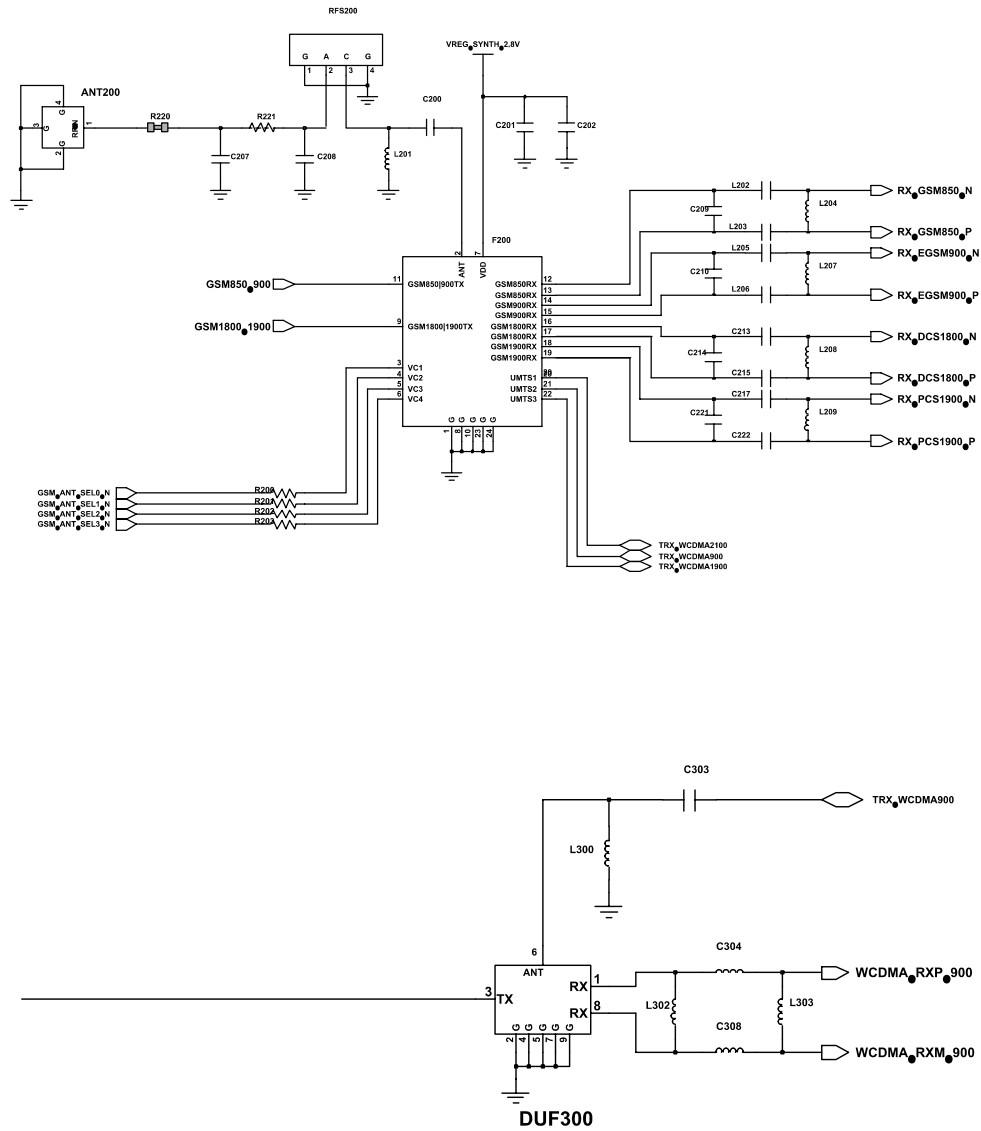


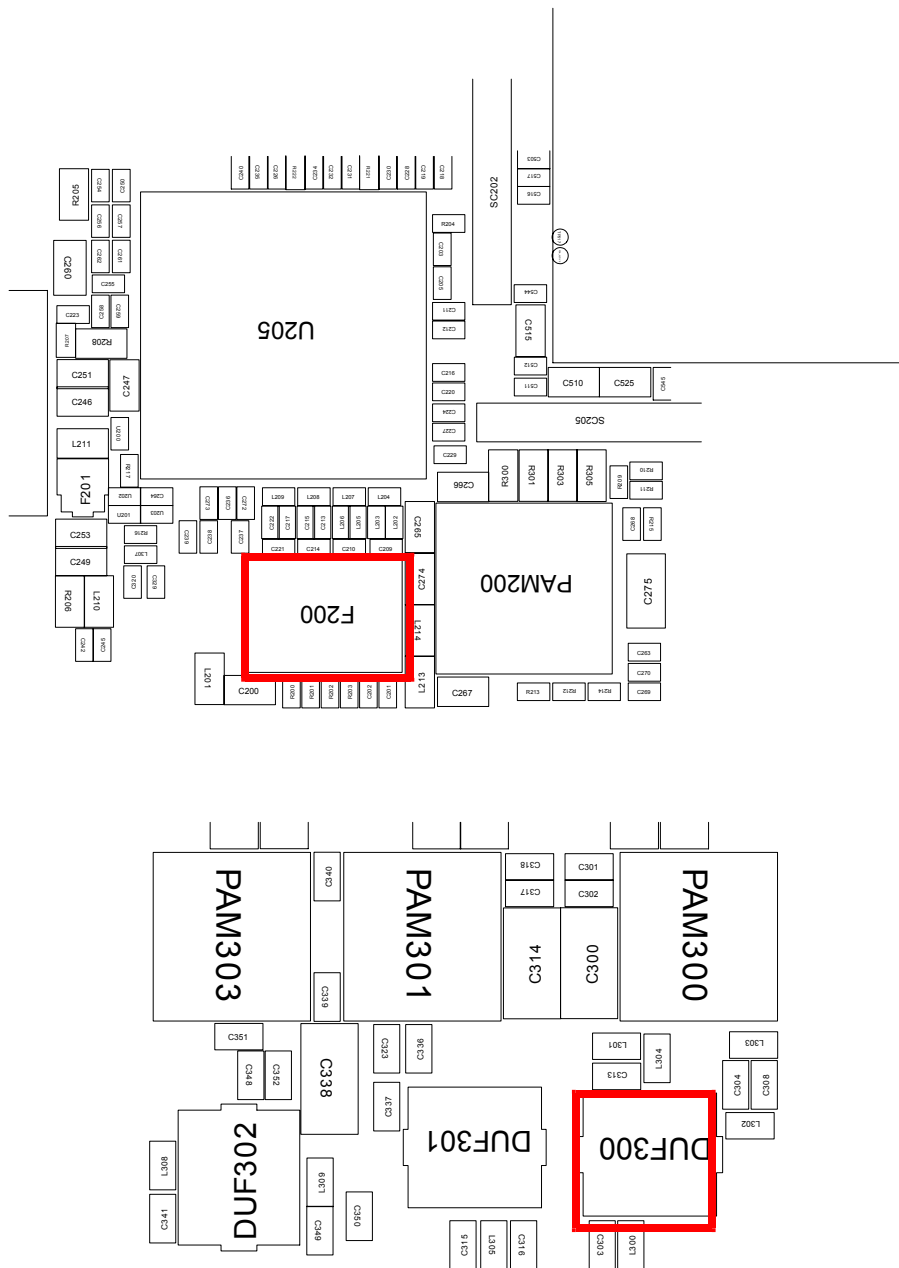

9-21. WCDMA 900 Transmitter

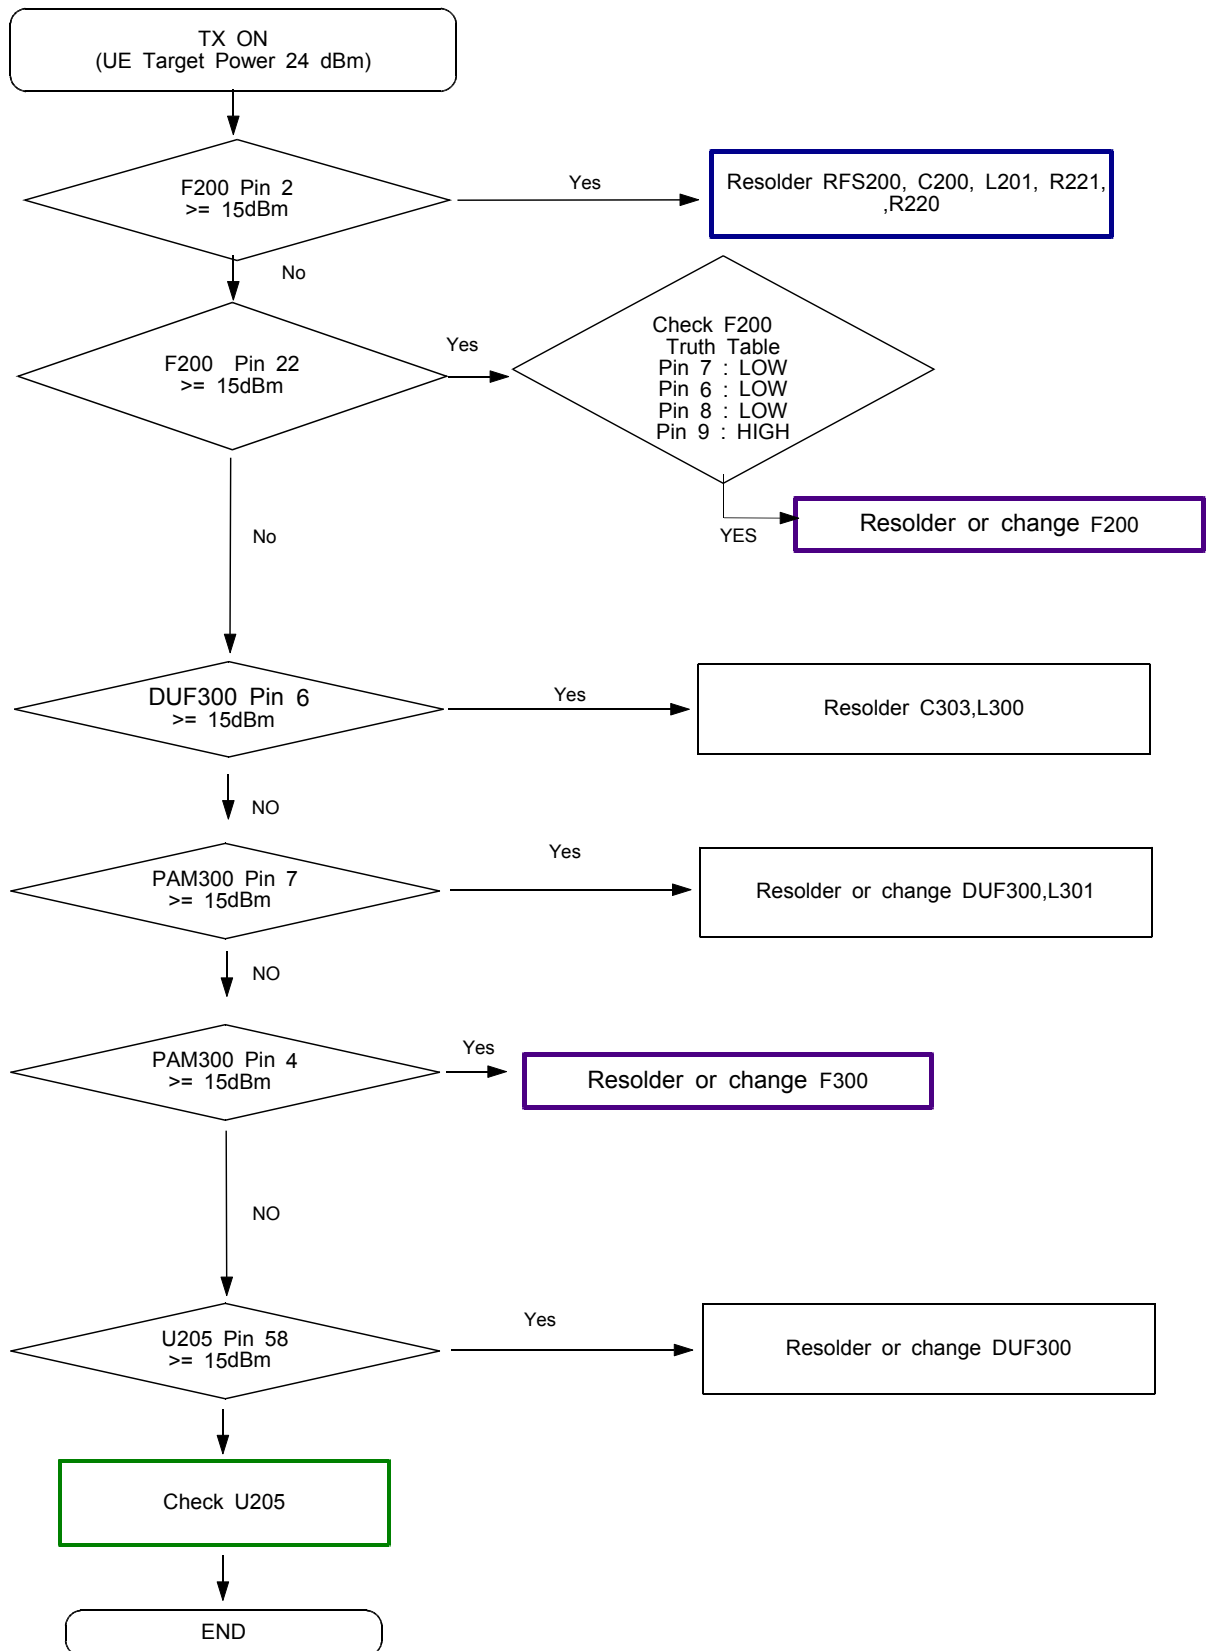


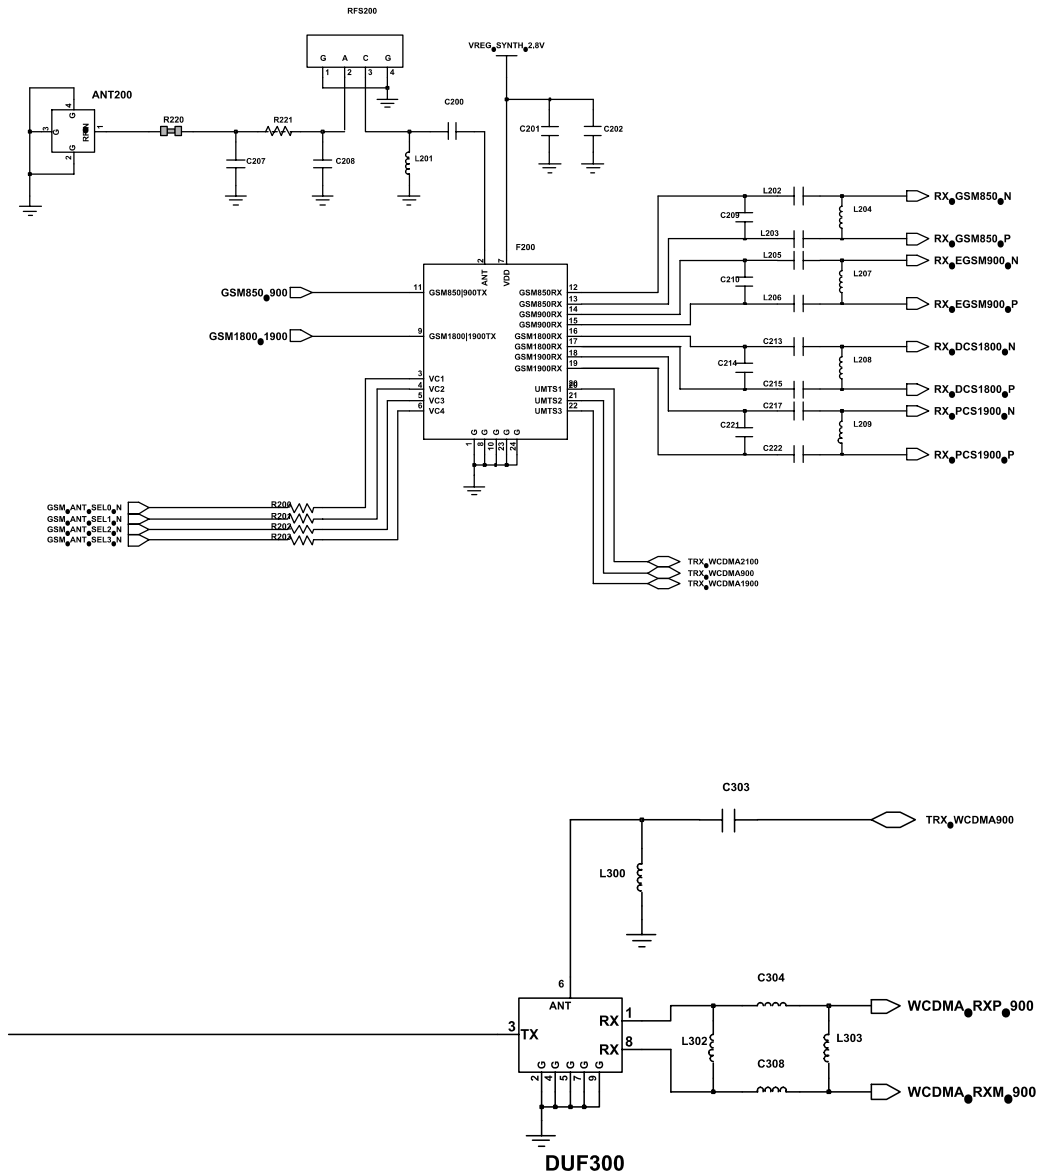

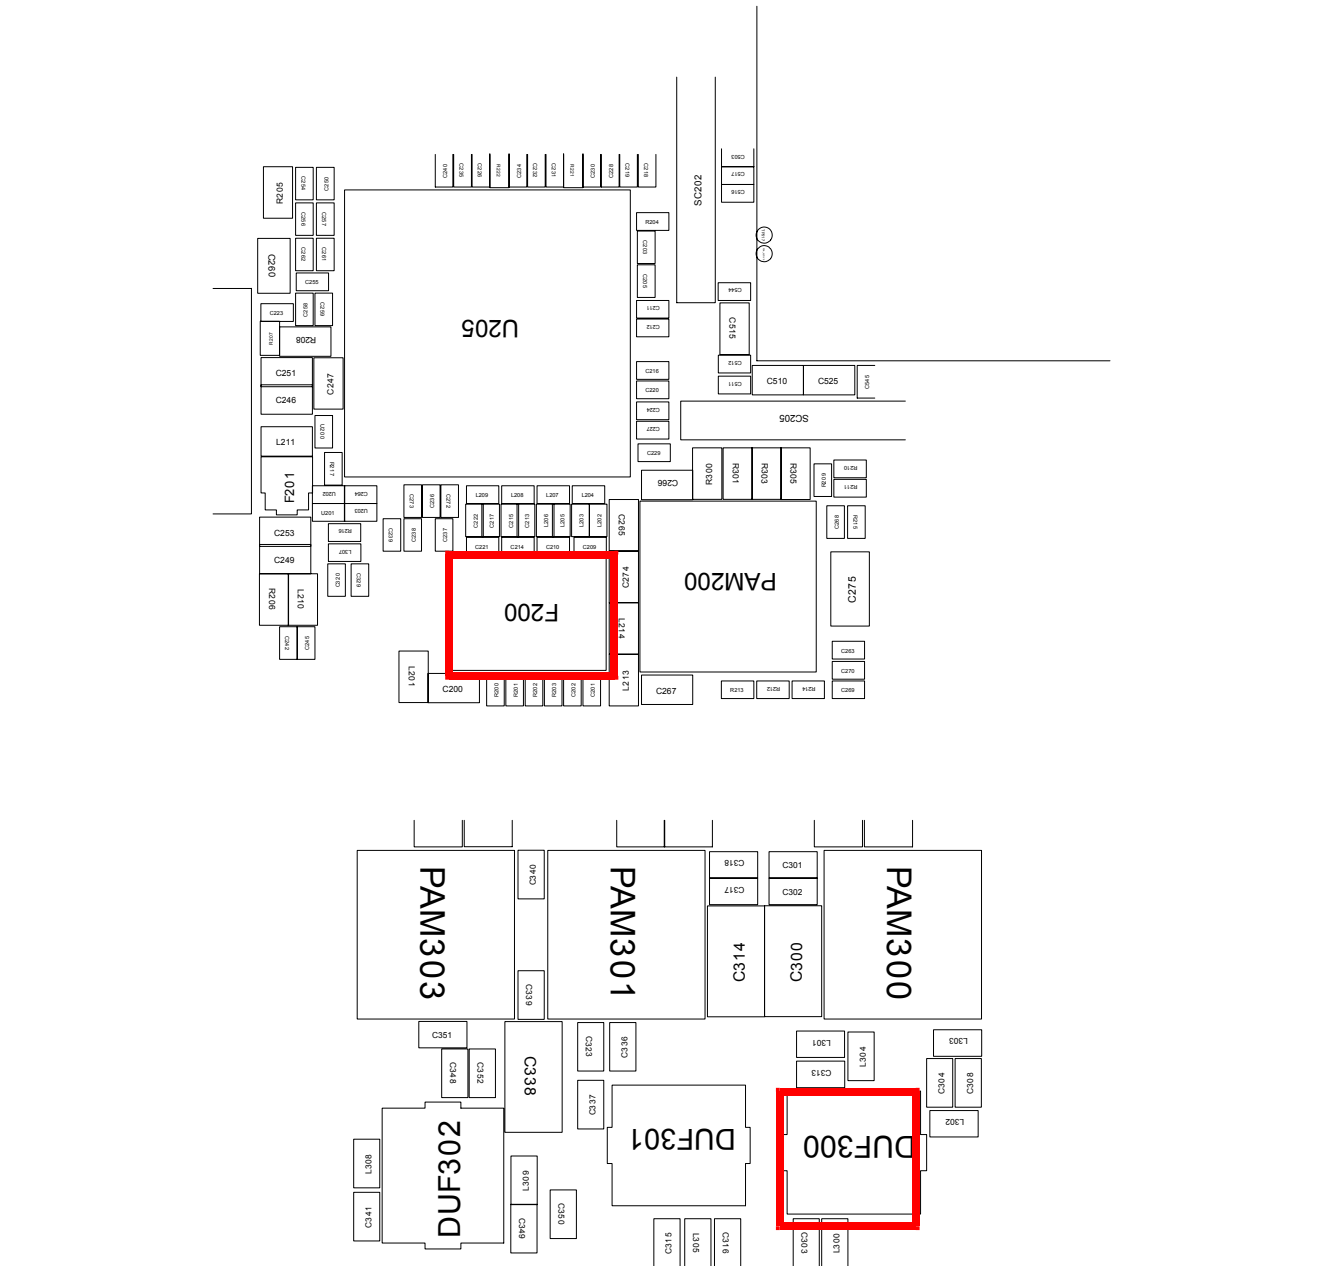

7. Block Diagrams

7-1. Block Diagram

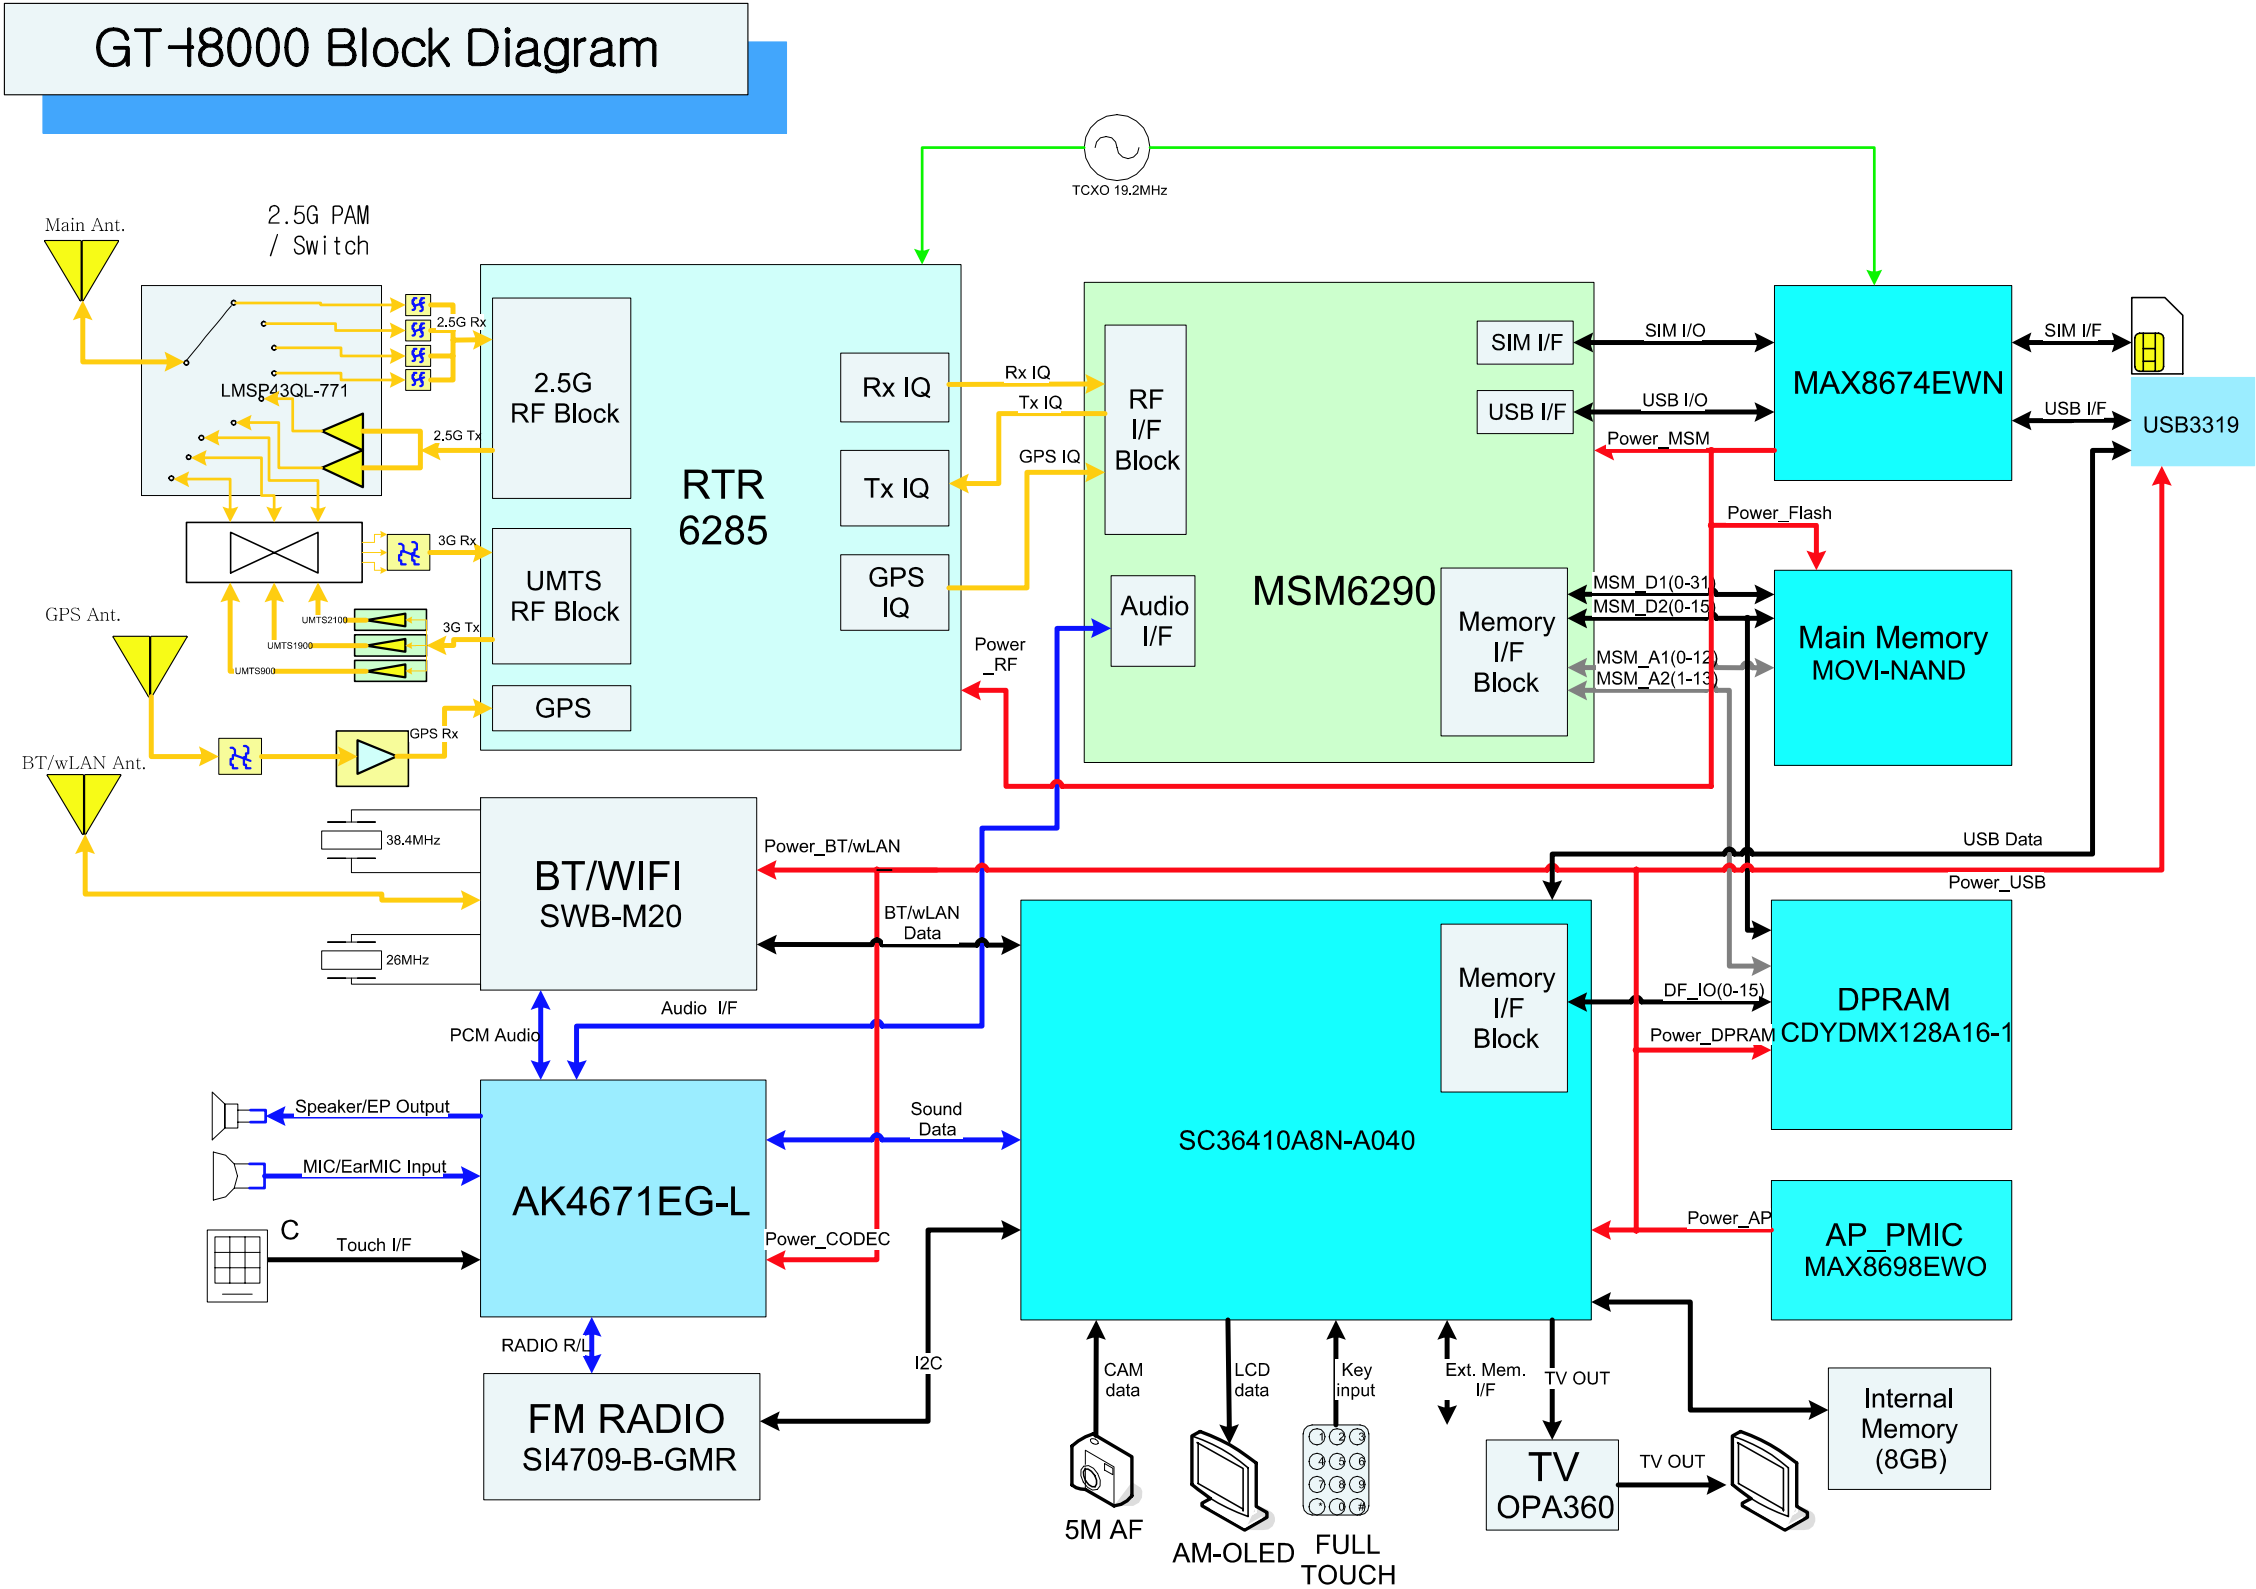

8. PCB Diagrams

