



Test Instruction Repair Instruction Electrical/ -Electrical

Applicable for K660i

1	General	2
2	Test flow	2
2.1	Software Update	2
2.1.1	Verify Software Version	2
2.1.2	Update Software Version	2
3	Test Preparations	3
3.1	RF Test Fixture (Conducted Test Method)	3
3.2	RF Coupler (Radiated Test Method)	4
4	Go/No Go Test	5
4.1	SERP GNG	5
5	Calibration	6
5.1	Flashing the Test Program (ITP) into the Mobile	6
5.2	Calibration Instructions	6
5.3	Updating the Commercial Software into the Mobile after Calibration	7
6	Service Tests	7
6.1.1	Main Display Test	7
6.1.2	LED/Illumination Test	7
6.1.3	Keyboard Test	7
6.1.4	Speaker Test	8
6.1.5	Earphone Test	8
6.1.6	Microphone Test	8
6.1.7	Vibrator Test	8
6.1.8	Camera Test	8
6.1.9	Video Camera Test	9
6.1.10	Memory stick test	9
6.1.11	FM Radio Test	9
6.1.12	Real Time Clock Test	9
6.1.13	Total Call Time test	10
6.1.14	Security	10
7	Manual Tests	10
7.1	On The Air Call To Mobile	10
7.2	Bluetooth Test	10
7.3	System Connector Test	11
8	Revision History	11



1 General

This document describes the process for functionally testing a mobile at the Electrical repair level. Mobiles repaired at the Electrical repair level must have all Mechanical and Electrical level tests performed and must pass without error to be considered a functional unit. If there are any failures, repair the mobile according to the Mechanical and the Electrical Troubleshooting Guides.

2 Test flow

If the phone passes these tests without any failures, it is OK to return it to the customer.

If there are any failures, the phone must be repaired according to the troubleshooting guide or sent to a higher repair level.

2.1 Software Update

Update to latest signalling software and run the service activities software from EMMA III.

2.1.1 Verify Software Version

NOTE! Remove the SIM-card before testing.

To verify if the phone needs new software, you have to check the Software Version in the phone. Current Software Versions are checked through the following steps:

1. Start up the phone.
2. Enter the Service Tests Menu by pressing the sequence **➡*⬅⬅*⬅*** with the navigate buttons and the ***** on the keypad.
3. Select Service info.
4. Select SW Information.
5. Check the file revisions on the display.
6. Press OK to return to the Service info menu.

2.1.2 Update Software Version

Update the software in the phone by doing the following steps:

1. Make sure that the phone's battery is fully charged or use a battery eliminator. Connect correct flash cable and interface according to the Installation instruction.
2. Logon to the EMMA III server, and follow the instructions


3 Test Preparations

3.1 RF Test Fixture (Conducted Test Method)

1. Remove the antenna cover plug according to the Working Instructions, Mechanical.
2. Insert a test SIM, install a fully charged standard battery and battery cover to the mobile.

NOTE! A Battery Eliminator (Dummy Battery) may be used in place of a standard fully charged battery if you use a power supply that meets the requirements that are documented in the Electrical Equipment List.


3. Attach the RF Probe and RF Probe Holder to the mobile according to the picture.

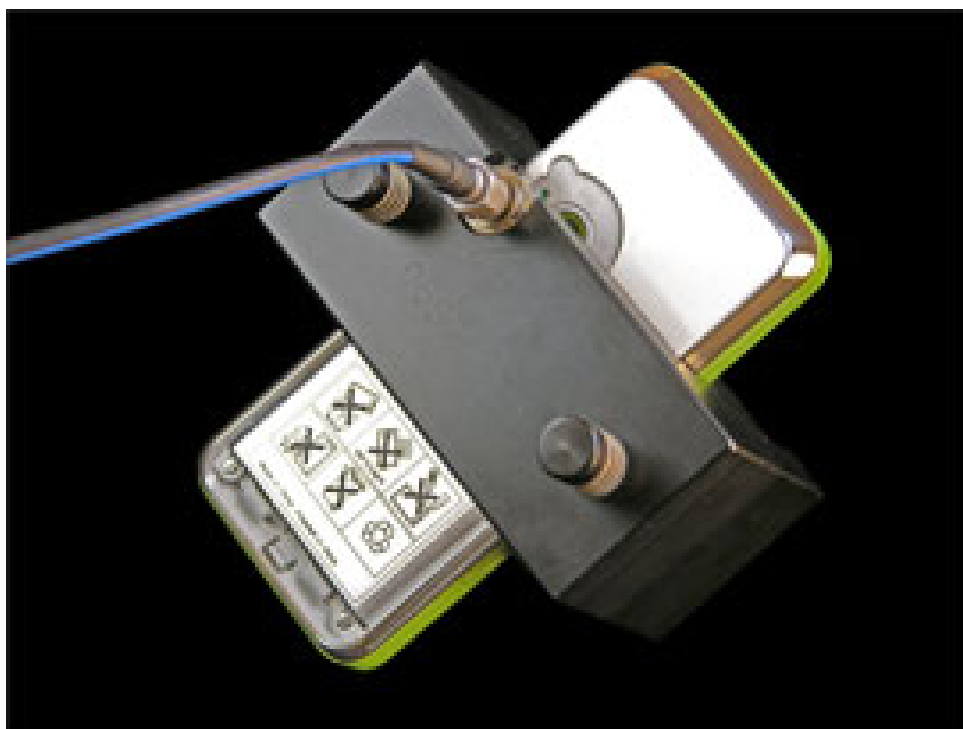



3.2 RF Coupler (Radiated Test Method)

1. Insert a test USIM that is compatible with your Test Instrument and a fully charged standard battery. It is very important that a standard fully charged battery is used; otherwise, there is a risk for wrong test results.
2. Position the phone in the coupler according to the picture.

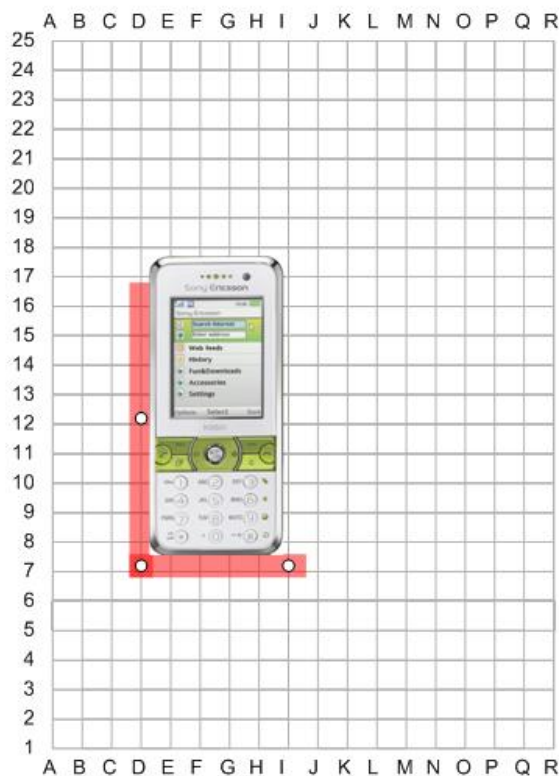

4 Go/No Go Test

This test verifies that the radio parameters of a mobile fulfil the GSM specifications. A mobile is considered good if all measurements pass. All results will be presented on the screen and can be printed out if a printer is available.

4.1 SERP GNG

NOTE! For complete and detailed user instructions, see the SERP Users Manual that gets placed on the Desktop after SERP is installed.

1. On a PC with SERP installed, start the SERP program by double clicking on the **"RepairManager.exe"** icon on the desktop.
2. Click on **"Settings"** in the SERP Window and verify that the test instrument and the GPIB address correspond.
3. Click on the **"Station Setup"** tab and verify that the **"cable"** (or the **coupler**) settings are selected under the **"RF Connection-GoNogo"** Drop down window. Click on **"Apply"** and then the **"OK"** button.
4. Enter (or scan) the IMEI number of the mobile to be tested into the **"Enter IMEI"** box in the SERP Window and click on the **"Load"** button. The appropriate phone model will be displayed.
5. In the SERP window, check the **"Final GoNogo Test"** box only. Click on the **"Start Test"** button and follow the instructions. (Power on the phone when the **"Call Connection"** dialog box appears.)

5 Calibration

NOTE! A Test Program must be loaded in the handset before performing the calibration routine. After calibration the handsets must be re-customized with signalling SW.

5.1 Flashing the Test Program (ITP) into the Mobile

NOTE! Flashing instructions may vary depending on the interface used.

Flash the Test Program software into the mobile by doing the following:

1. Attach a fully charged battery to the mobile.
2. Open the EMMA III application and log in.
3. Ensure the mobile is powered off.
4. While holding the “C” button, connect the mobile to the USB Flash cable. (Once the USB symbol appears in the lower left corner of the EMMA III window you may release the “C” button.)
5. Select the “K660i” ITP protocol and follow the on screen instructions.

NOTE! Under most circumstances the display on the mobile will be blank when the Test Program is installed.

5.2 Calibration Instructions

NOTE! For complete and detailed user instructions, see the SERP Users Manual that gets placed on the Desktop after SERP is installed.

1. On a PC with SERP installed, start the SERP program by double clicking on the “**RepairManager.exe**” icon on the desktop.
2. Click on the “**Settings**” button in the SERP Window to verify the test instrument, GPIB address and the COM Port matches the SERP settings. Click on “**Apply**” and then the “**OK**” button.
3. Enter (or scan) the IMEI number of the mobile to be calibrated into the “**Enter IMEI**” box of the SERP Window and click on the “**Load**” button.
4. In the SERP window, check the “**Calibration**” box only.
5. Connect the mobile to the test instrument using the RF fixture (refer to section 6.1.1).
6. Connect the Sony Ericsson Programming Interface Cable to the mobile’s system connector.
7. Click on the “**Start Test**” button in the SERP window to start the Calibration routine (mobile will automatically turn on).
8. Monitor the progress of the calibration routine by viewing the information presented in the “**Test Manager**” window.



9. If a calibration routine fails, troubleshoot according to the K660i Electrical Troubleshooting Guide.
10. After successful calibration, reinstall the antenna cover plug. Refer to the Working Instruction, Mechanical.

5.3 Updating the Commercial Software into the Mobile after Calibration

To be able to use the handset after calibration requires going through the Customization process which reloads the appropriate signalling code for the desired operator. Refer to the K660i Build Swap Customization Instruction document for further details on the Customization process.

6 Service Tests

6.1.1 Main Display Test

To verify the display:

1. Select "Main display" from the "Service Tests" menu.
2. The display toggles between four different test patterns. Make sure that there are no dots missing and that the colours and contrast is OK.
3. Press the "Centre Navi" key to go back to the service tests menu.

6.1.2 LED/Illumination Test

To verify that the backlight the LEDS are OK:

1. Select "LED/illumination" from the "Service Tests" menu.
2. Check that the backlight in the display and the keyboard is toggle between on and off.
3. Press the "Ok" key to go back to the service tests menu.

6.1.3 Keyboard Test

To verify that all the keys are working:

1. Select "Keyboard" from the "Service Tests".
2. Press all keys on the keypads, the camera key and up/down keys on the right side and the on/off button on the top. If they are ok a text feedback is displayed showing the information which key was pressed. All keys should be tested.
3. If you stop pressing keys the phone will return to the service test menu.



6.1.4 Speaker Test

Warning! Do NOT hold the phone to your ear while performing this test.

To verify the Speaker function:

1. Select "Speaker" from the "Service Tests" menu.
2. Adjust the volume on the right side of the phone and make sure that the speaker is working properly.
3. Press the "Ok" key to go back to the service tests menu.

6.1.5 Earphone Test

To verify the Earphone function:

1. Select "Earphone" from the "Service Tests" menu.
2. Adjust the volume on the right side of the phone and make sure that the earphone is working properly.
3. Press the "Ok" key to go back to the service tests menu.

6.1.6 Microphone Test

This test is intended to test the microphone. Therefore, the earphone should be tested before this test is entered.

1. Select "Microphone" from the "Service Tests" menu.
2. The phone will start to record and after that the sound is played in the speaker. Make sure that the record sounds have a loud and clear sound.
3. After the sound has been replayed the test case will return to "Service Test" menu.

6.1.7 Vibrator Test

To verify the vibrator function:

1. Select "Vibrator" from the "Service Tests" menu.
2. Press any key (except the centre Navi Key) and the vibrator will vibrate 3 times.
3. Press the "Ok" key to go back to the service tests menu.

6.1.8 Camera Test

To verify the camera functionality:

1. Select Camera from the "Service Tests" menu.



2. The camera function will now start and are visible in the display. Make sure that the contrast and light is OK.
3. Press the "back" key to go back to the service tests menu.

6.1.9 Video Camera Test

To verify the Video call camera functionality:

1. Select Video call camera from the "Service Tests" menu.
2. The video call camera function will now start and is visible in the display, then make sure that the contrast and light is OK.
3. Press the "back" key to go back to the service tests menu.

6.1.10 Memory stick test

This test is to verify if the communication to the memory stick is working.

1. Insert a memory stick in to the memory stick holder on the top of the phone.
2. Select "Memory Stick" from the "Service tests" menu.
3. Make sure that the phone will detect the memory stick.
4. Remove the memory stick from the holder.
5. Press the "Ok" key to go back to the service tests menu.

6.1.11 FM Radio Test

This test will check if the inbuilt FM radio is working.

Hands free equipment is used in this test.

1. Switch on phone wait until start-up screen appears, select normal mode when "insert SIM card" message appears on the screen then enter test mode sequence.
2. Select "FM radio" from the "Service Tests" menu.

Connect the hands free equipment to the system connector and tune in a well-known FM-Radio channel. Verify that it's possible to switch between different radio channels and that the sound is clear.

3. Press the "Ok" key to go back to the service tests menu.

6.1.12 Real Time Clock Test

This test will check if the built in real time clock works.

1. Select "Real time clock" from the "Service Tests" menu.
After approximately 5 seconds you will get information whether the clock is ok or not.
2. Press the "Ok" key to go back to the service tests menu.



6.1.13 Total Call Time test

This test will show you the Total Call Time of the phone.

1. Select "Total Call Time" from the "Service Tests" menu and you will get information regarding the "Total Call Time" of this phone.
2. Press "Ok" key to return to the service tests menu.

6.1.14 Security

This test will check if the security device keys

1. Select "Security" from the "Service Tests" menu, then select "Device Key Test". After approximately 5 seconds you will get information whether the Security keys are ok.
2. Press the "Ok" key to go back to the service tests menu.

7 Manual Tests

7.1 On The Air Call To Mobile

To verify the function of the speaker, microphone, polyphonic ring signal and volumes button.

1. Insert an operator SIM card and start the phone.
2. Set up a call from another phone to the mobile phone.
3. Answer the phone call.
4. Check that the polyphonic ring signal is working and that the backlight switches on OK.
5. Also check that the quality of the sound both in the mobile phone and the other phone are OK.
6. Press the volume key up and down and check that the volume in the phone is altered.
7. End the call.
8. Check that the ending procedure is OK and that the speech time is displayed.

7.2 Bluetooth Test

To verify that the Bluetooth communication is working:

1. Insert a SIM card, connect a battery and start the unit.
2. Activate the Bluetooth function by entering Connectivity/Bluetooth and turn it on.
3. Set up a link between the phone and another Bluetooth compatible device. If a connection can be established the Bluetooth module is considered working.

7.3 System Connector Test

Hands free equipment and a charger are used in this test, to check the functionality of the System Connector.

1. Insert a SIM card, connect a battery and start the unit.
2. Connect the Hands free equipment to the system connector and set up a call and listen if you can speak/hear in the hands free set.
3. Connect the charger to the system connector and see if the phone starts to charge and if the charging is indicated in the display.

8 Revision History

Rev.	Date	Changes / Comments
1	2008-02-29	First Release
2.1	2008-03-07	Chapter 3.2 Added
3	2008-04-09	Revision updated
4	2008-04-18	Page 4 update